



Rasmussens

Add Lasting Value To Your Home ♦ Traditional Designs In Solid Wood

Profiles Catalogue









INDEX


(Click Titles To Navigate) **Section**

Applied Mouldings----	4
Applied Mouldings----	5
Backbands-----	5
Baseboard Corners----	5
Baseboards-----	2
Basecaps-----	2
Bullnose-----	1
Cabinet Mouldings----	5
Cap Mouldings-----	5
Casings-----	1
Chair Rails-----	4
Coves-----	4
Crowns-----	3
Door Stops-----	1
Drip Caps-----	9
Flooring-----	6
Panel Mouldings-----	6
Picture Frame Stock--	8
Plinth Blocks-----	7
Reducer-----	7
Rosettes-----	7
Sidings-----	9
Step Blocks(crown)---	8
V-Joint-----	6
Wainscotting-----	8
Wainscotting Base-----	8
Wainscotting Cap-----	8
Window Sills-----	8

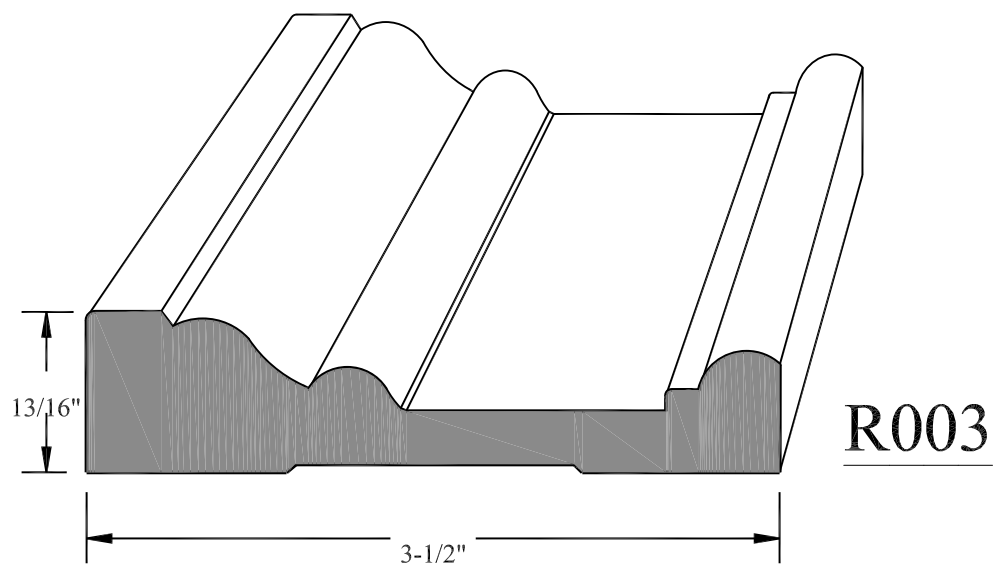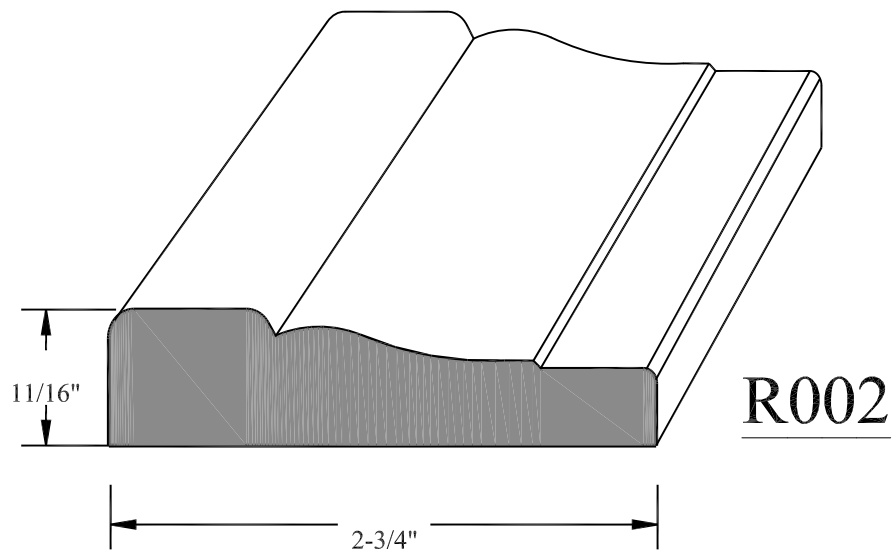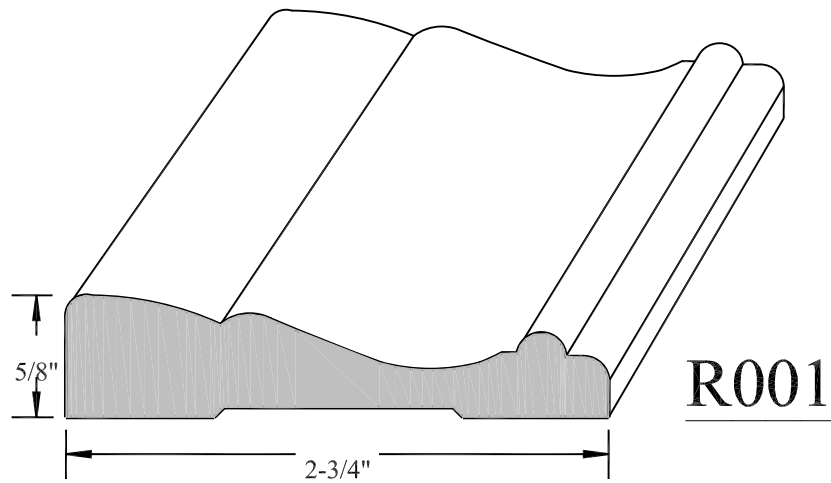


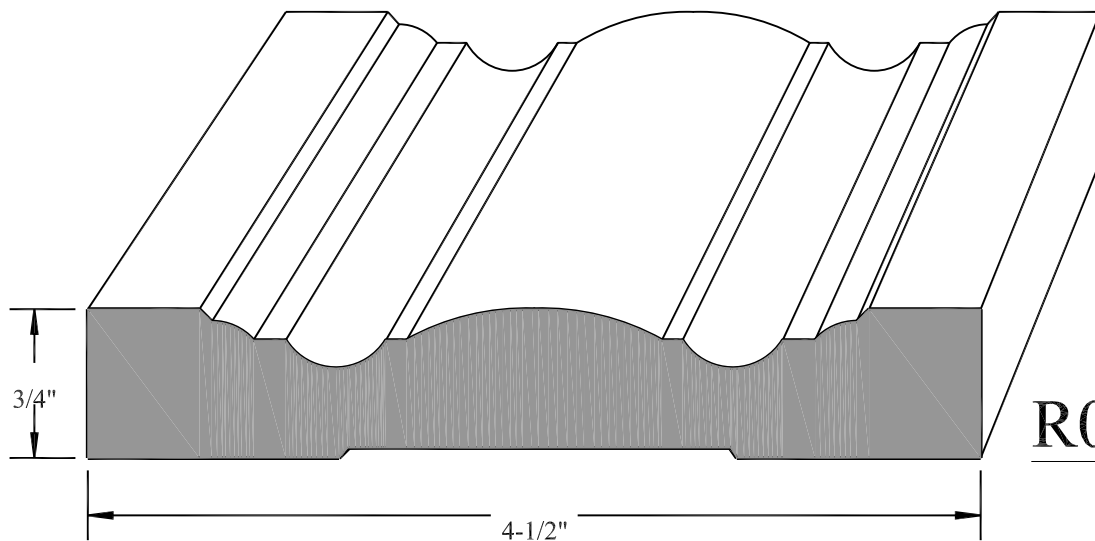

R004-412

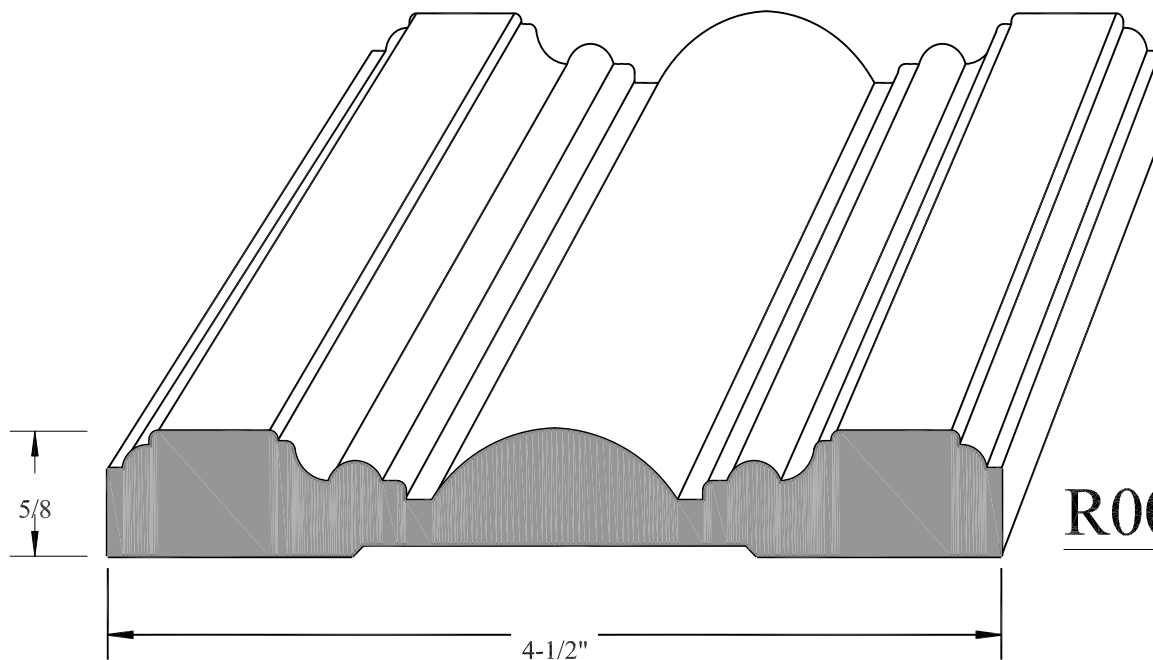


R005

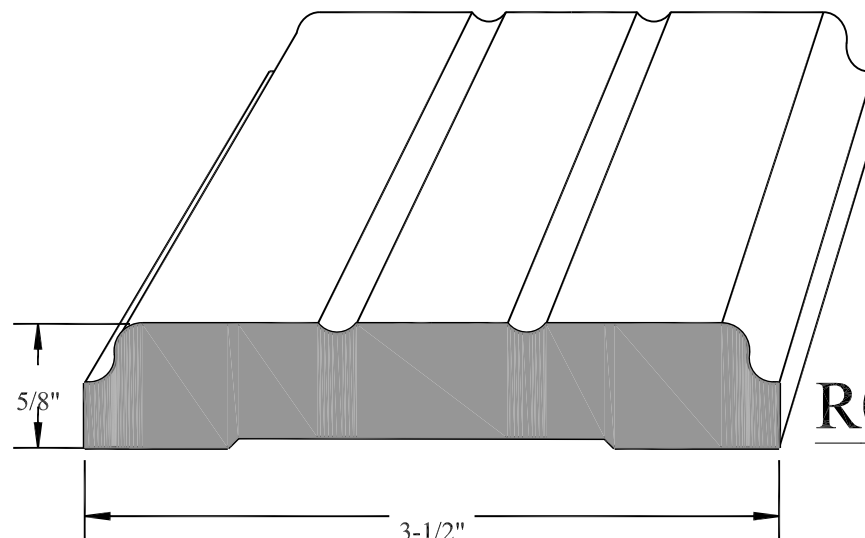


R006-312




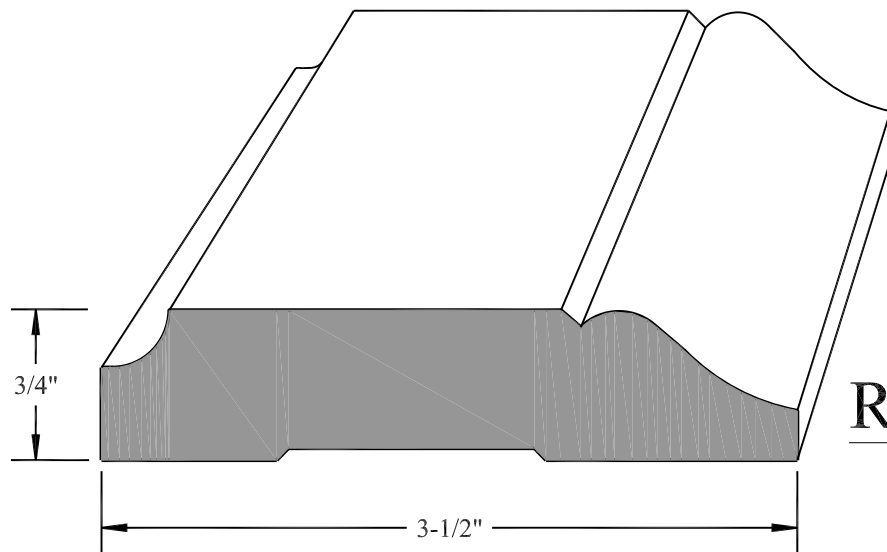

R007-312

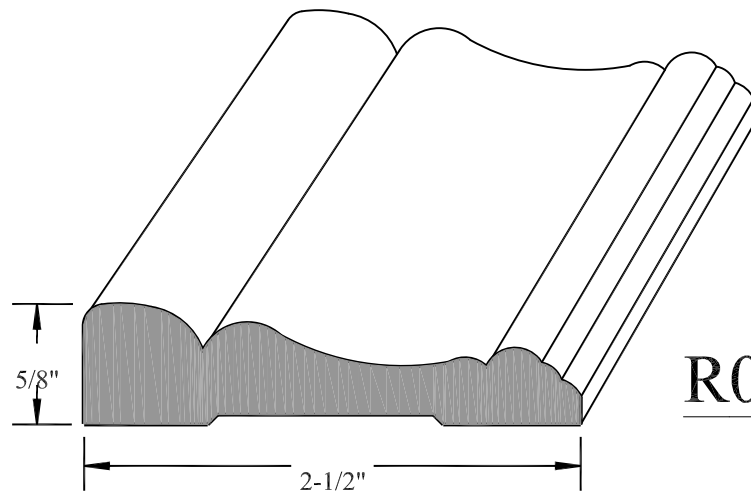


R008

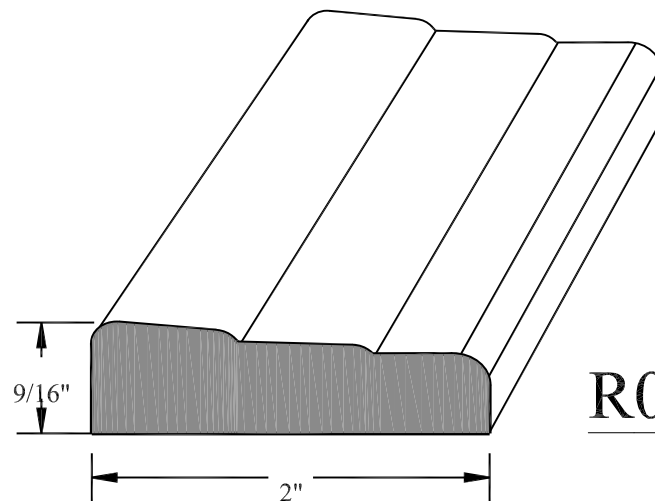


R009




Add Lasting Value To Your Home • Traditional Designs In Solid Wood

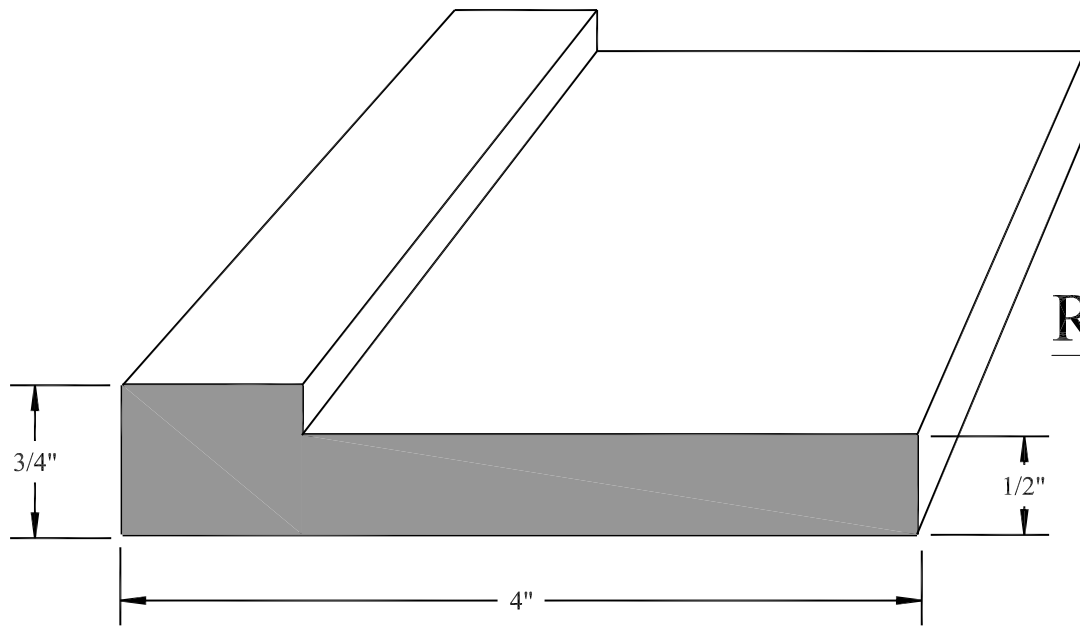

R010-400

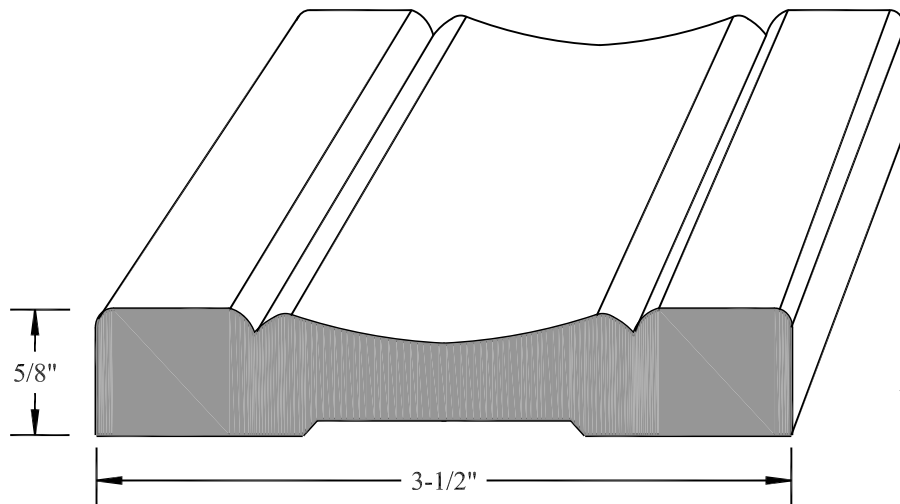


R011

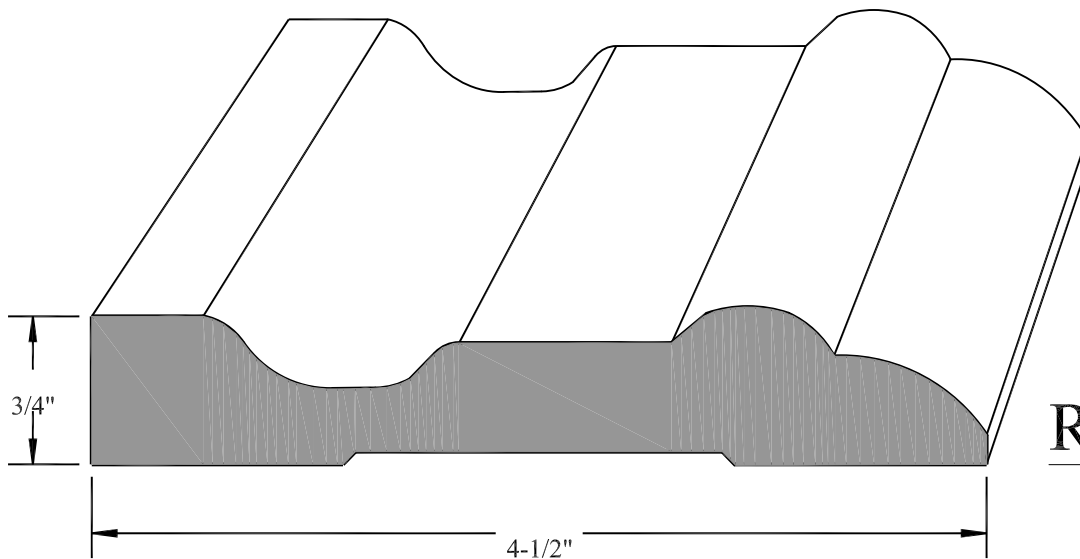


R012-412








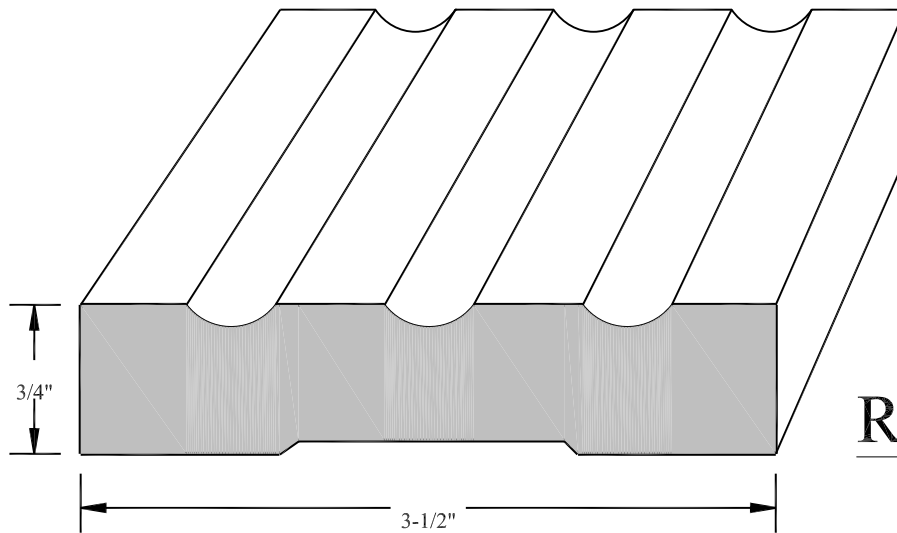



R013-312

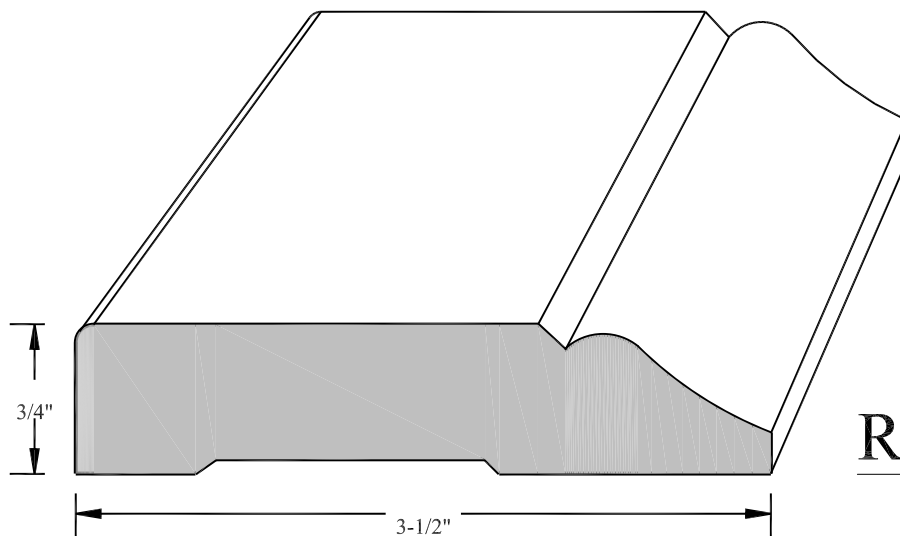


R014-312

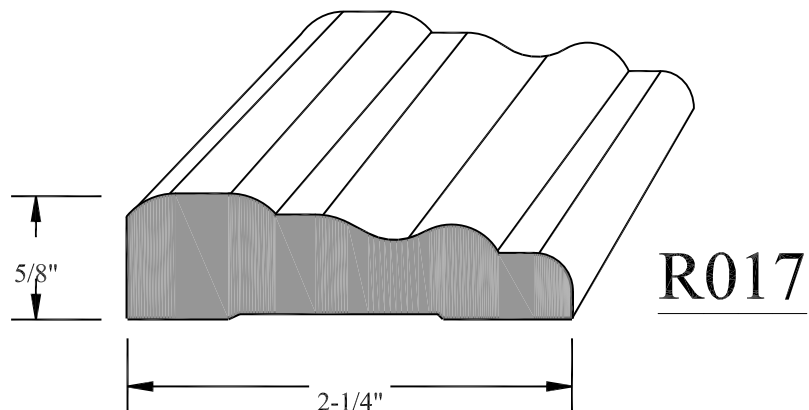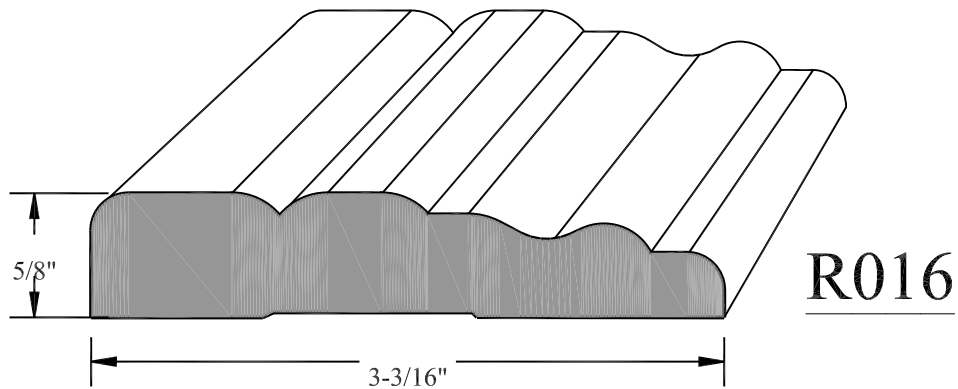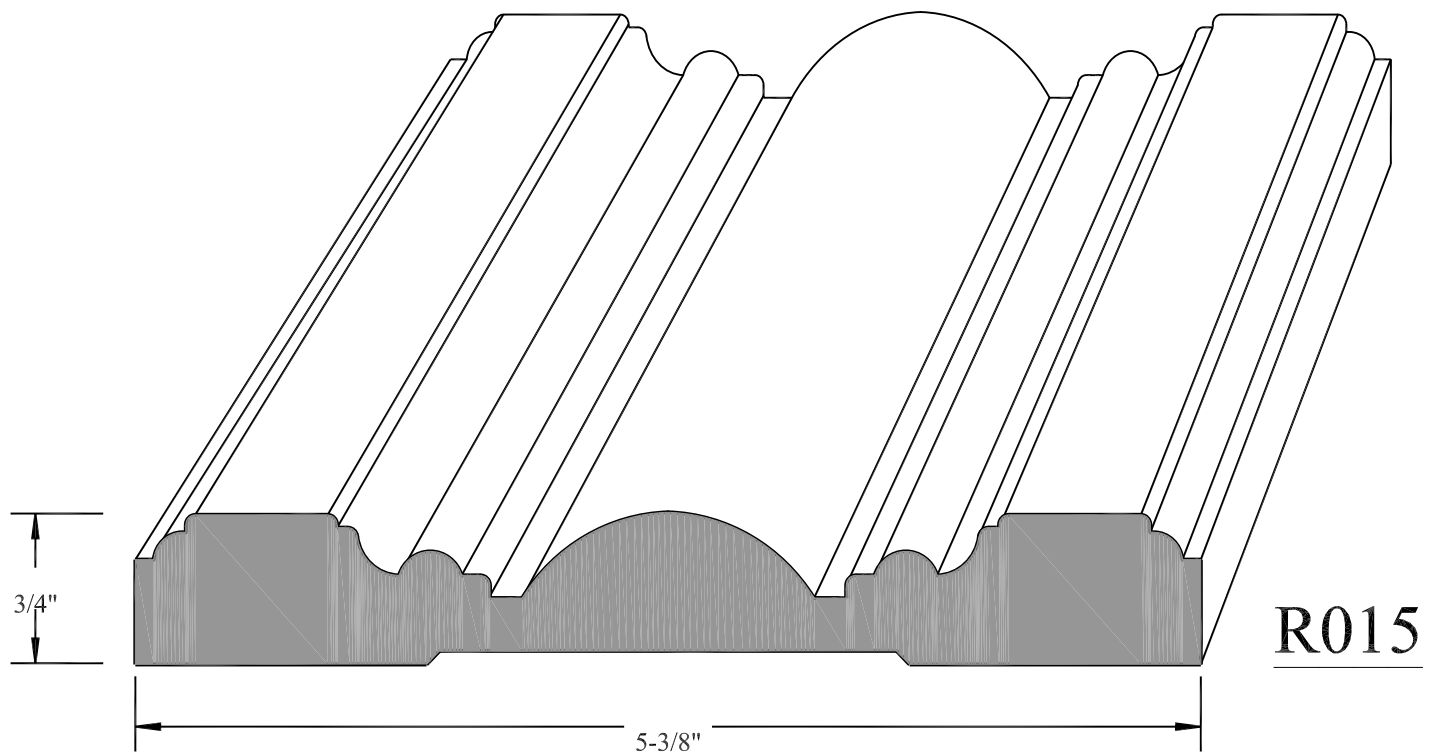

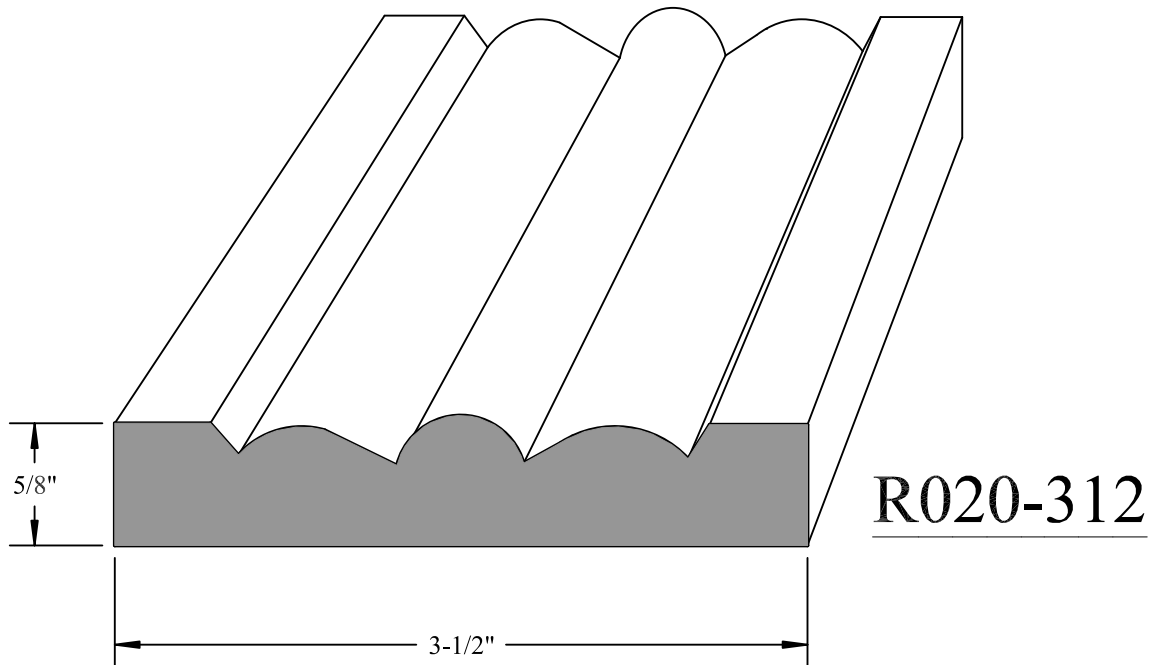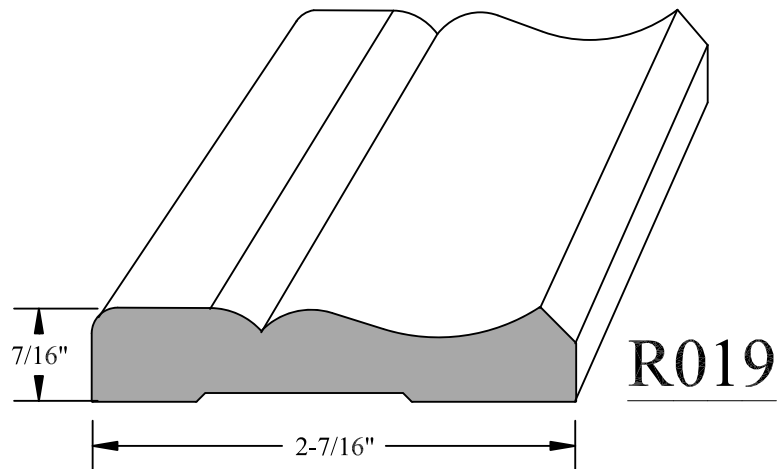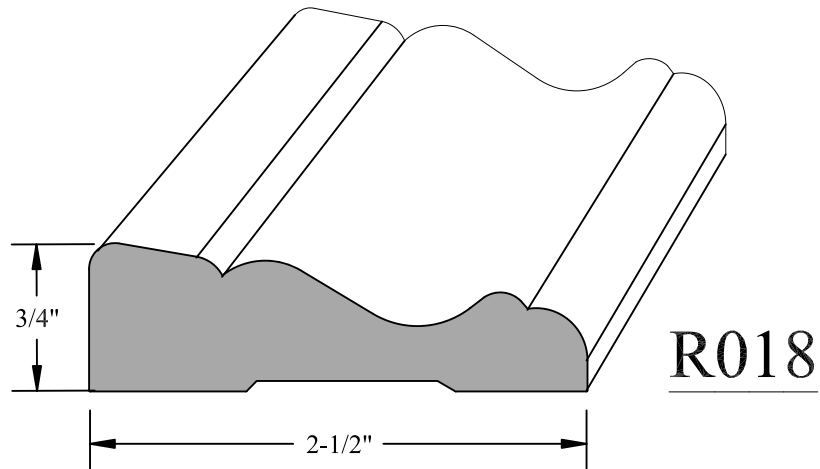

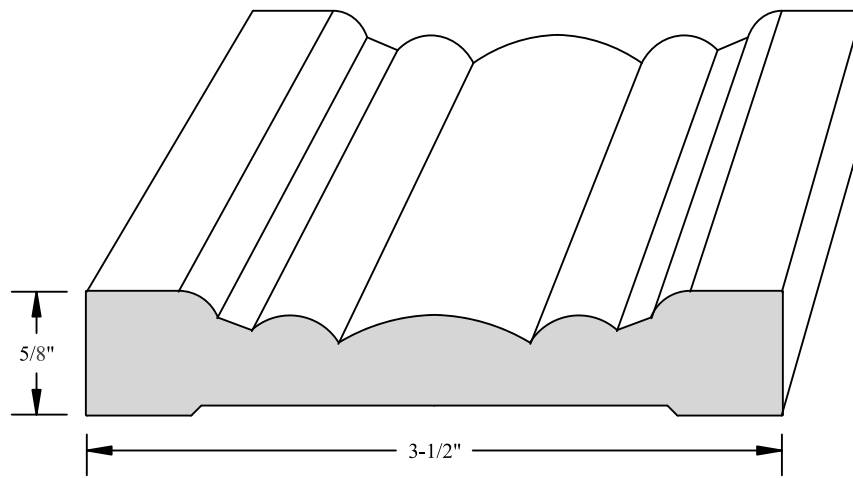


R021-312

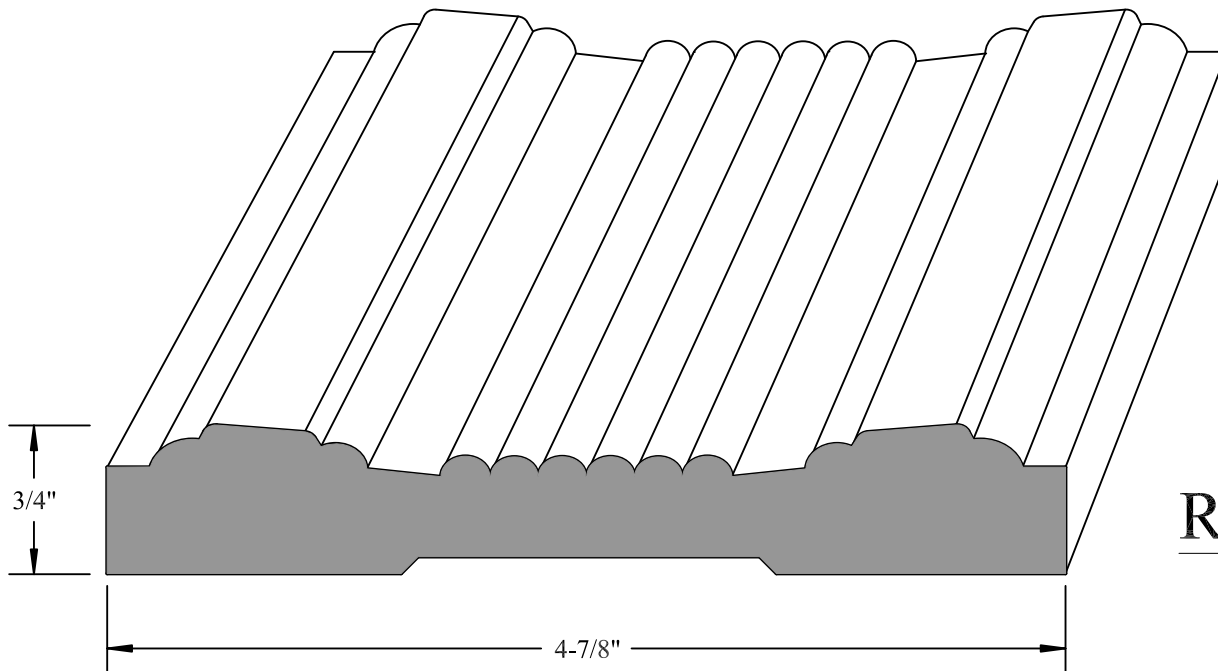


R022




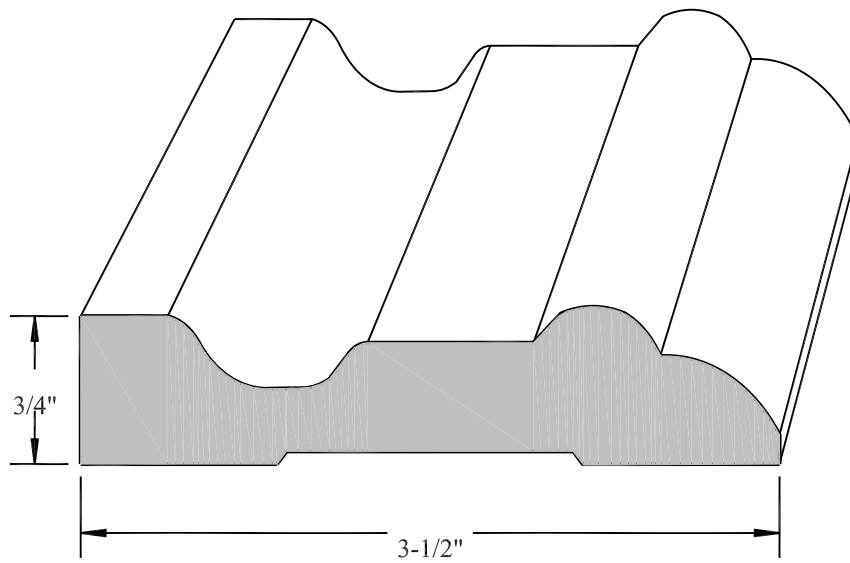

R023



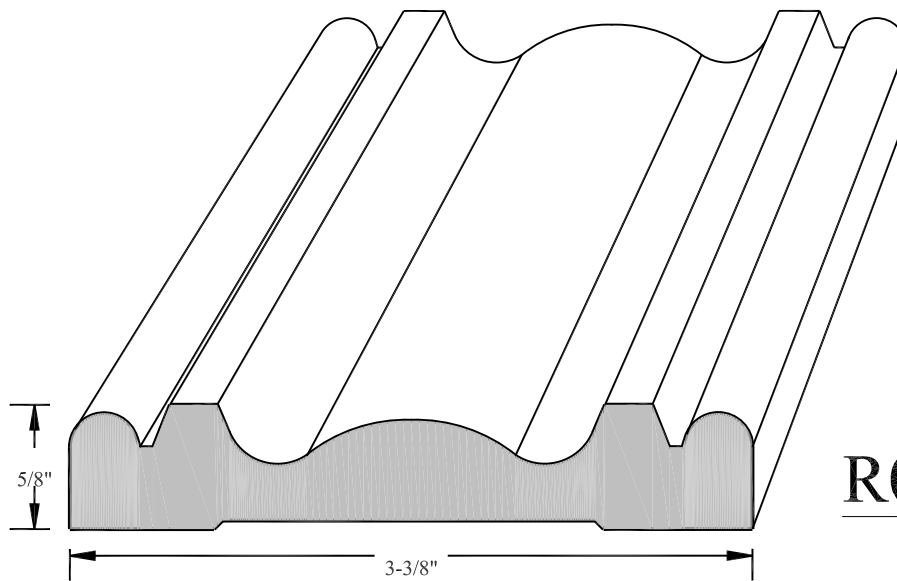



R024

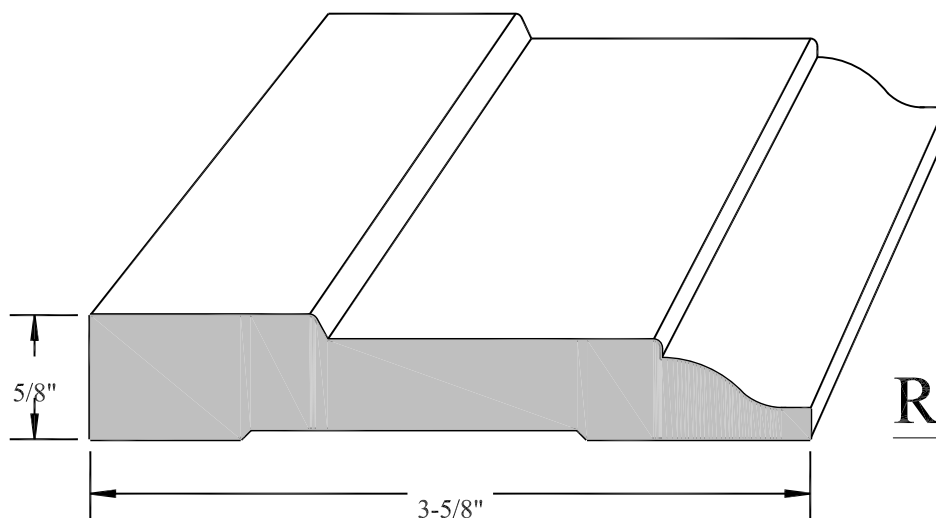


R025



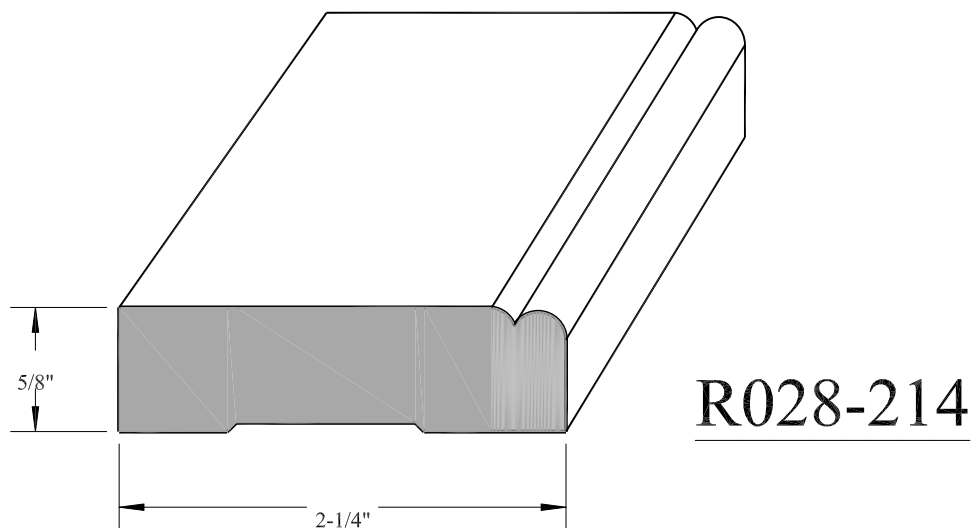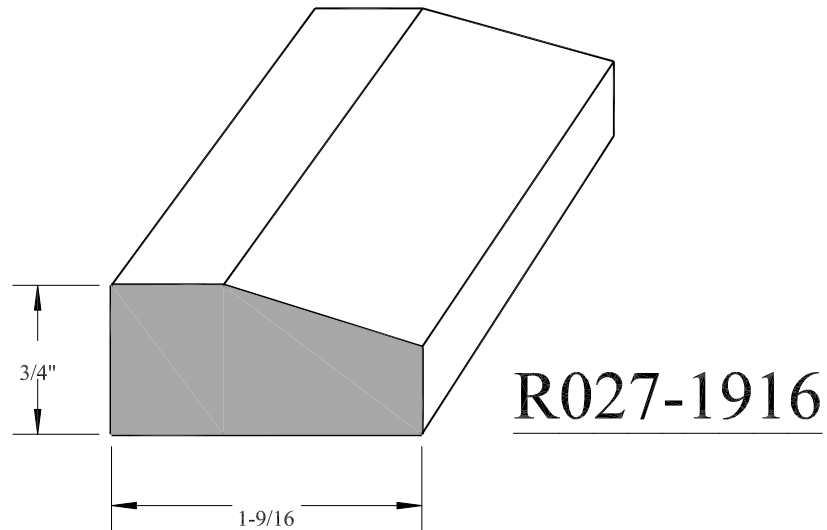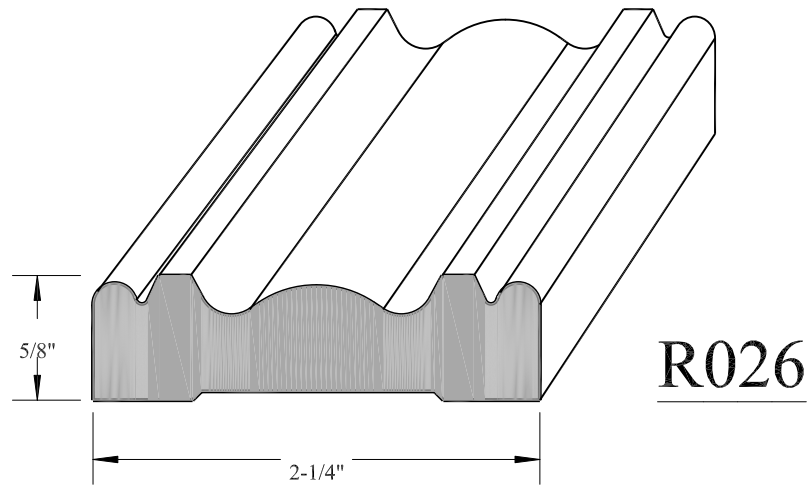


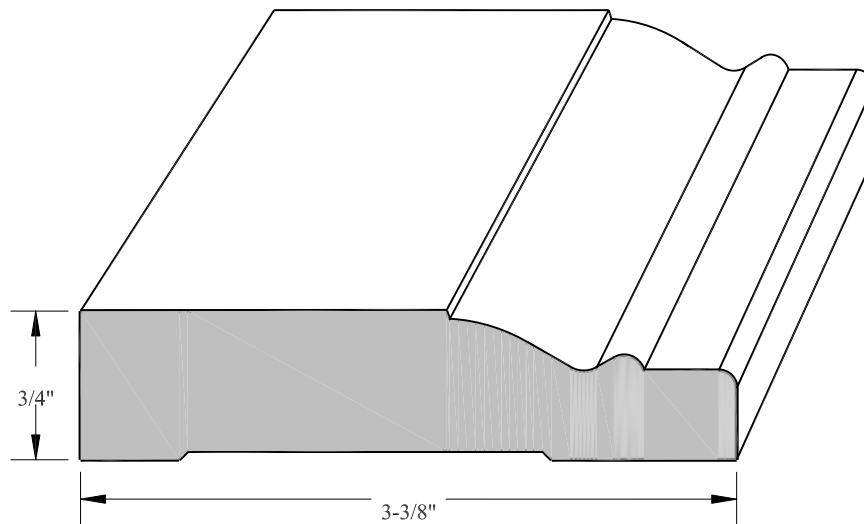

R029-338

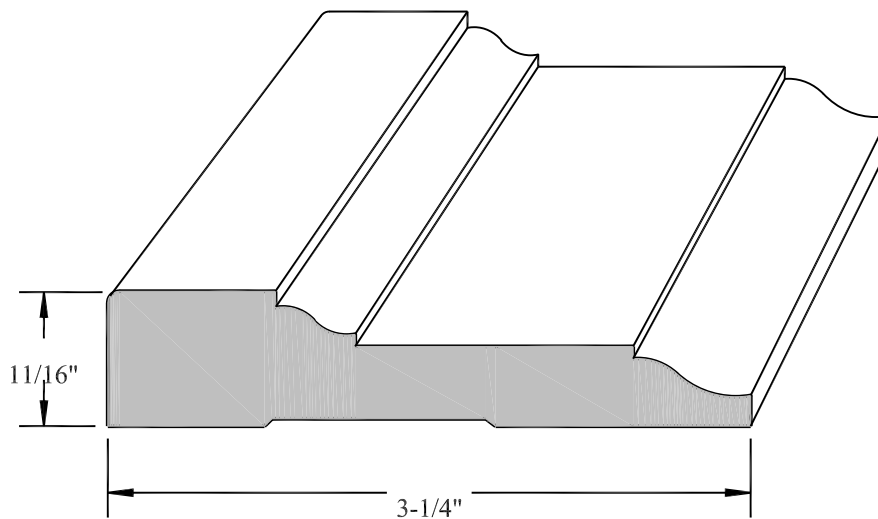




R030

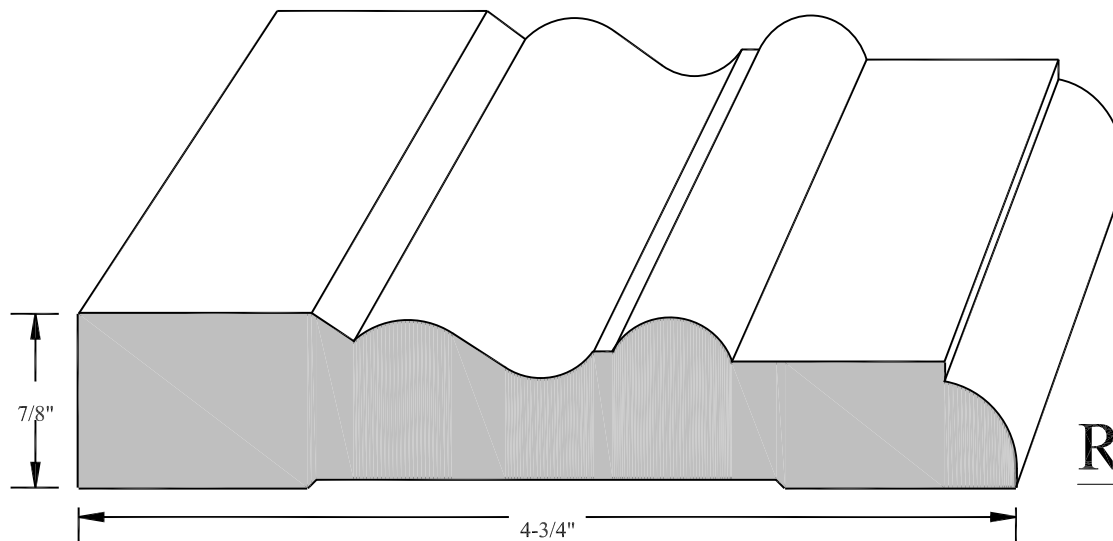


R031-434


R031 can be combined with back-band number R544



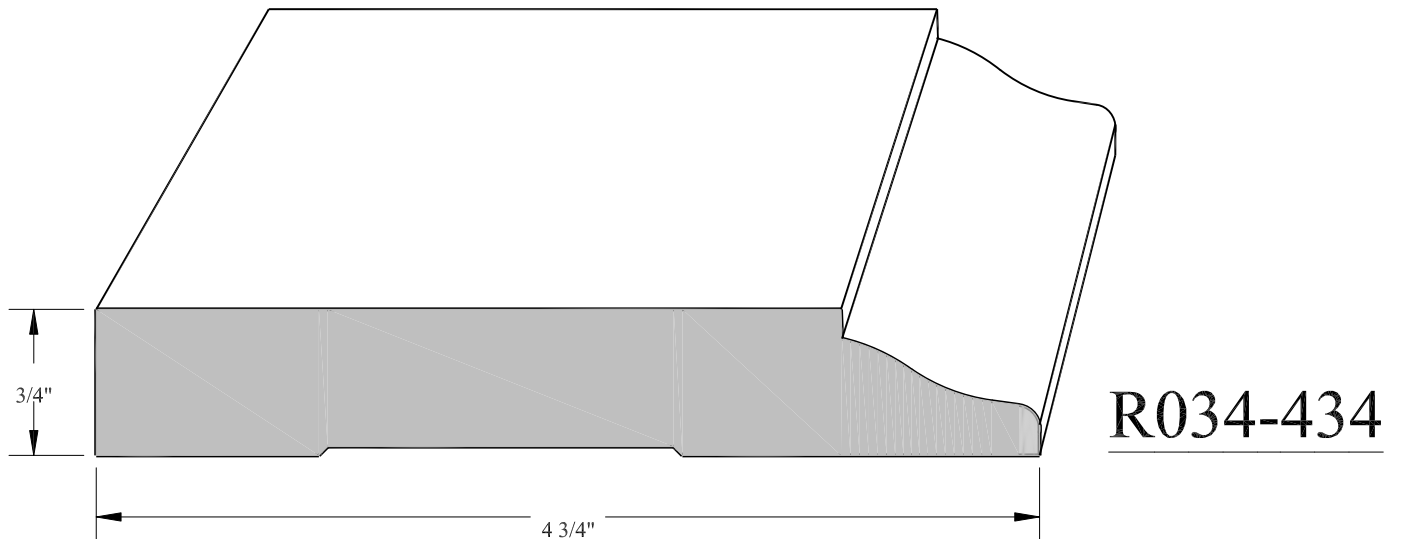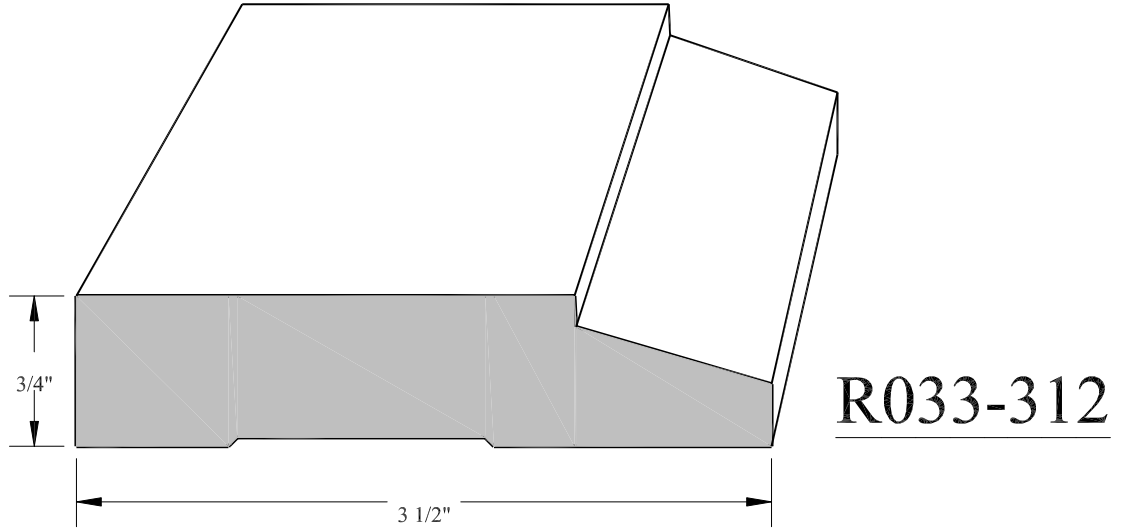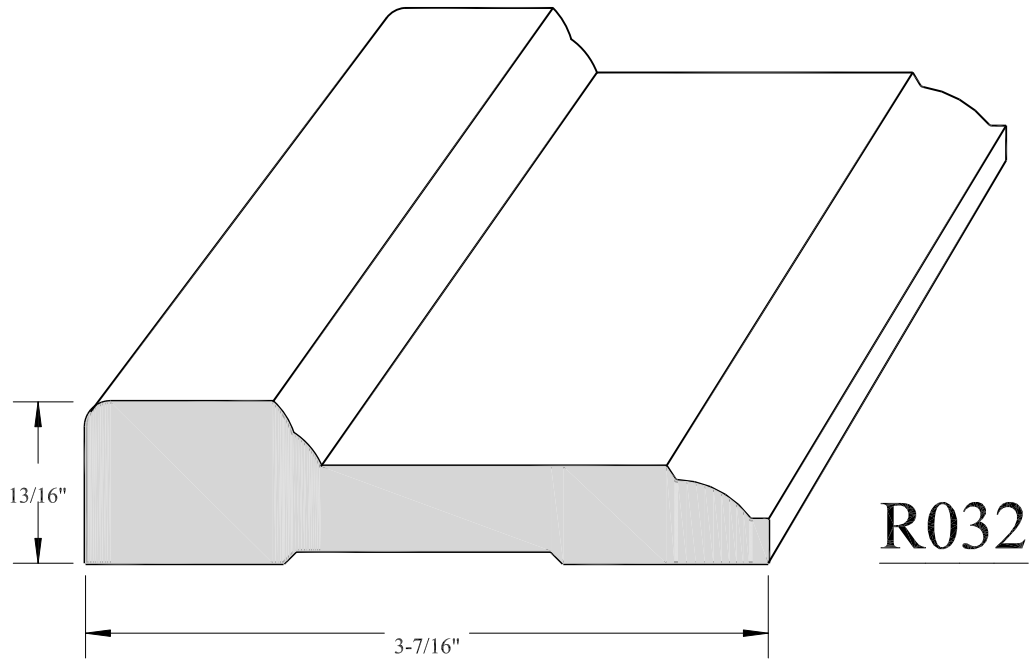


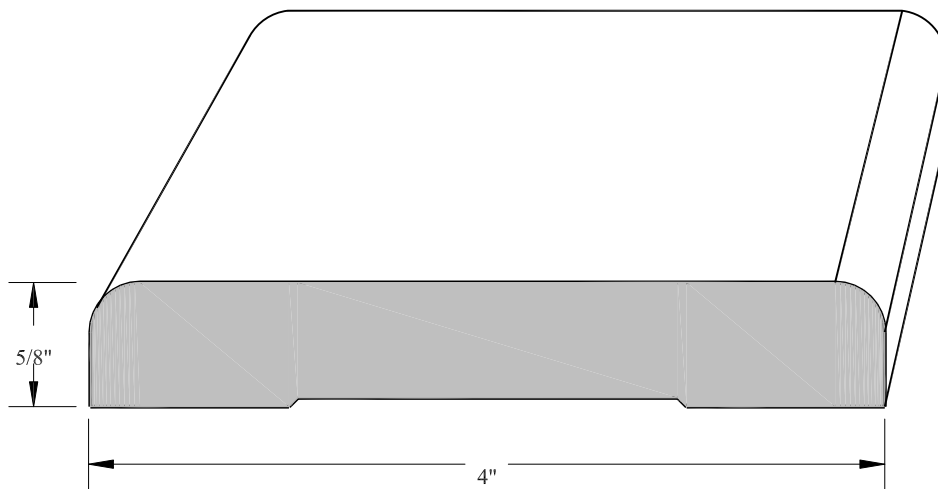

R035-400

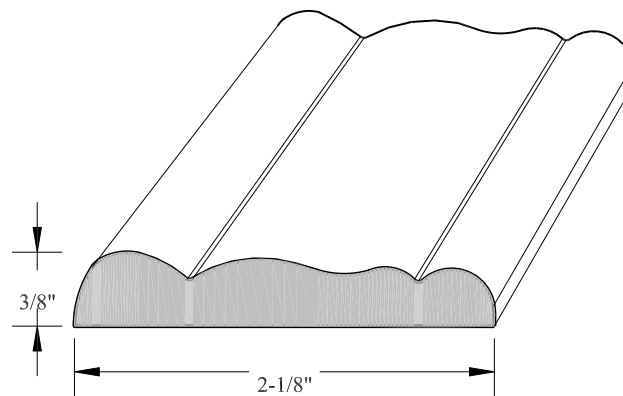


R036

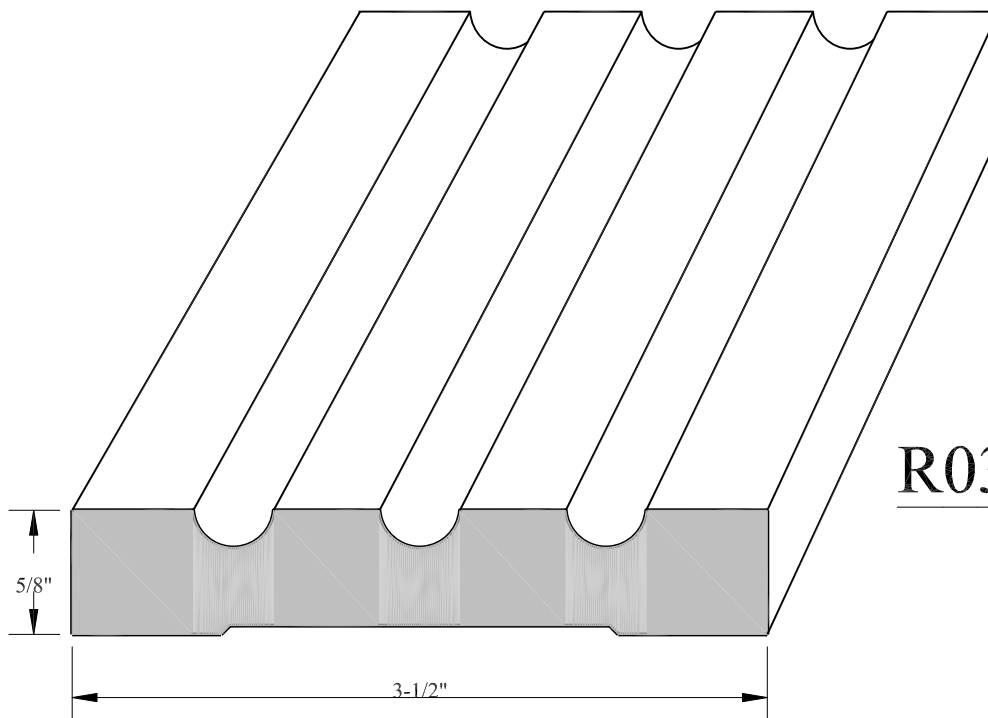


R037-312



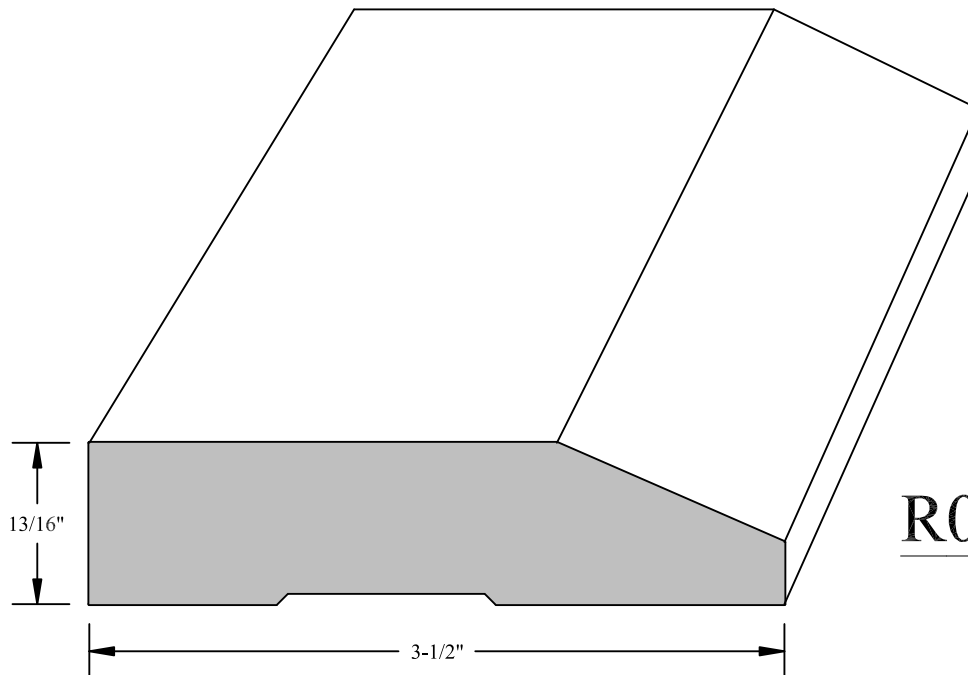




R038-312


Various Widths can be made

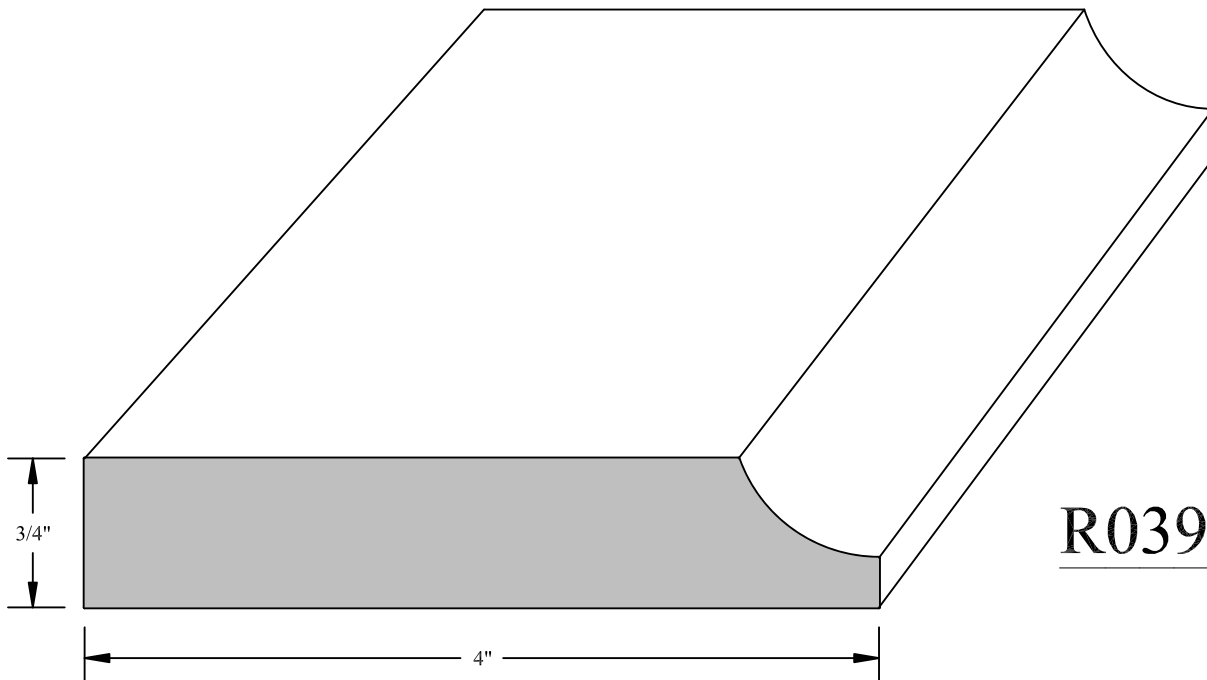


R039-400



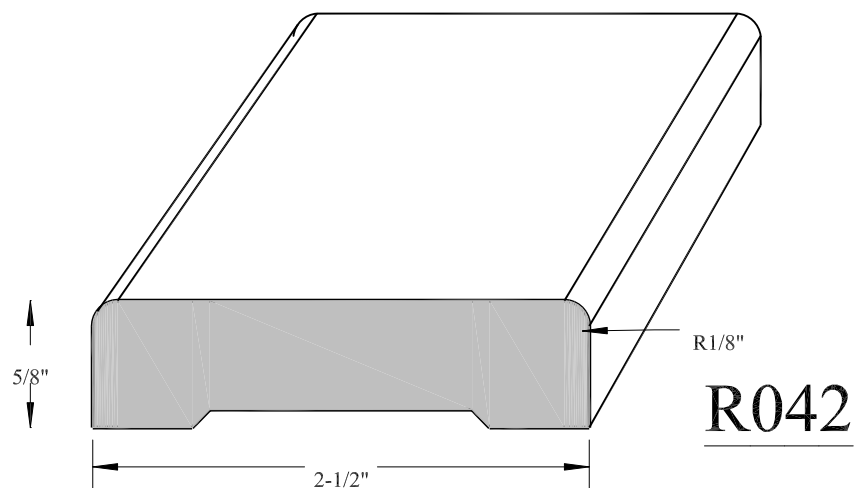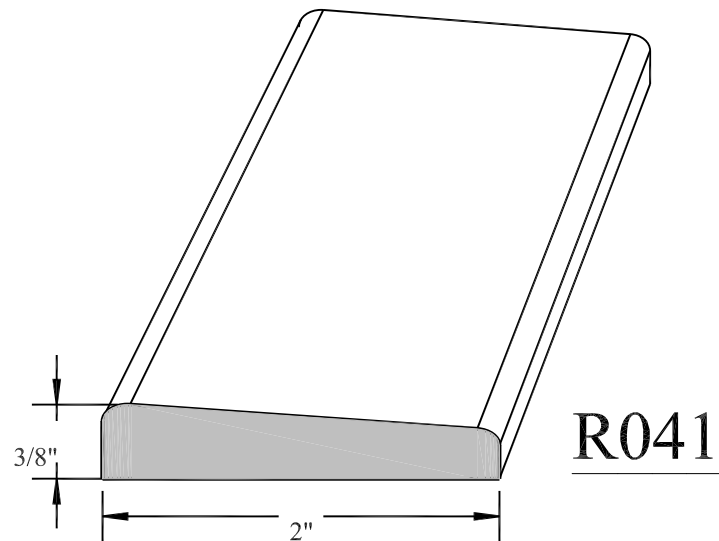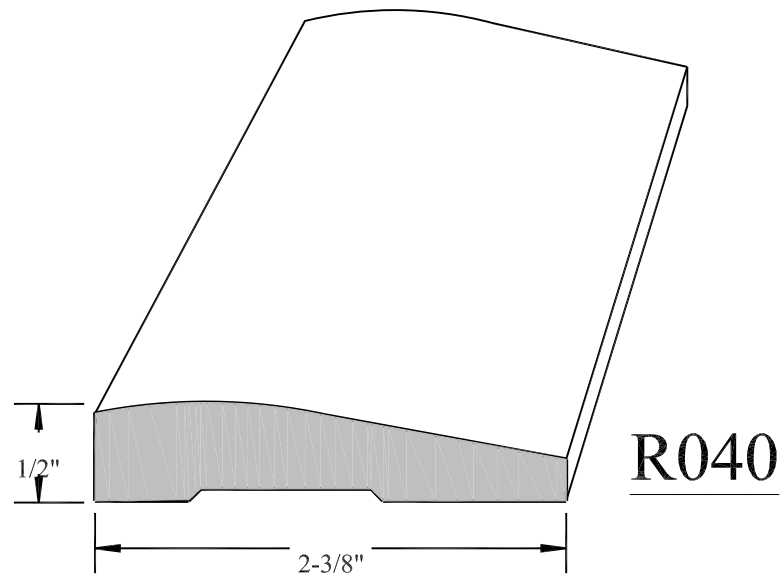


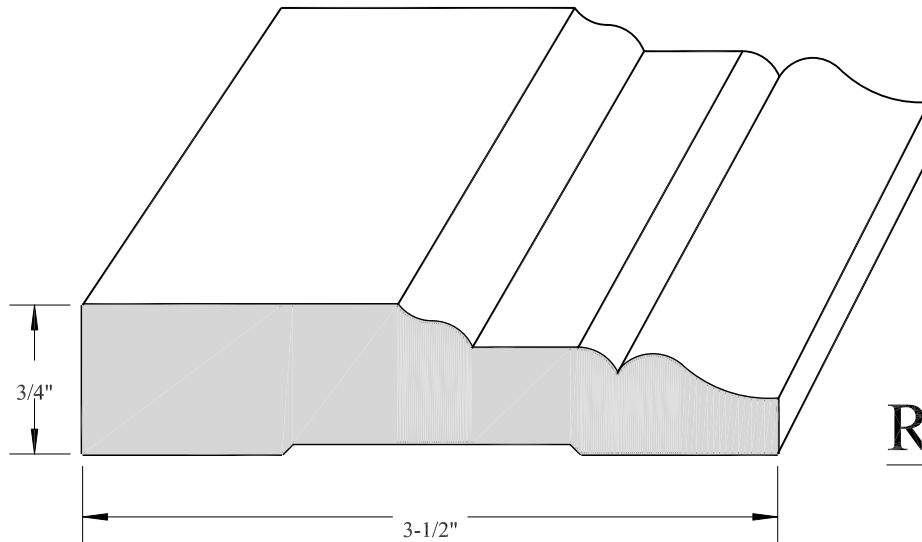

R043-312

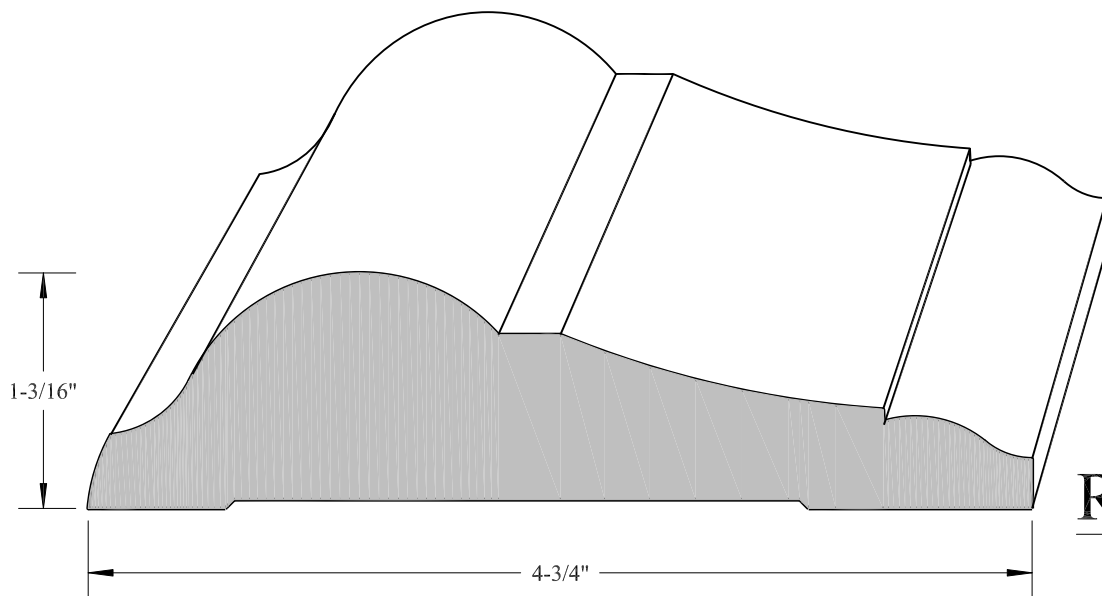


R044

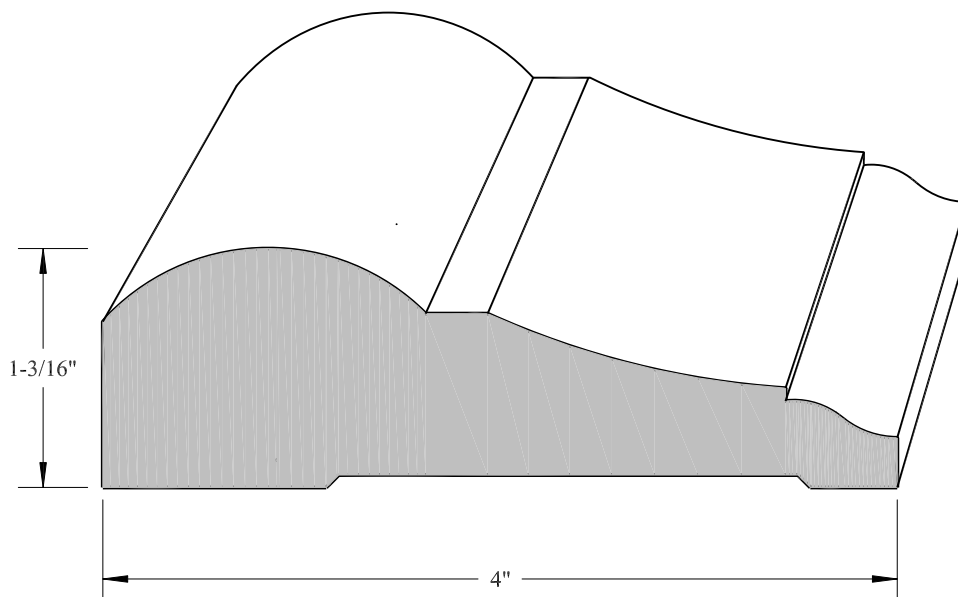


R045




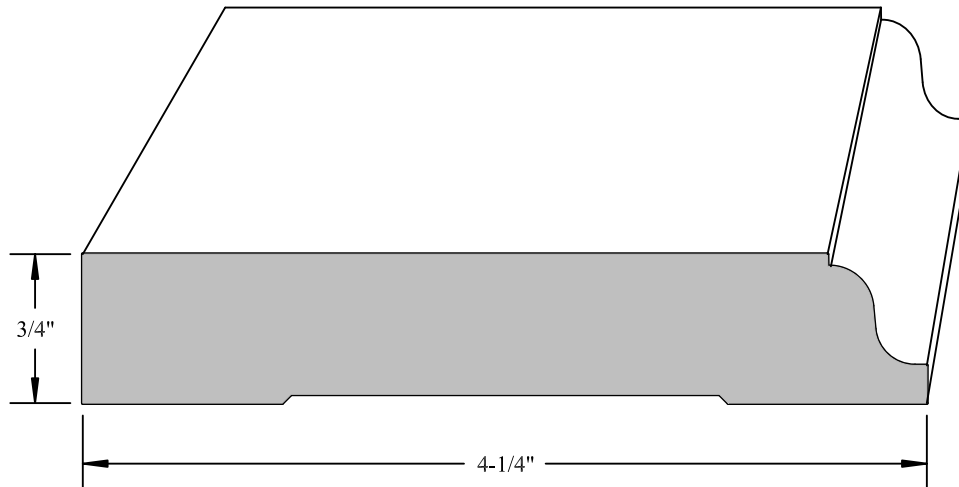

R046-414

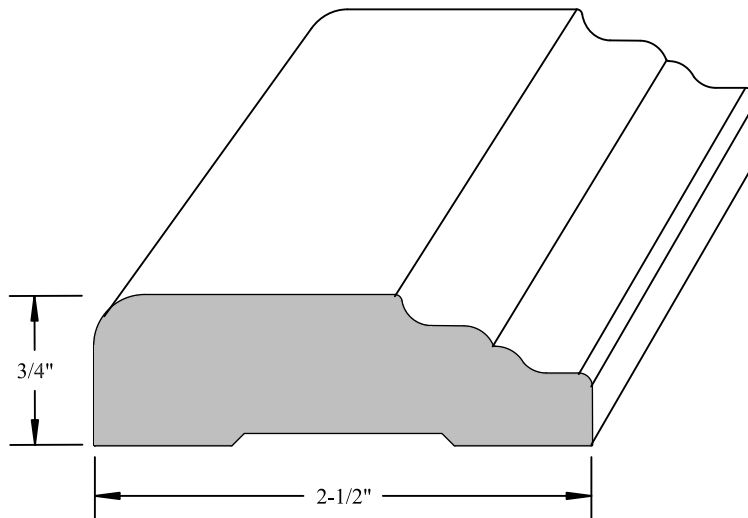


R047-212

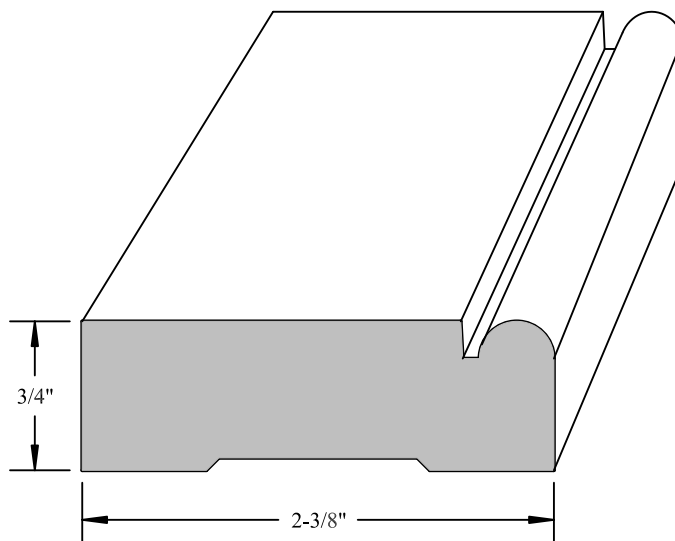


R048-238
4" max width




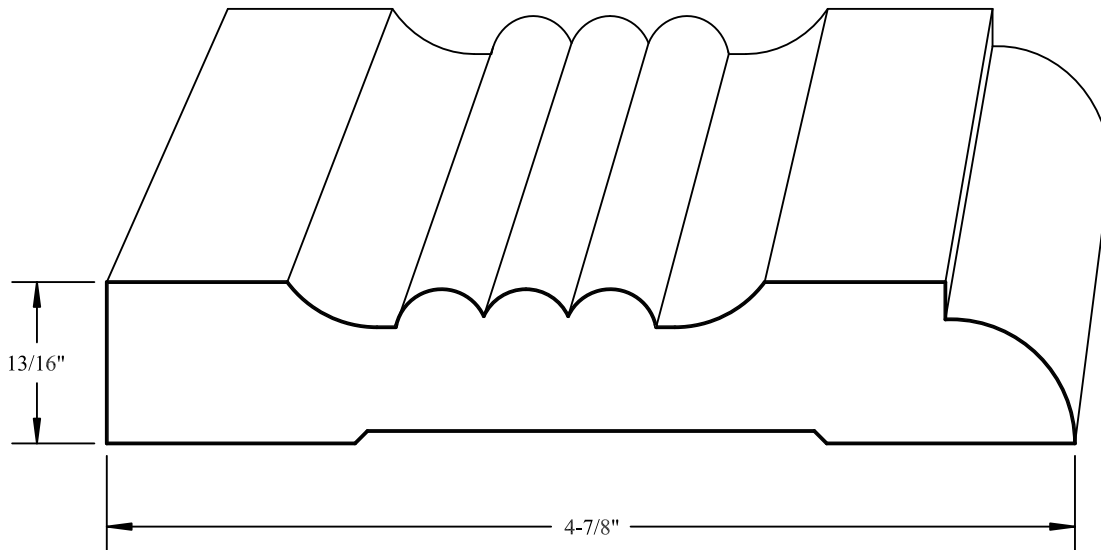

R049-478



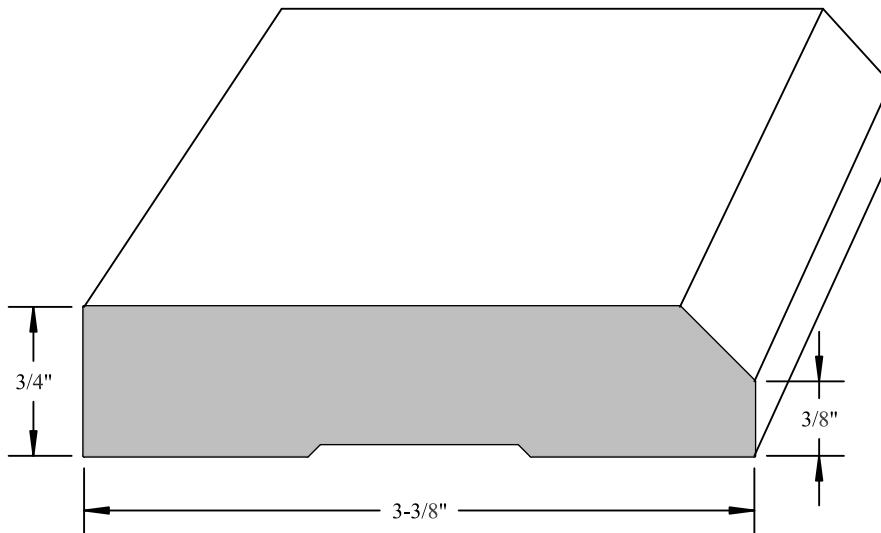



R050-338

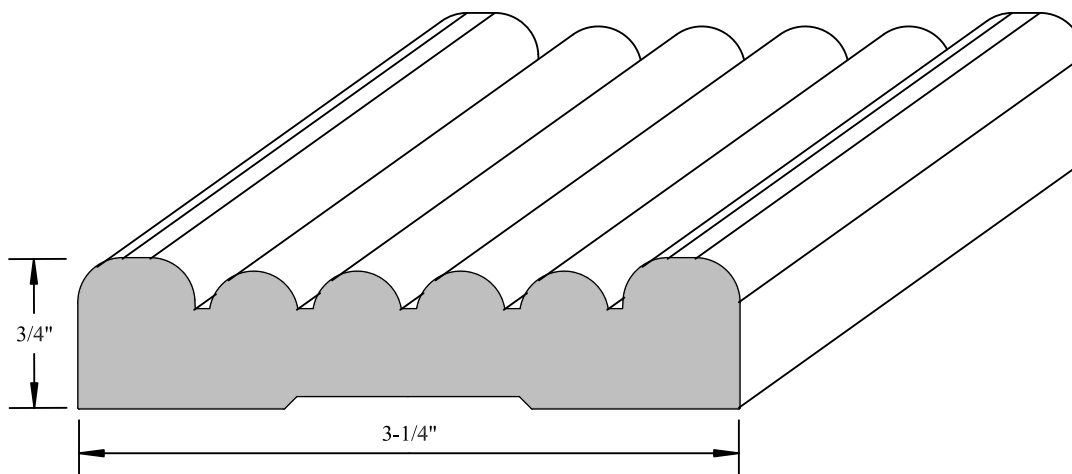

R051







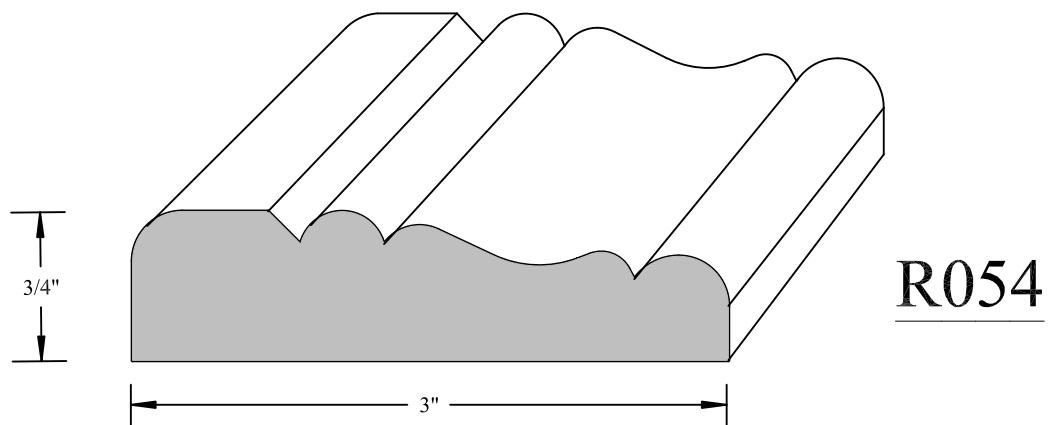
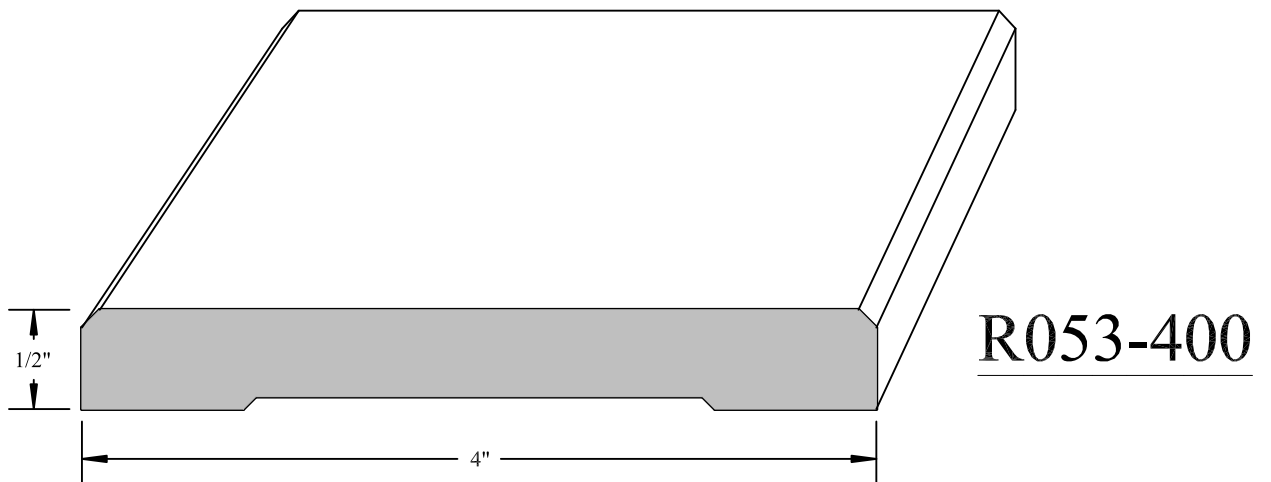
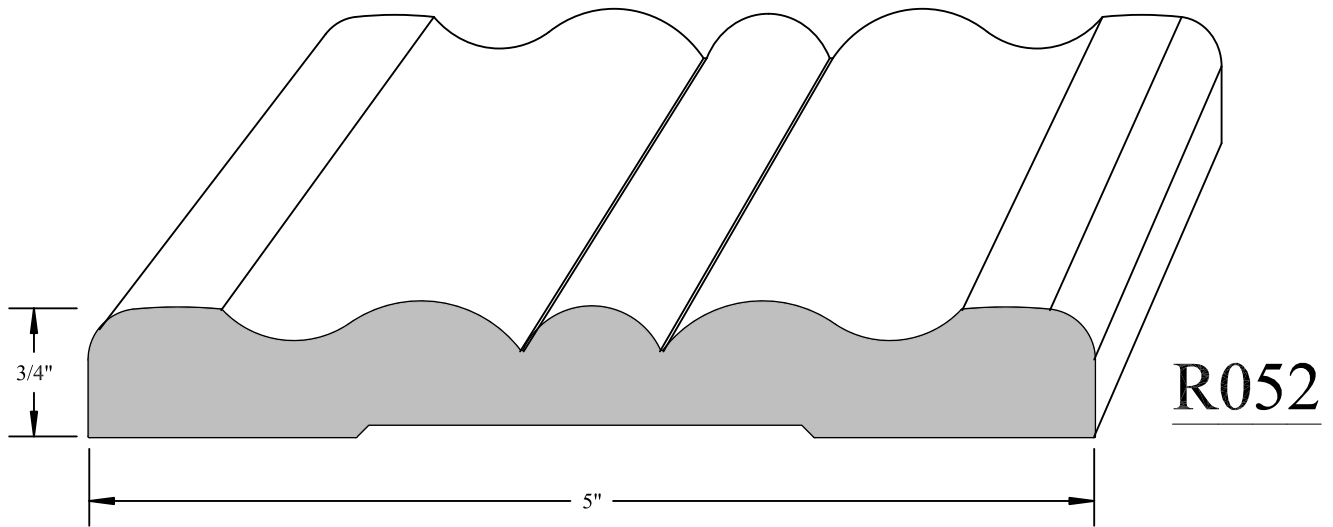


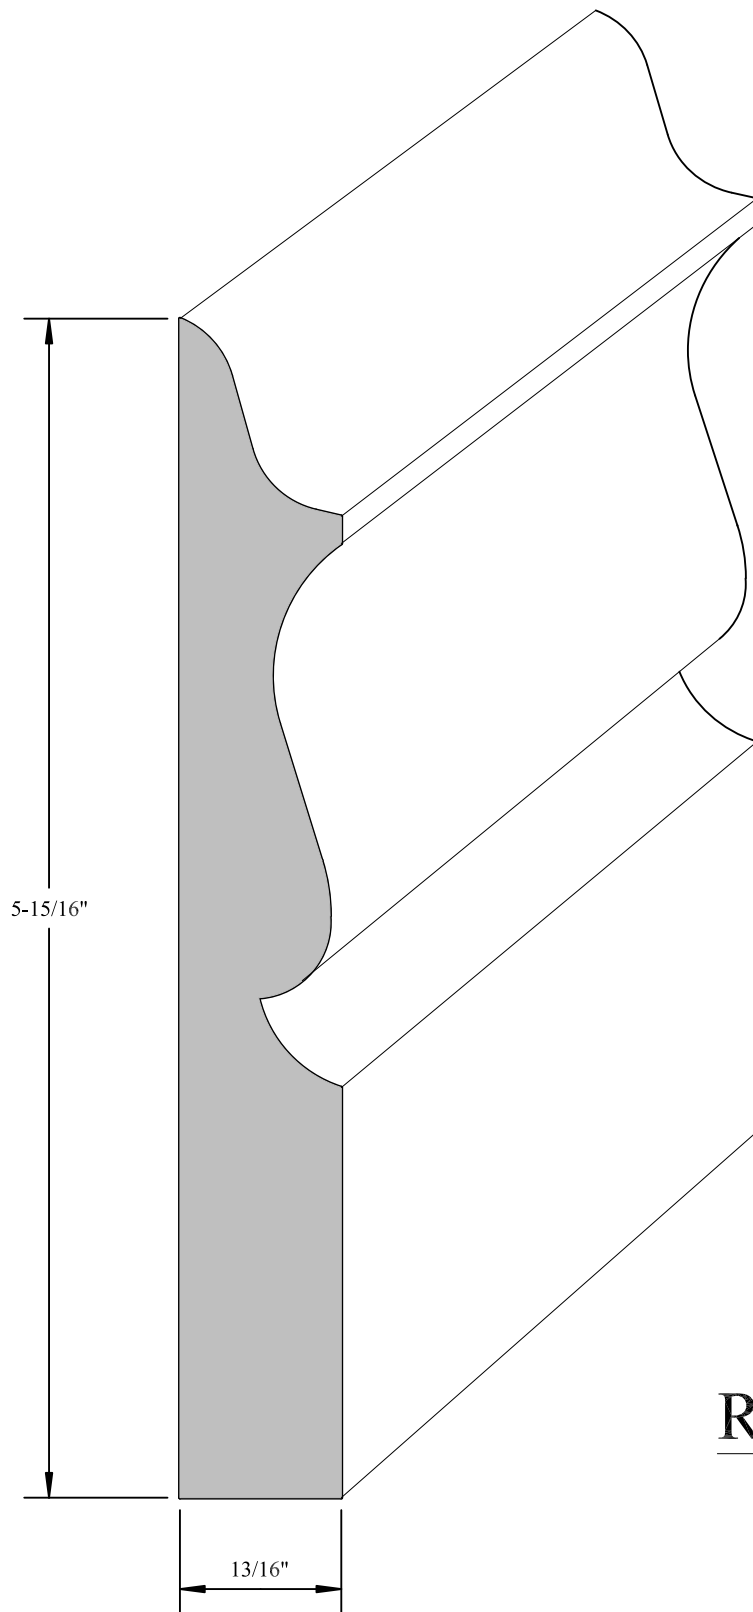


R055




Door Stops

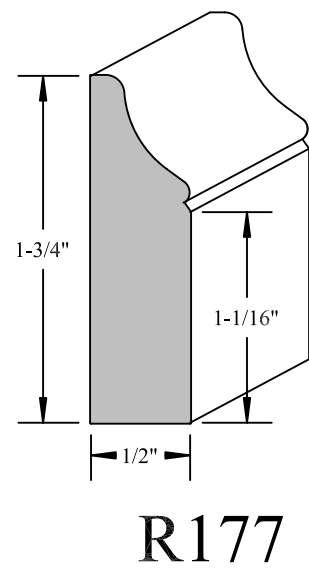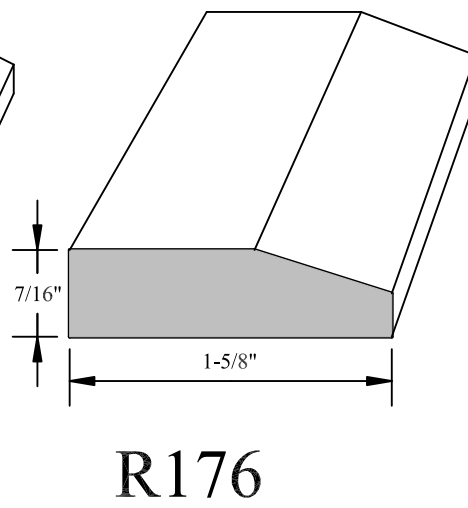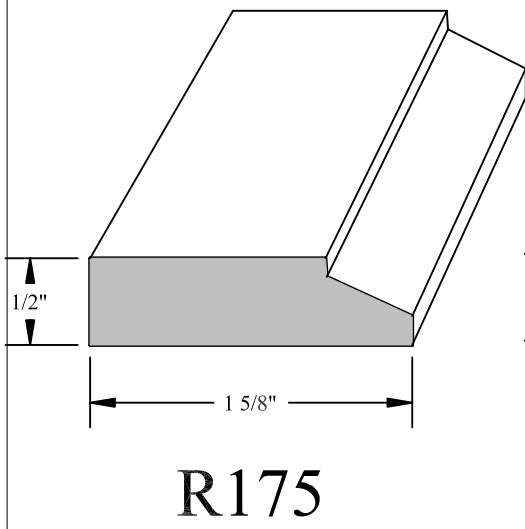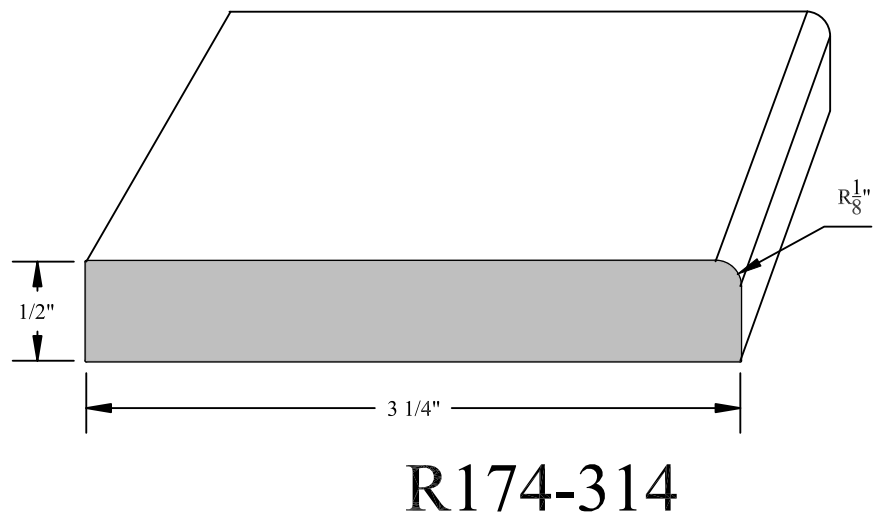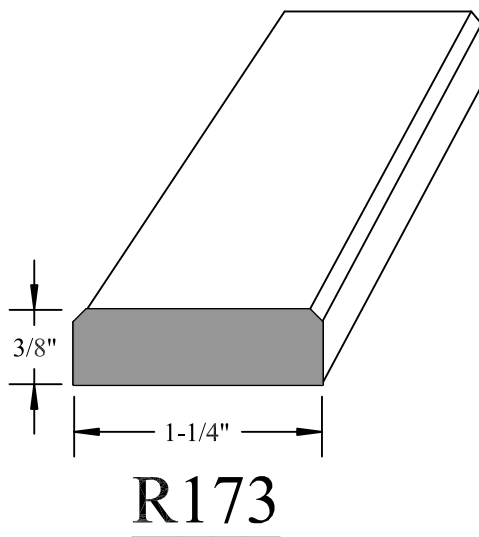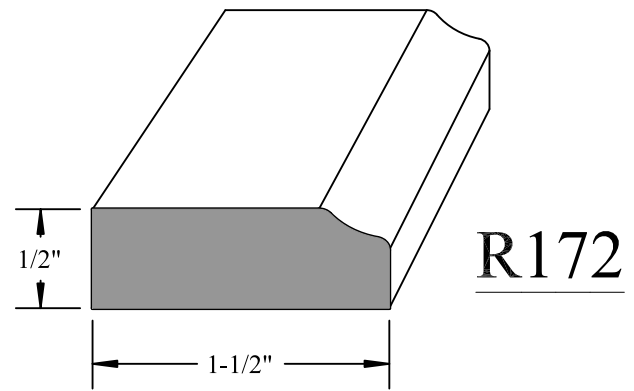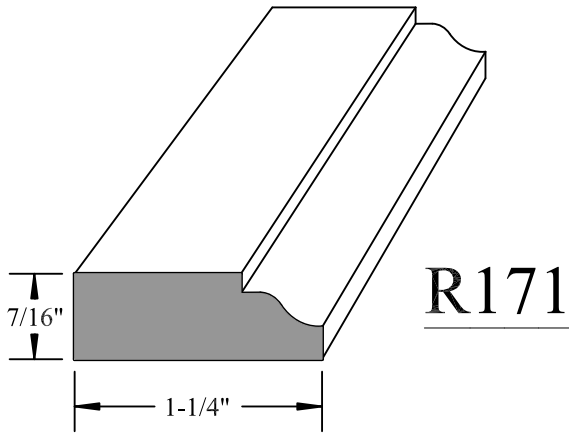


Bullnoses

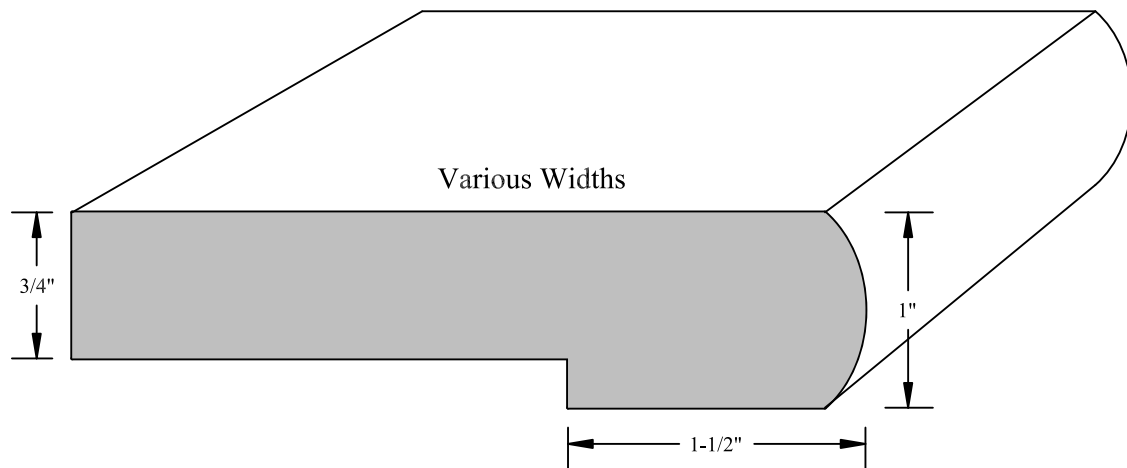

R191

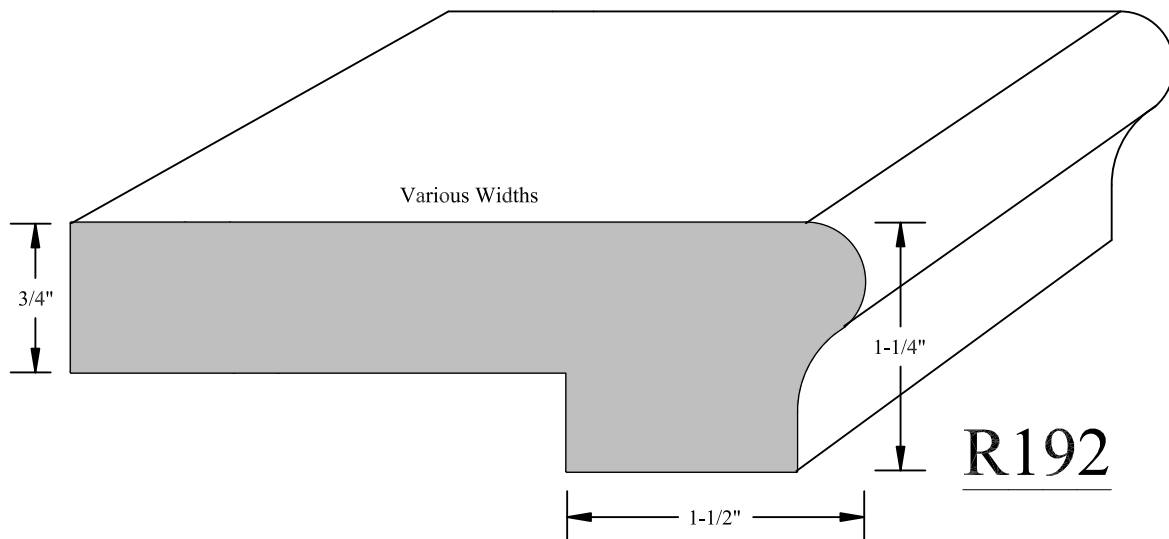

R192


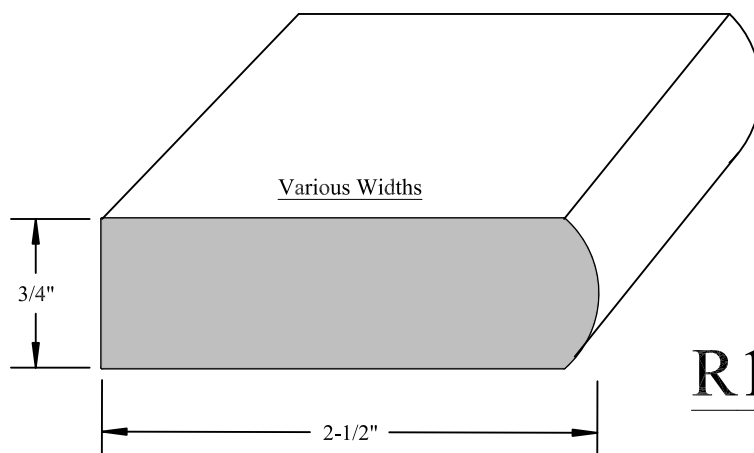


R193



Add Lasting Value To Your Home • Traditional Designs In Solid Wood

Baseboards

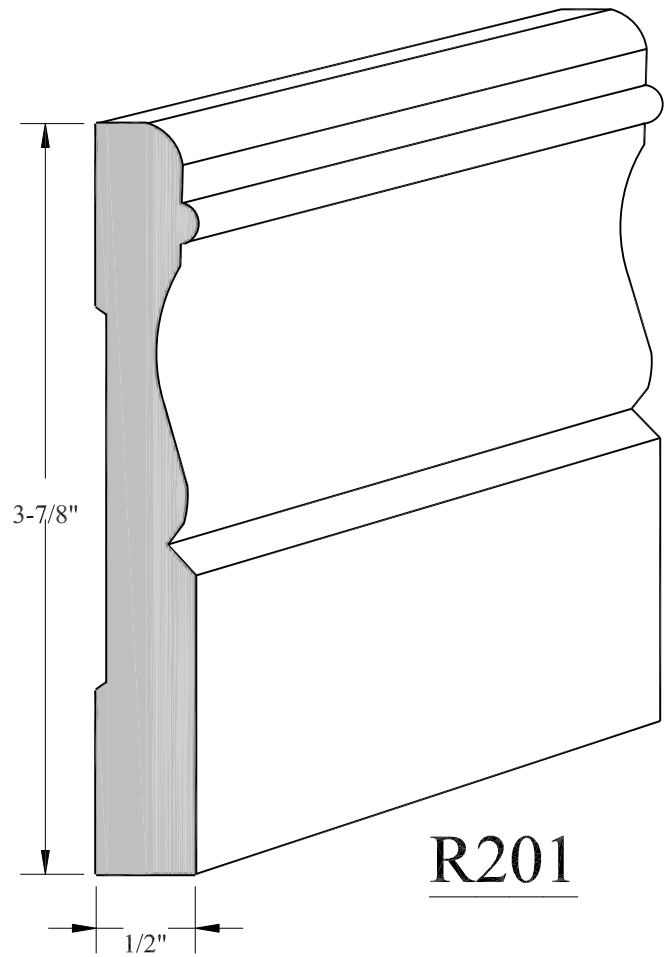
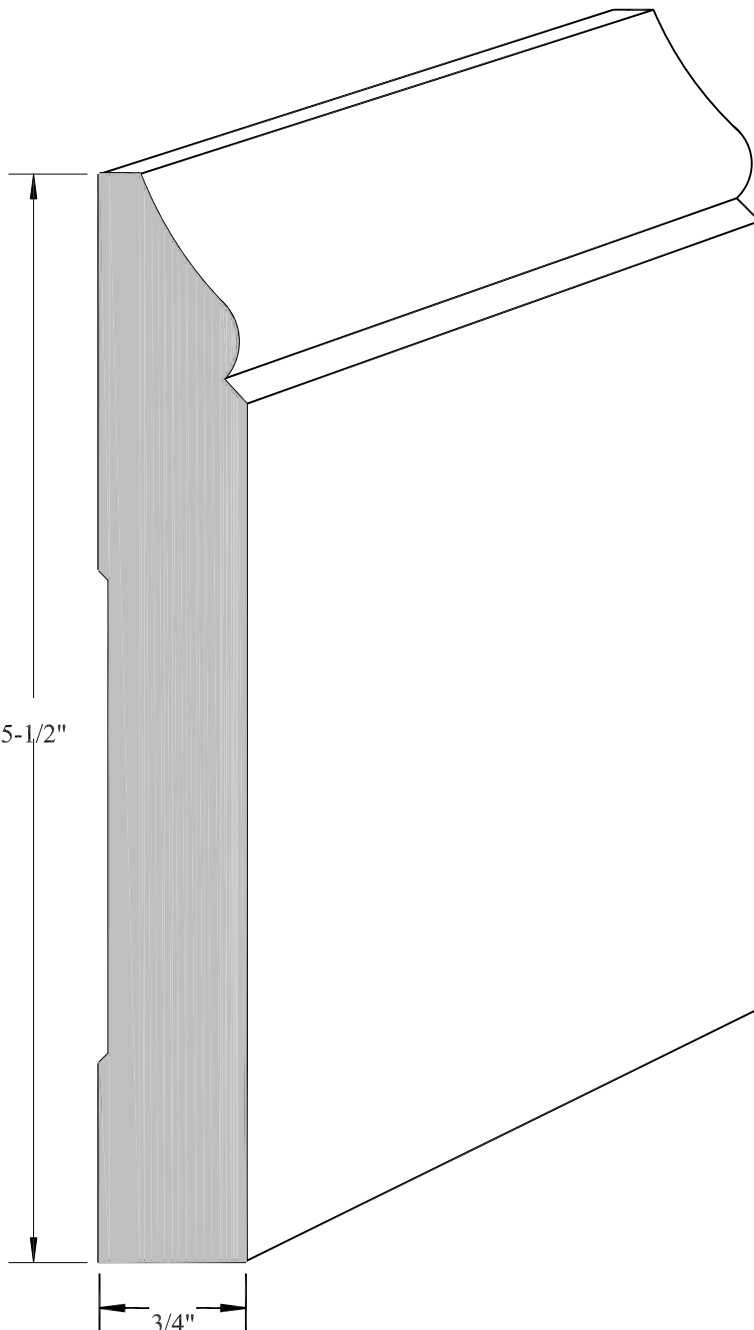


R202-512



R201






Baseboards

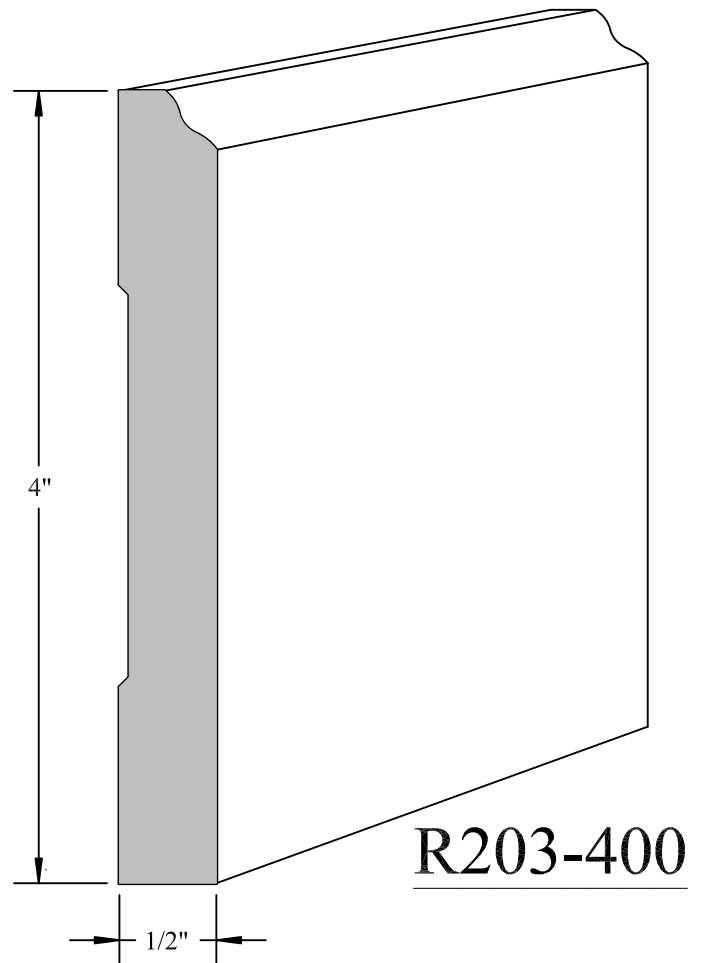
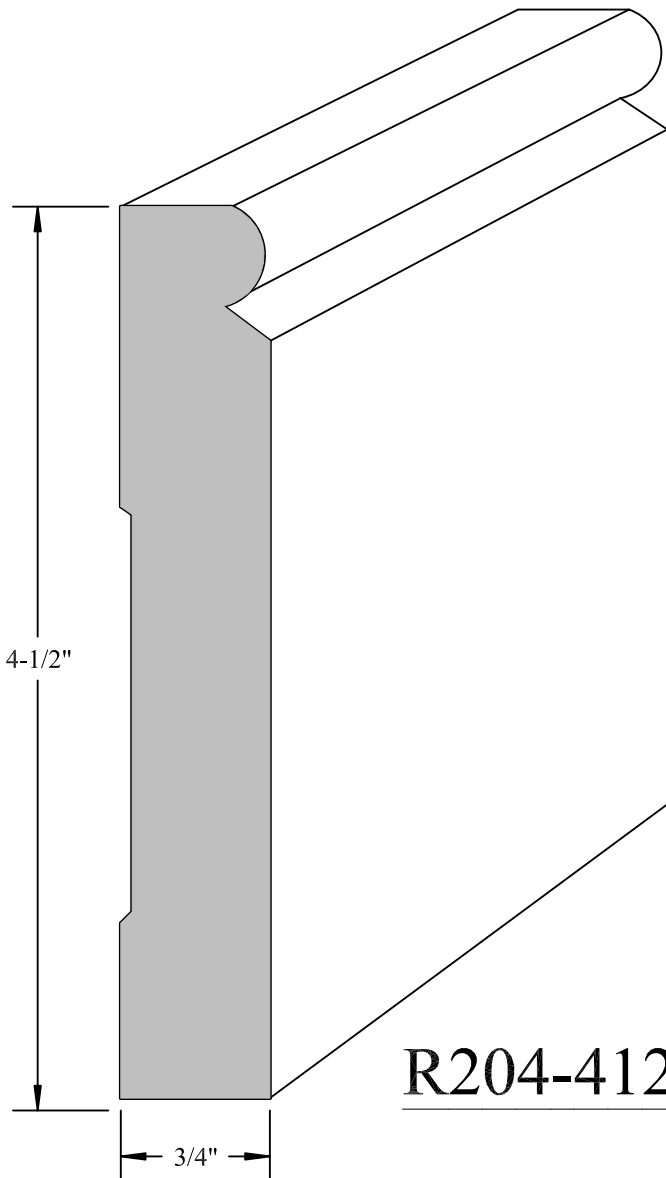


Baseboards

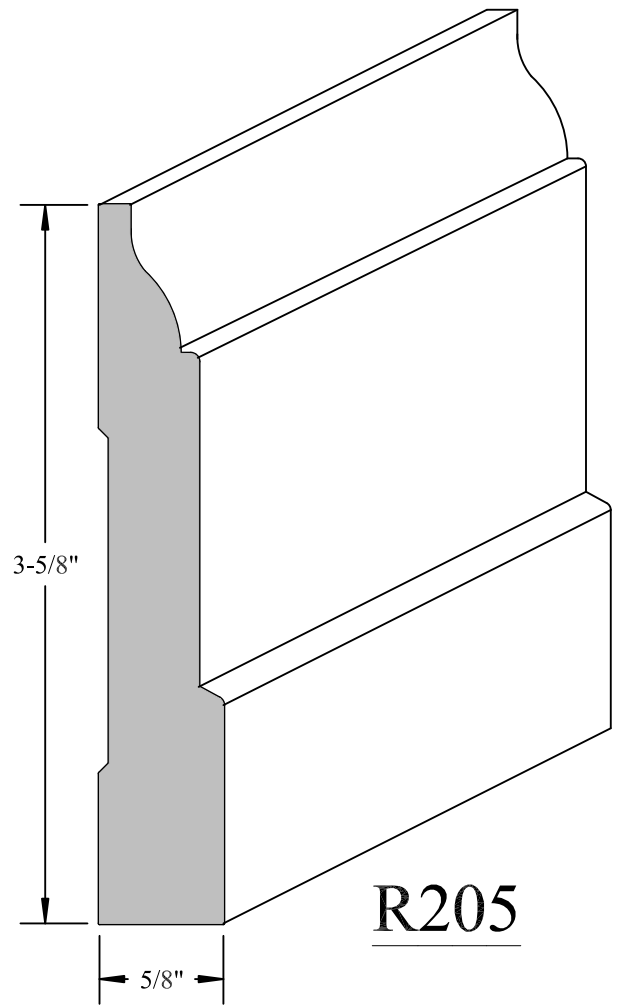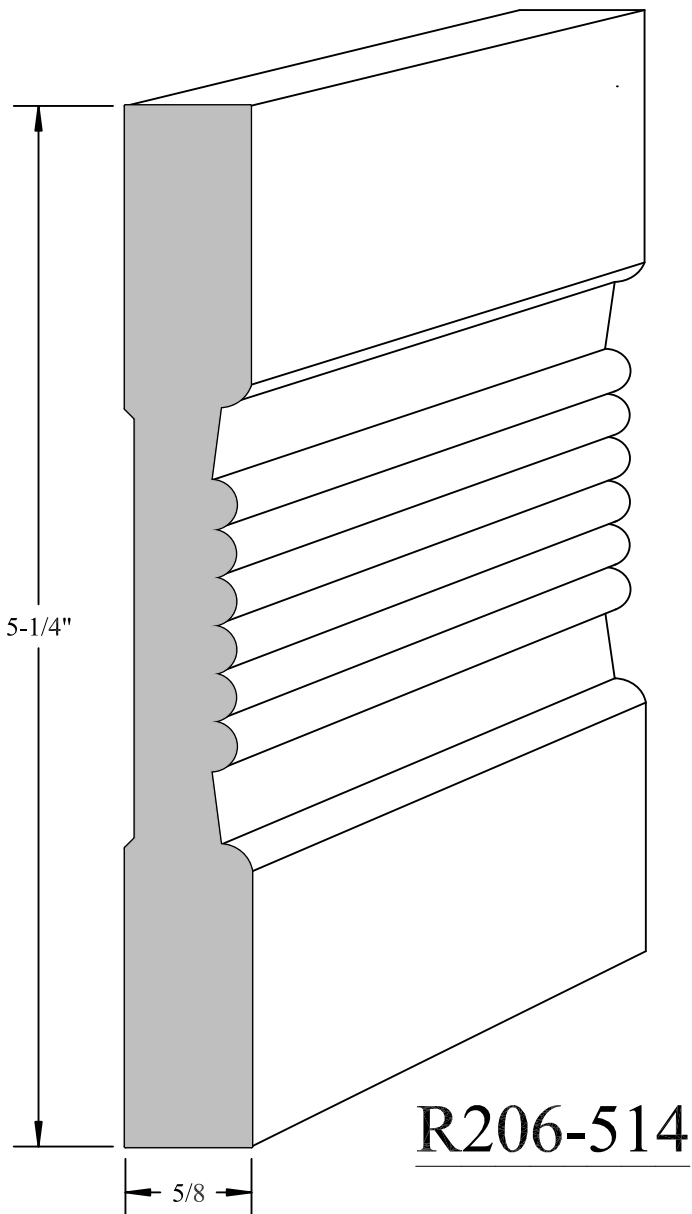


Baseboards

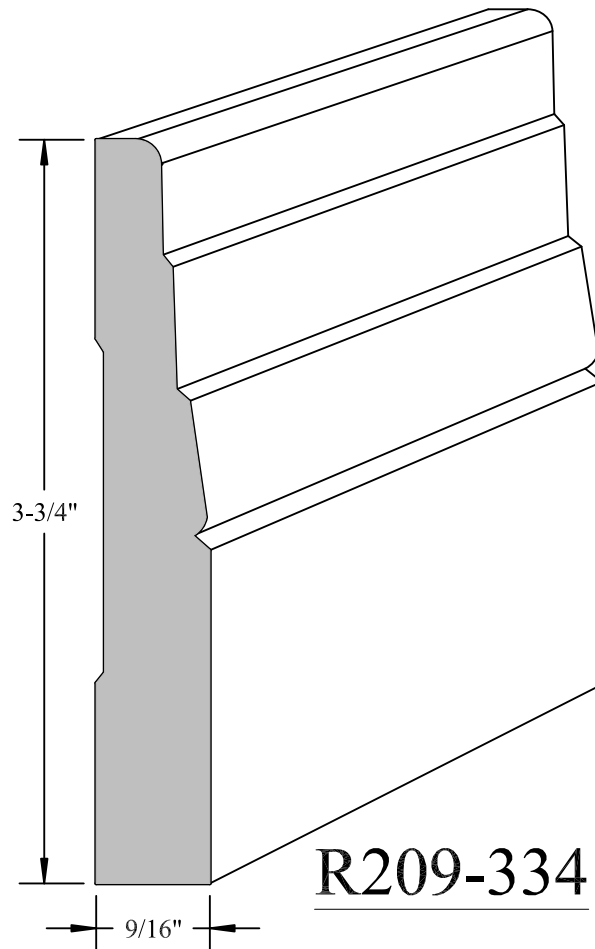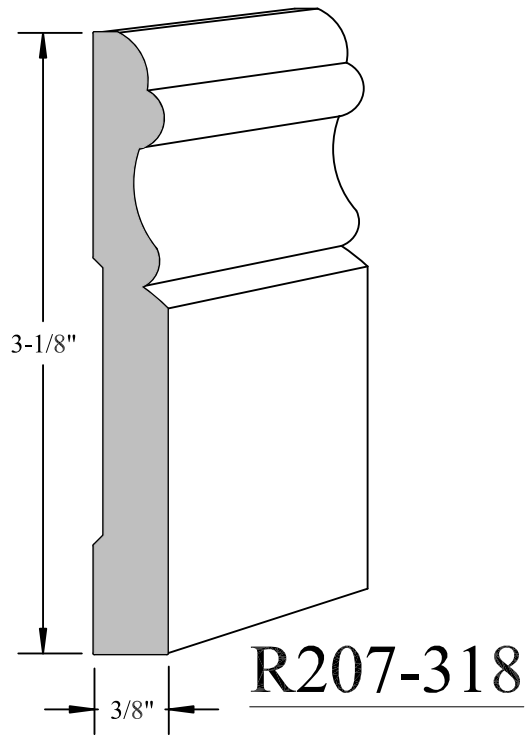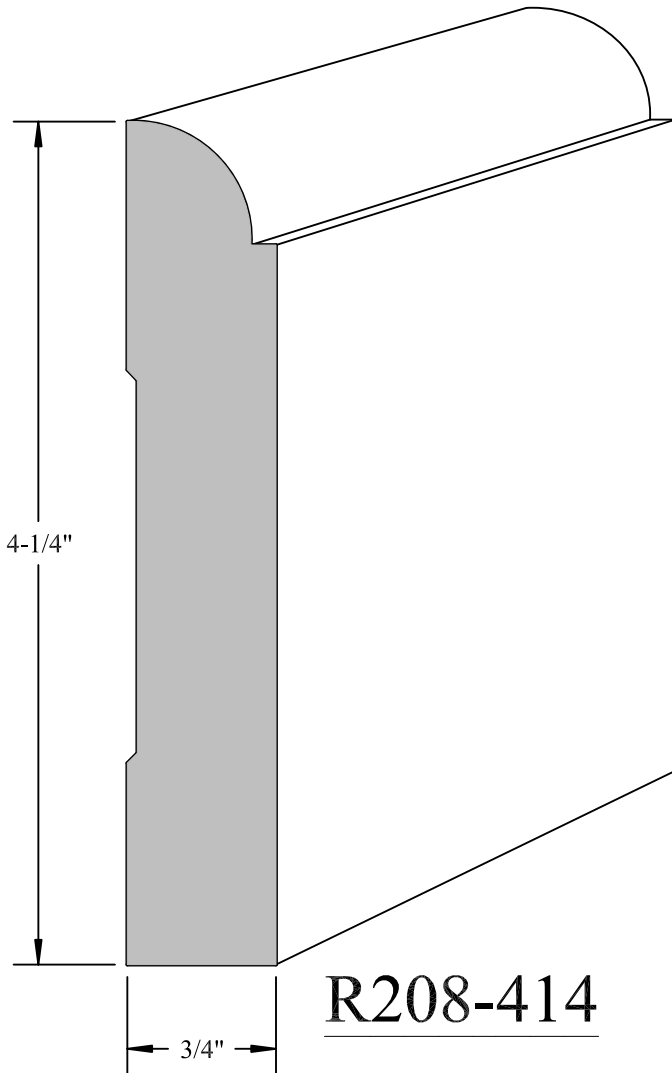


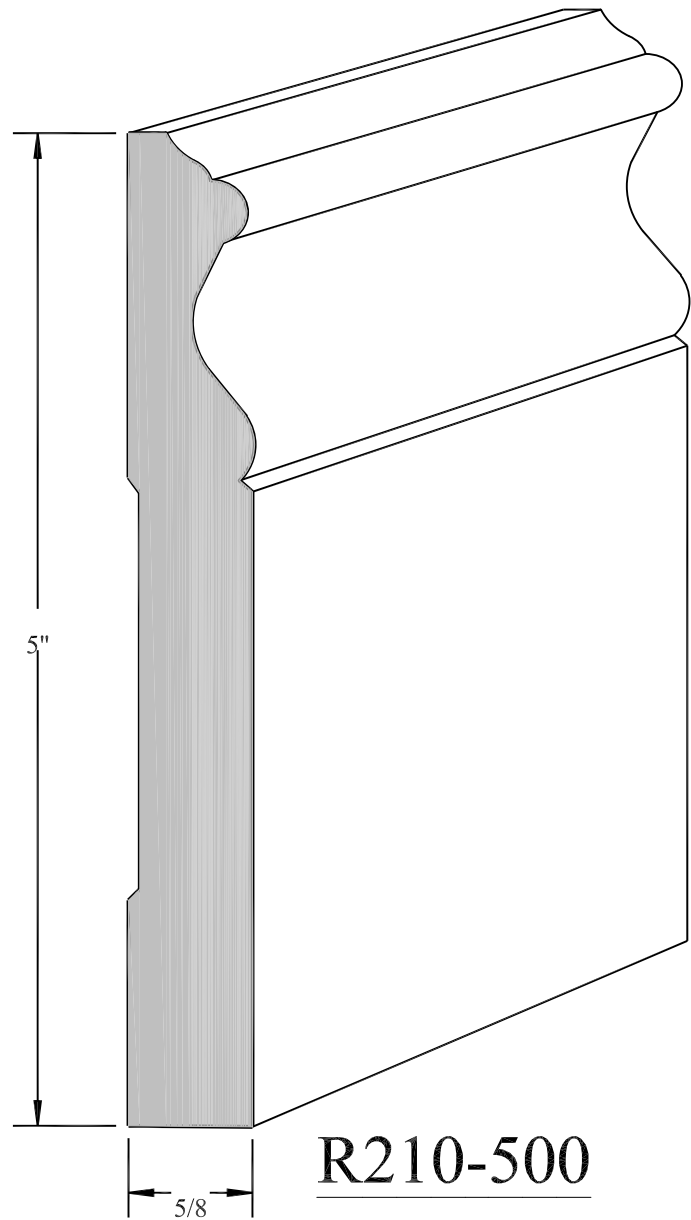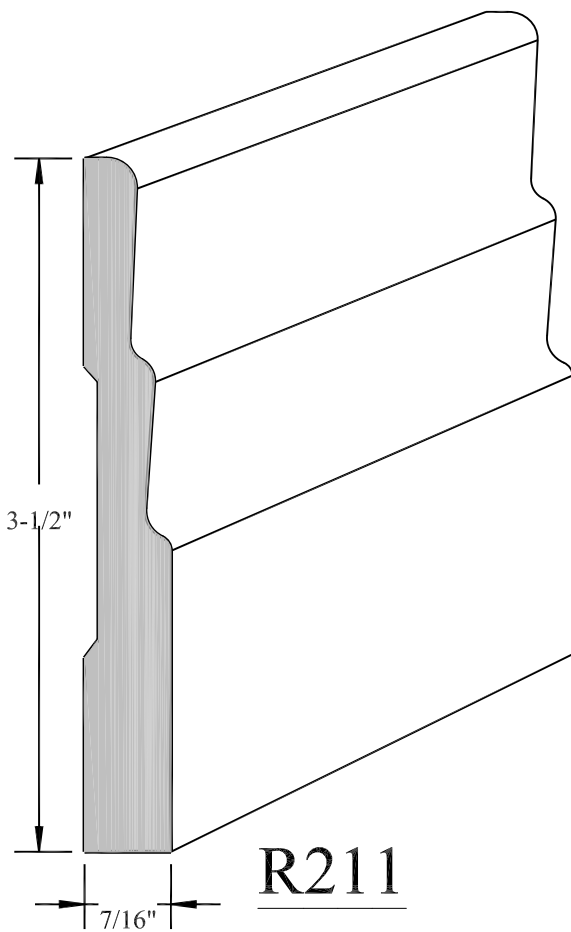



Baseboards

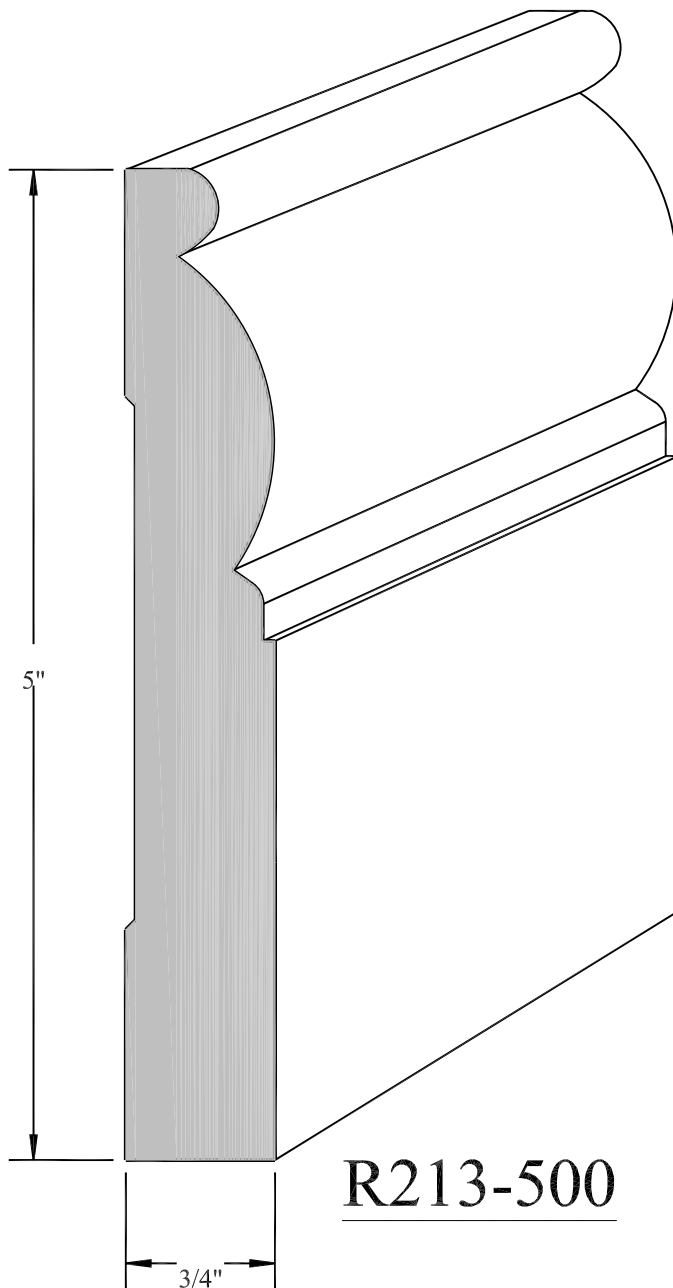


R213-500

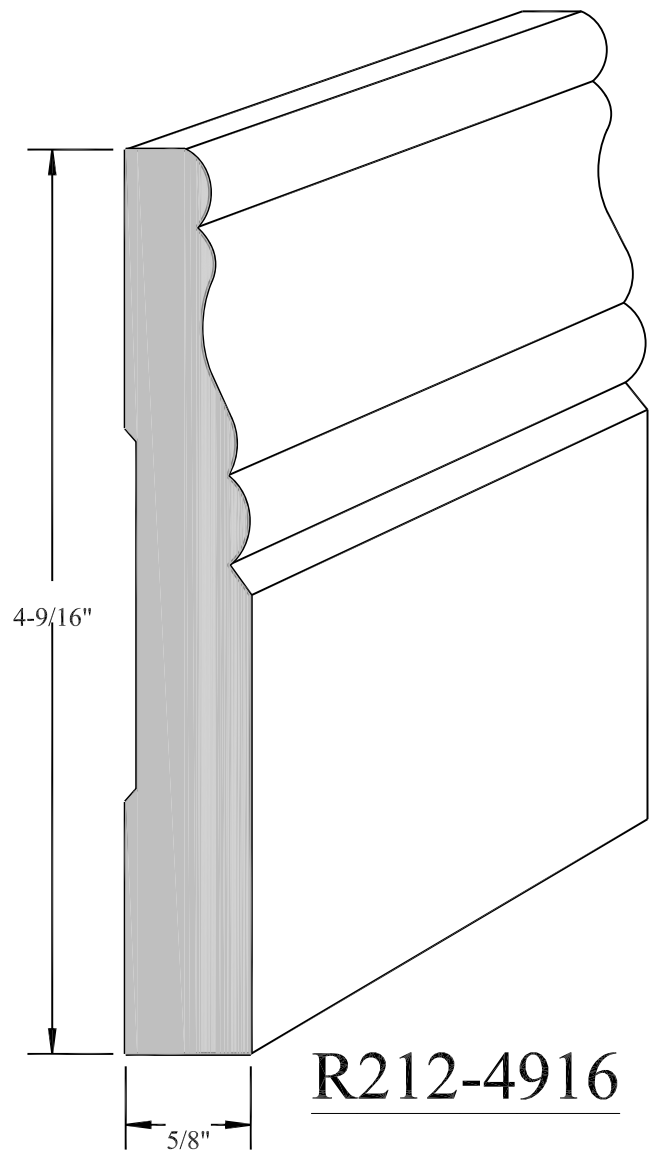


R212-4916

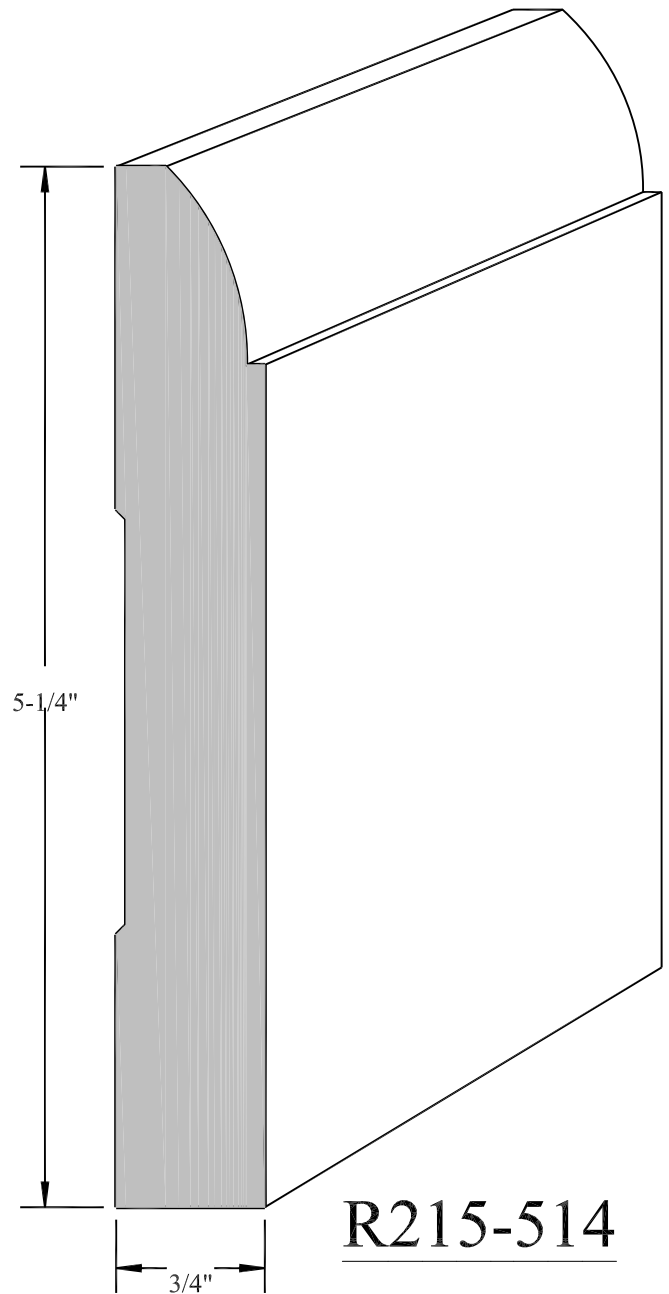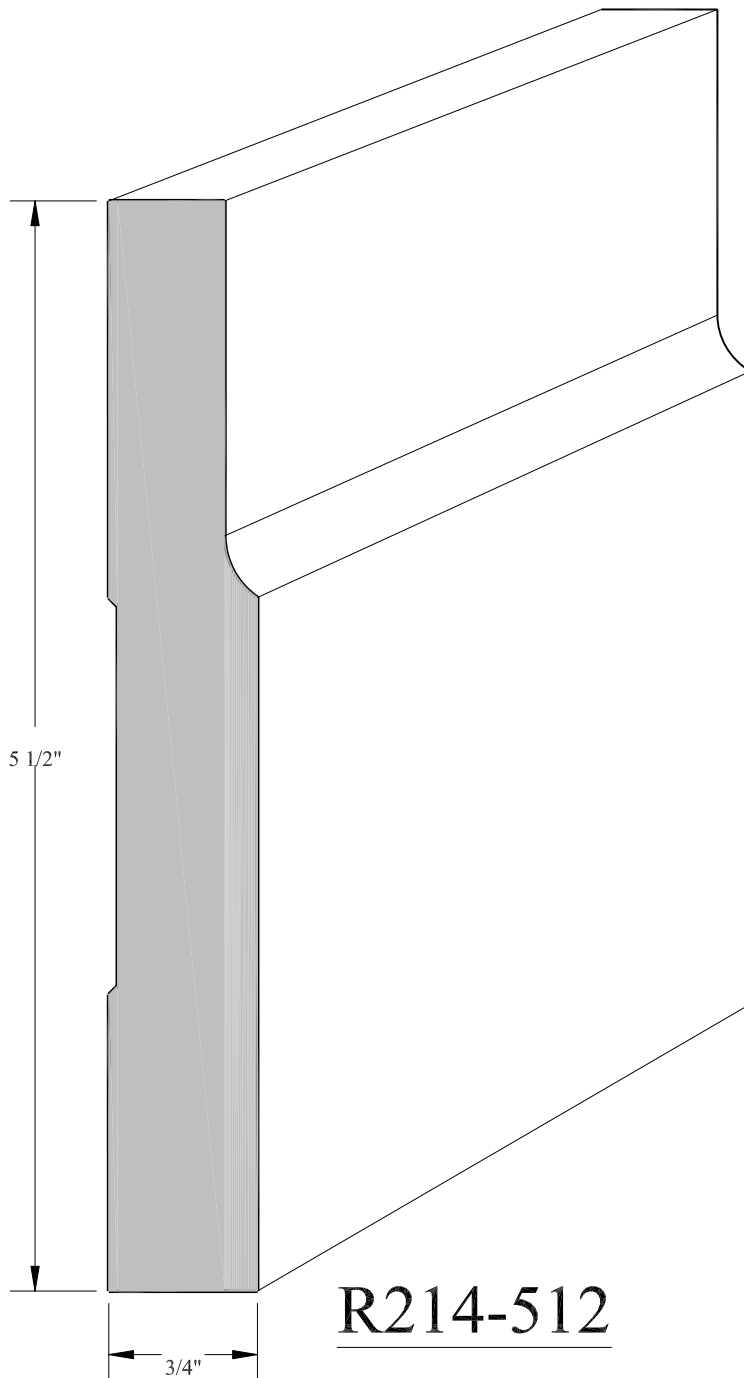


Baseboards

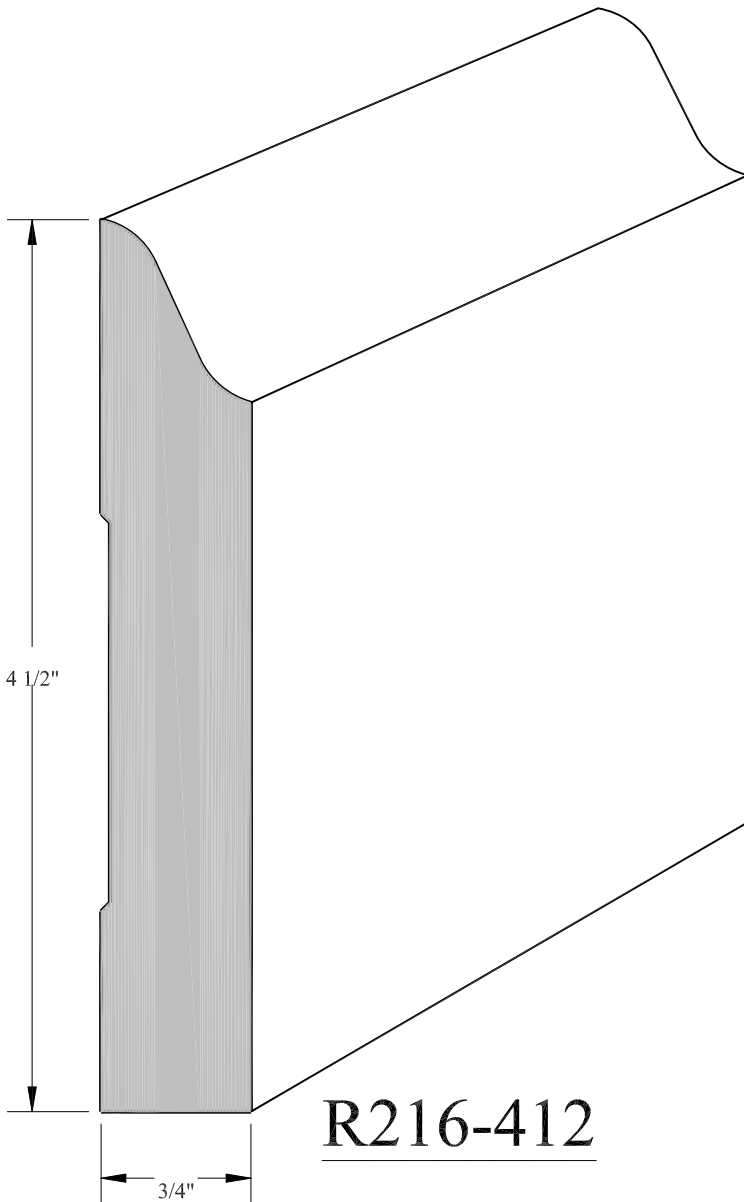



R216-412



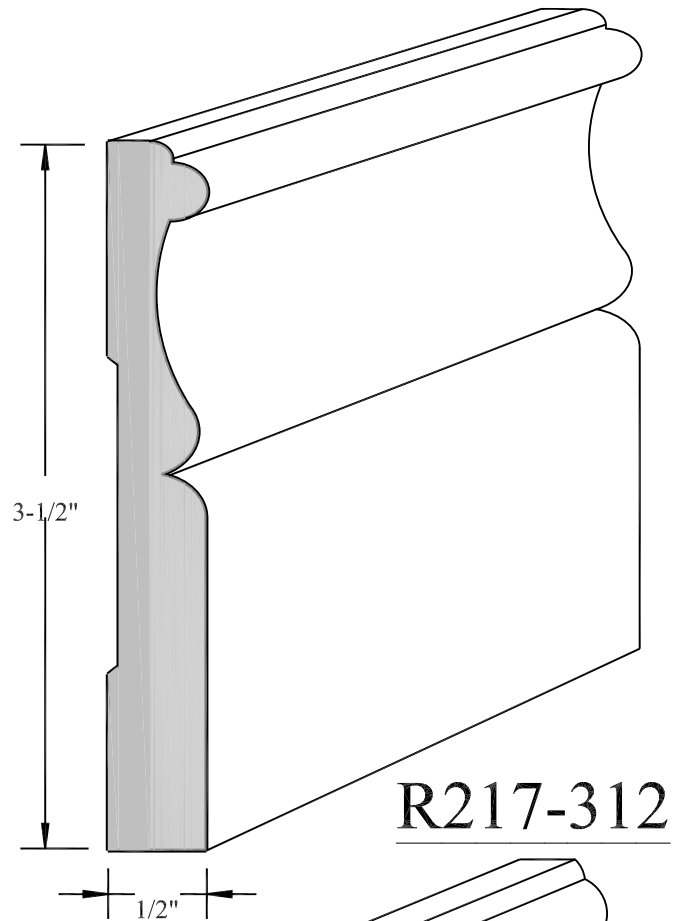


R217-312

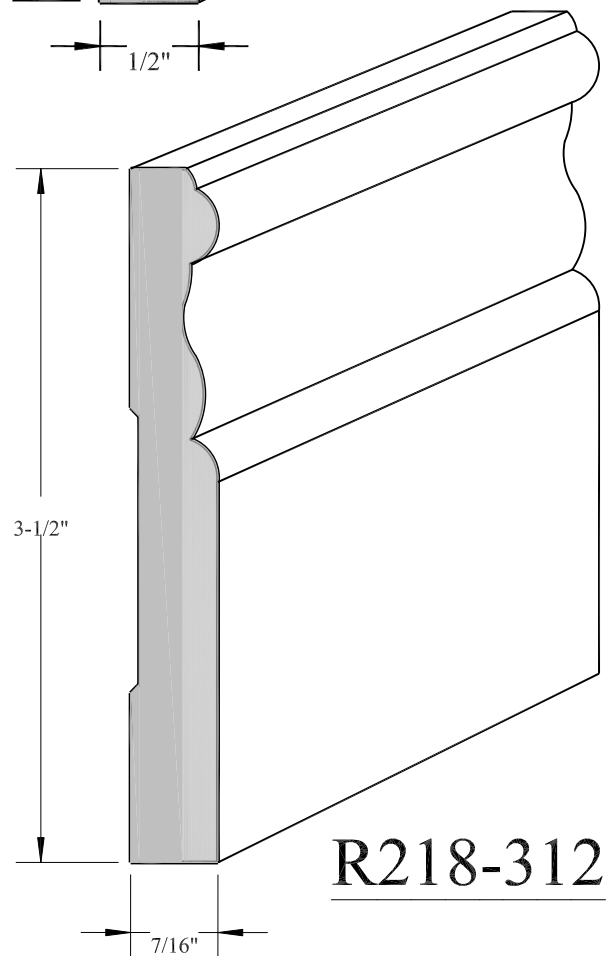



R218-312

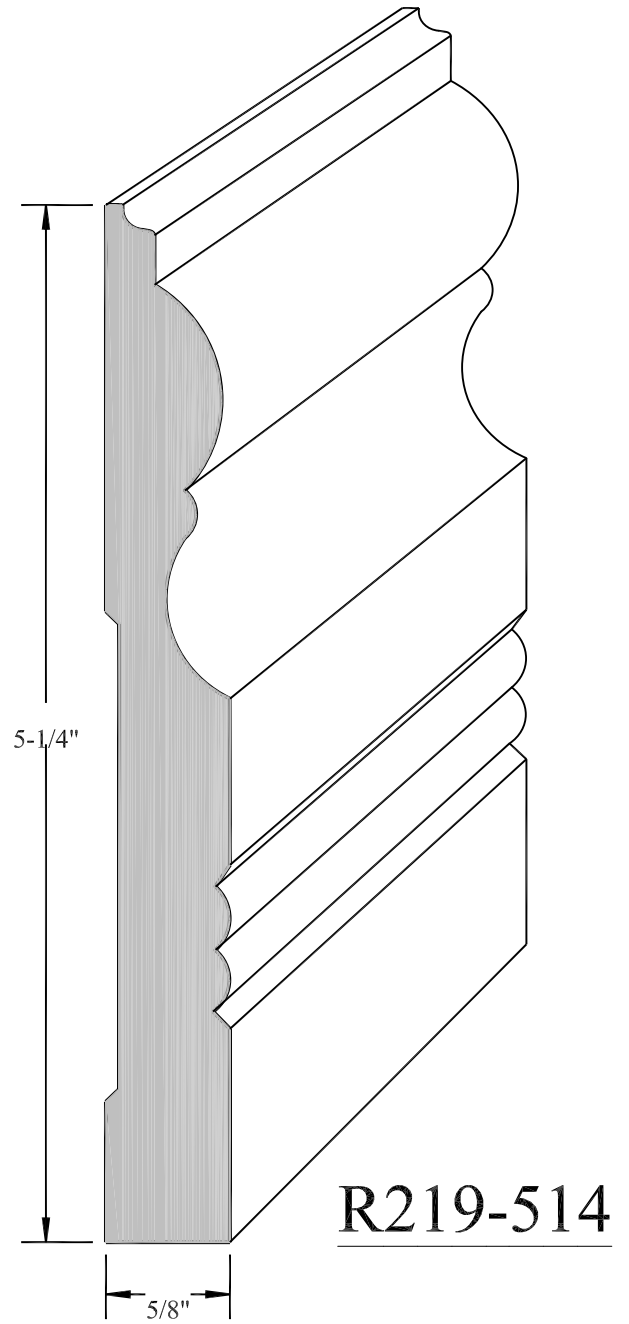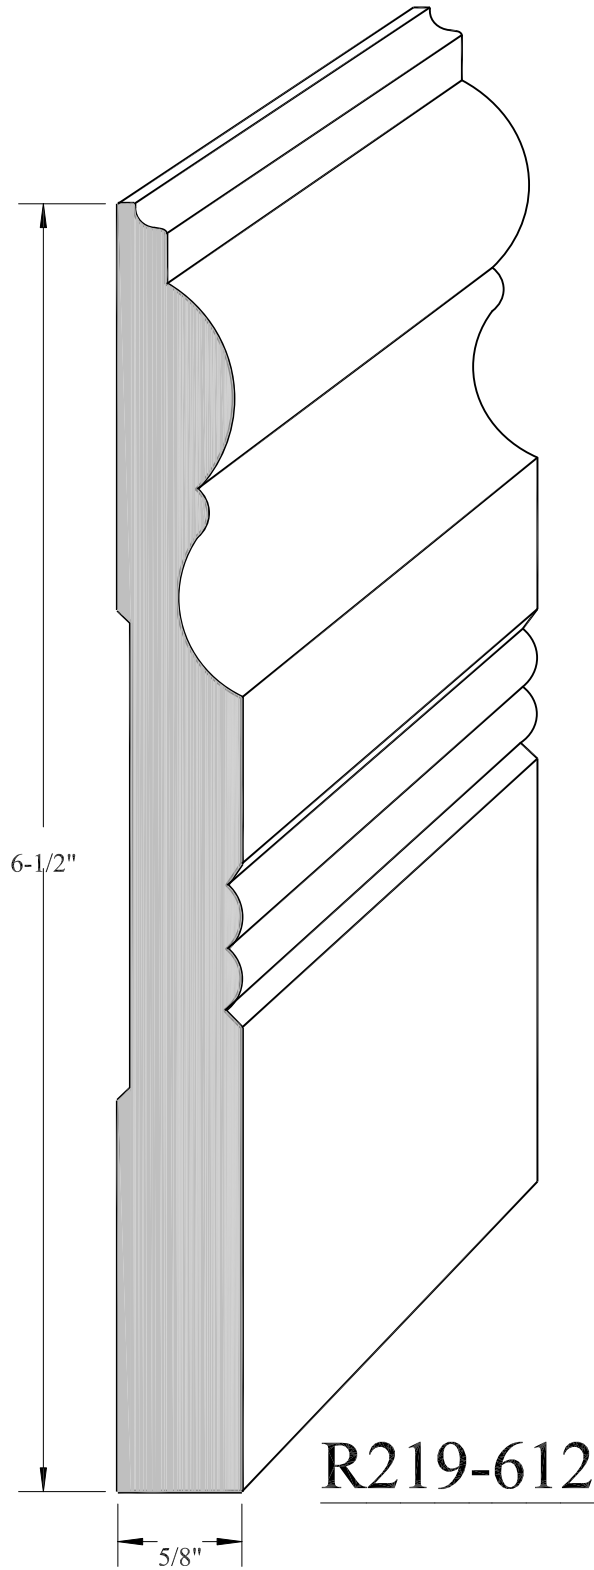

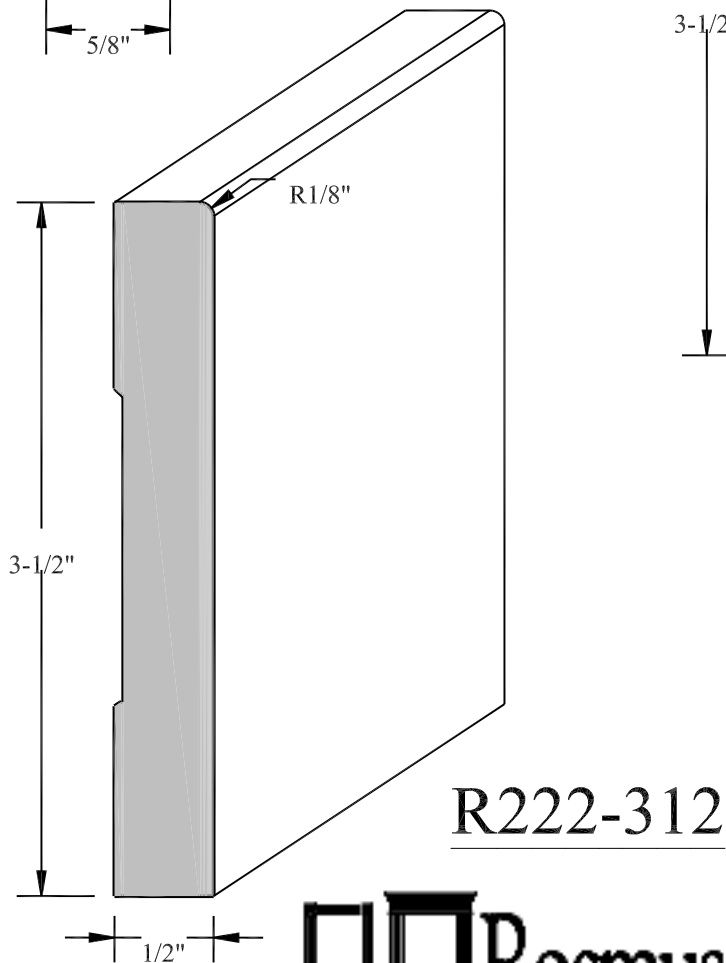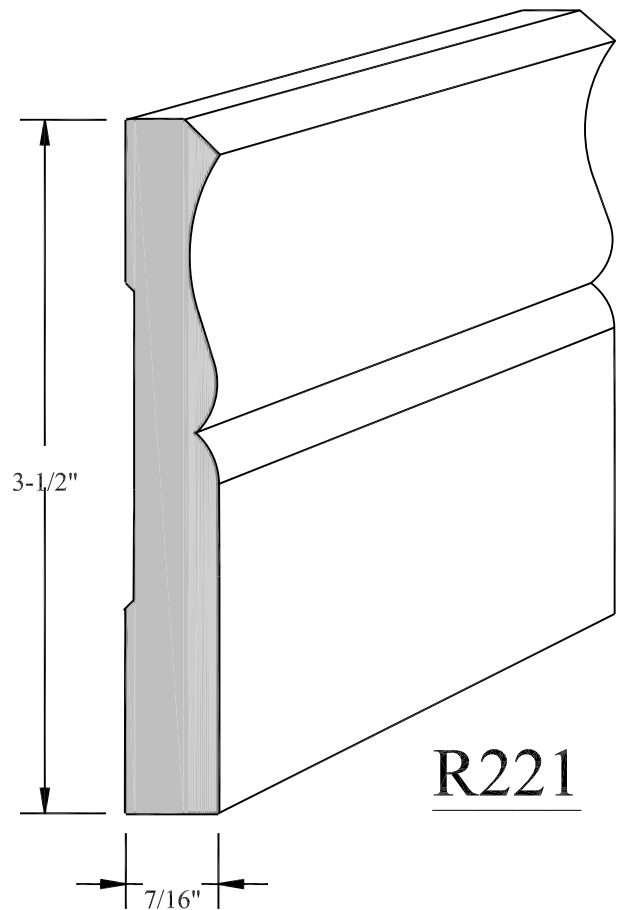
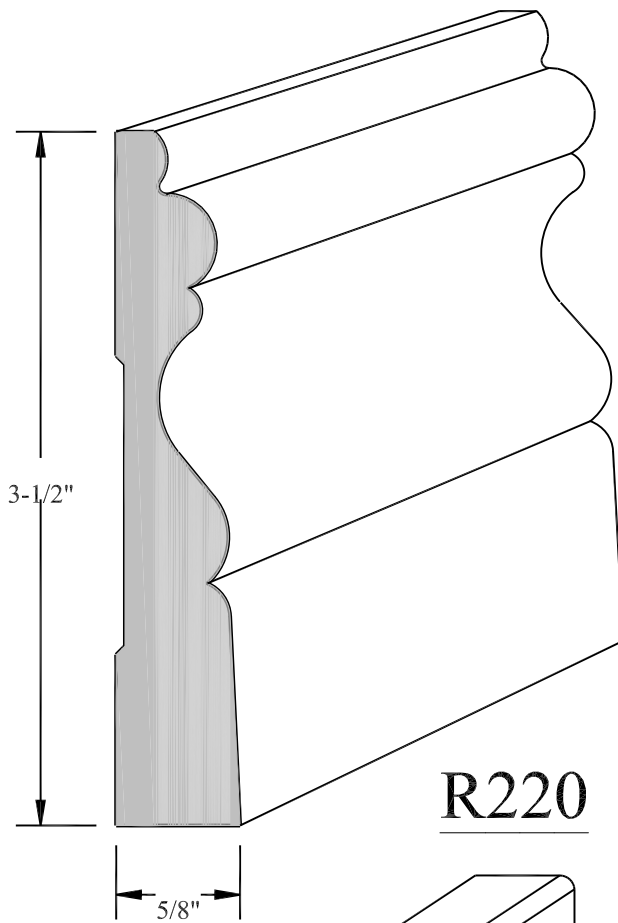




Add Lasting Value To Your Home • Traditional Designs In Solid Wood

Baseboards


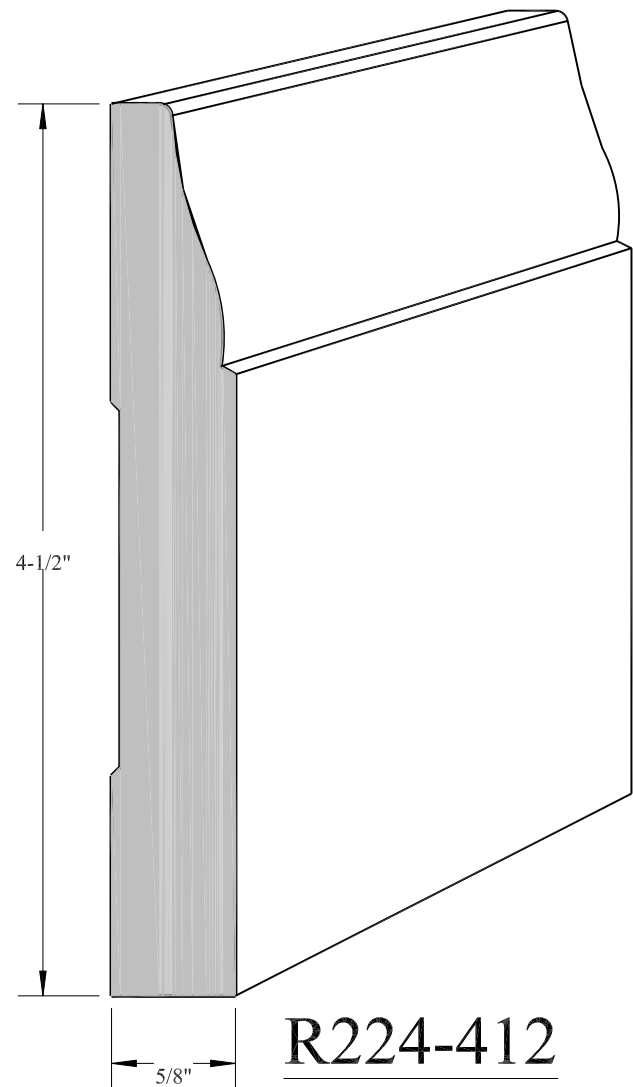
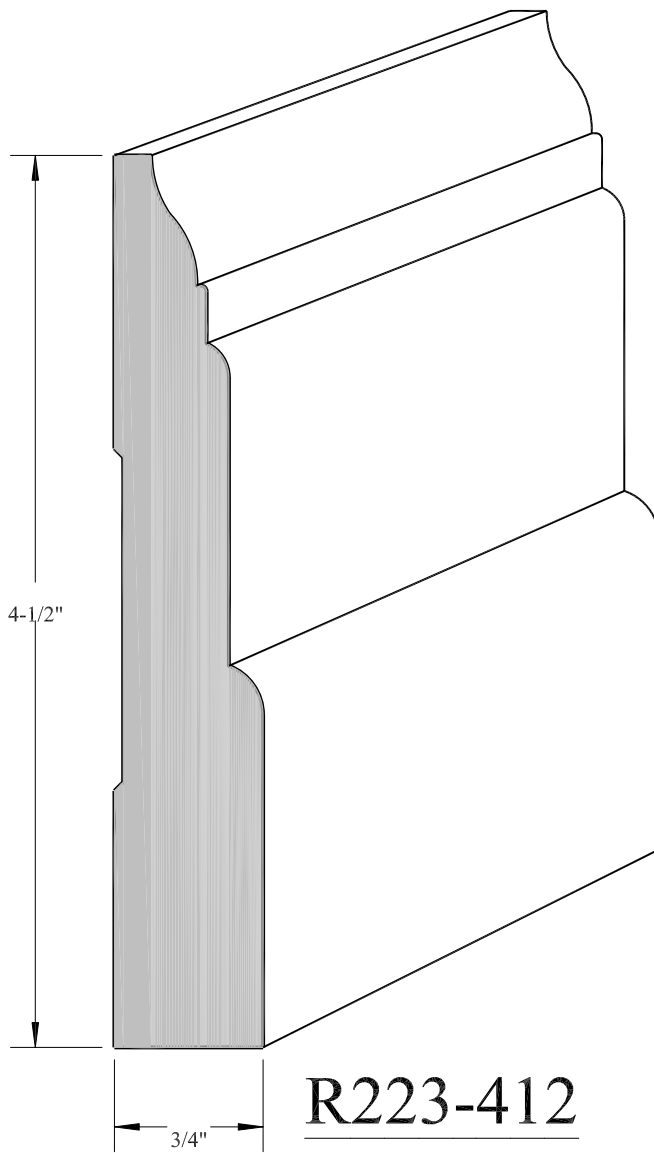


Baseboards

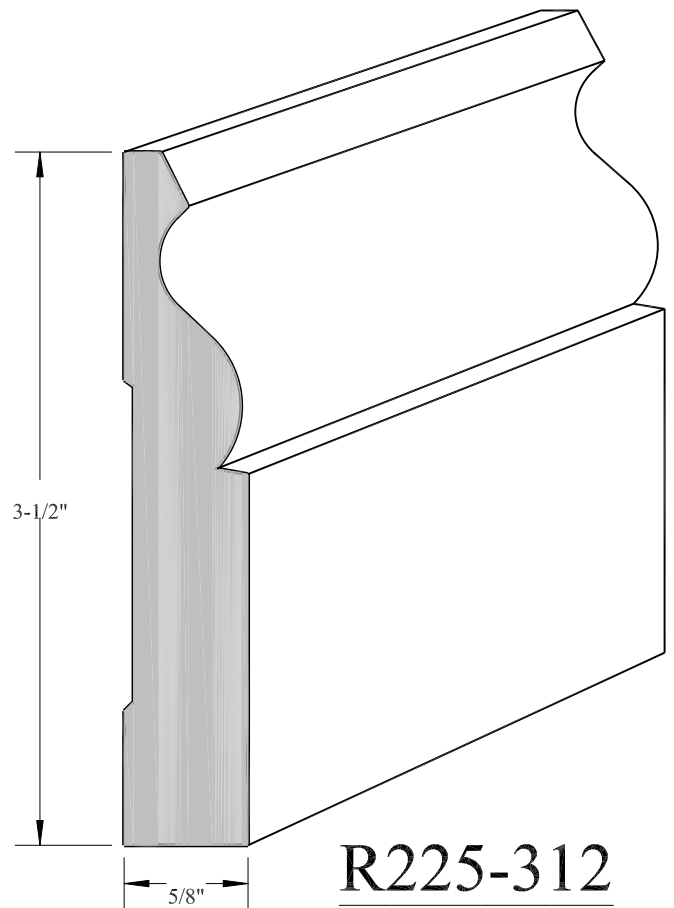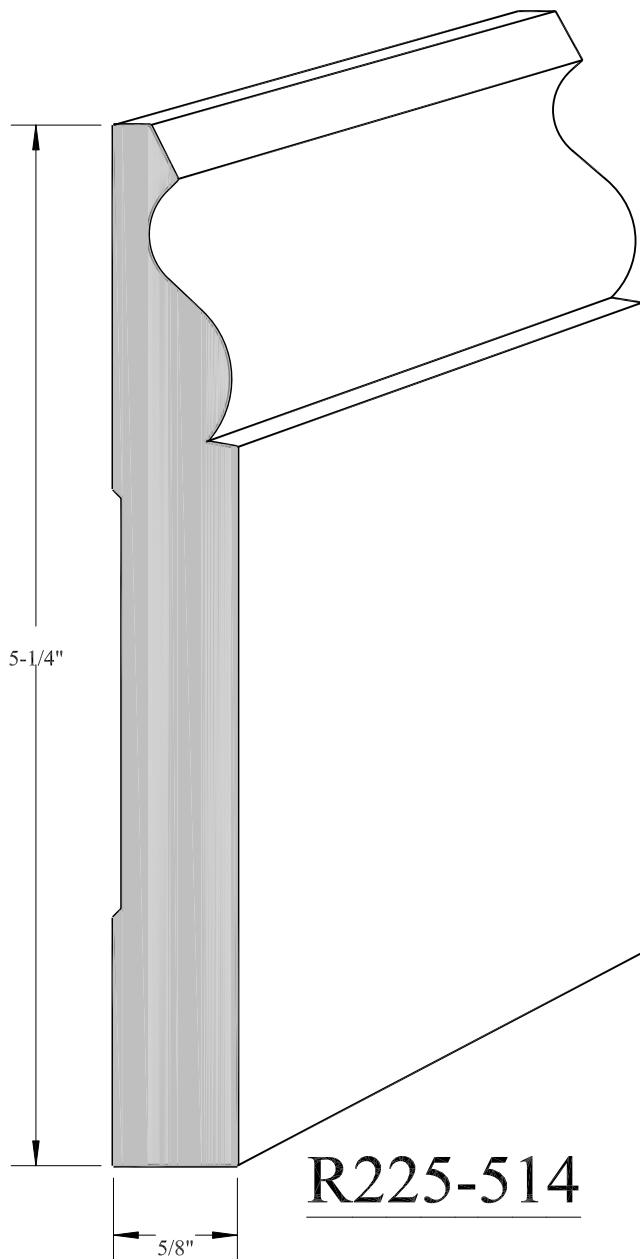

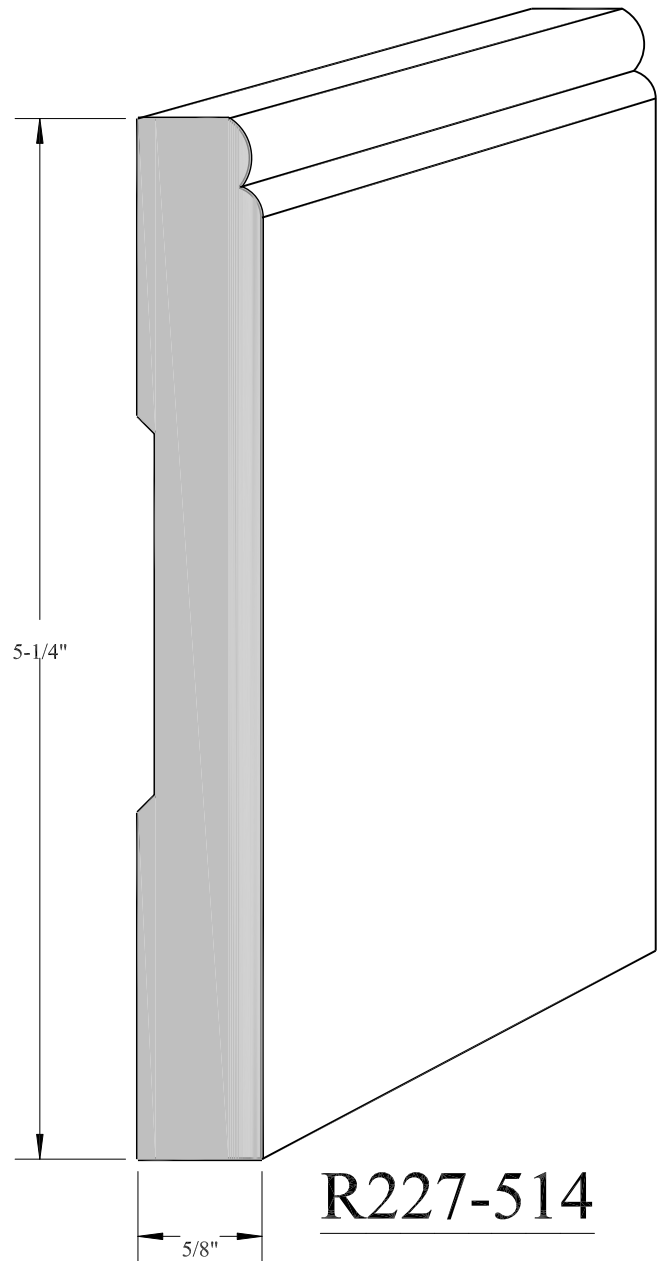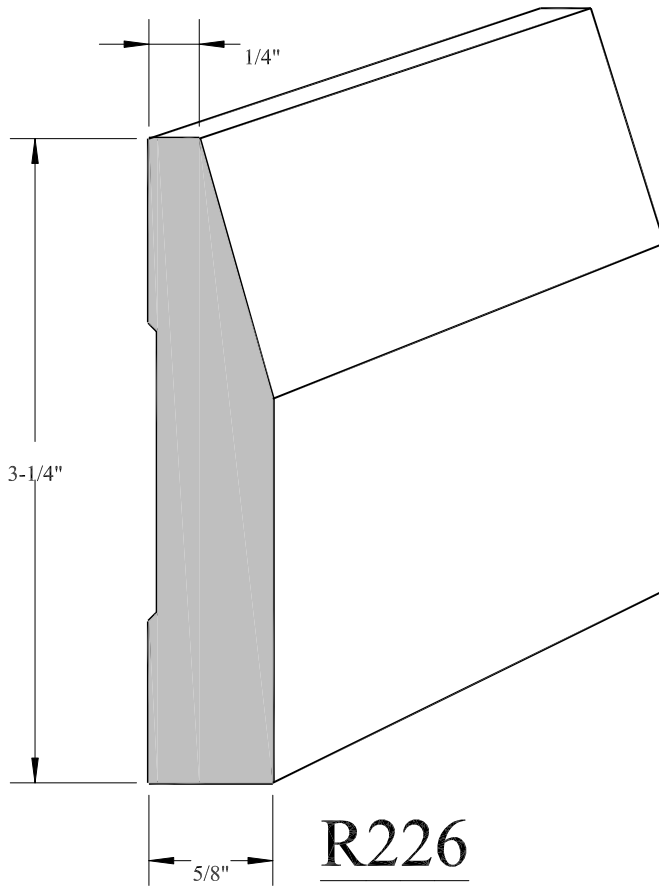


Baseboards

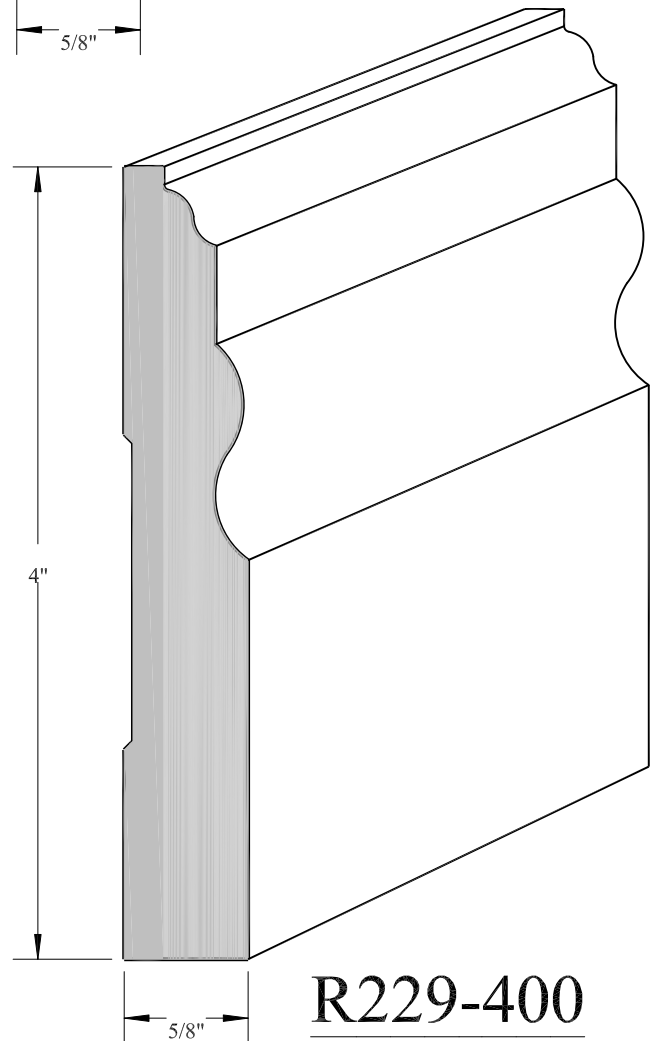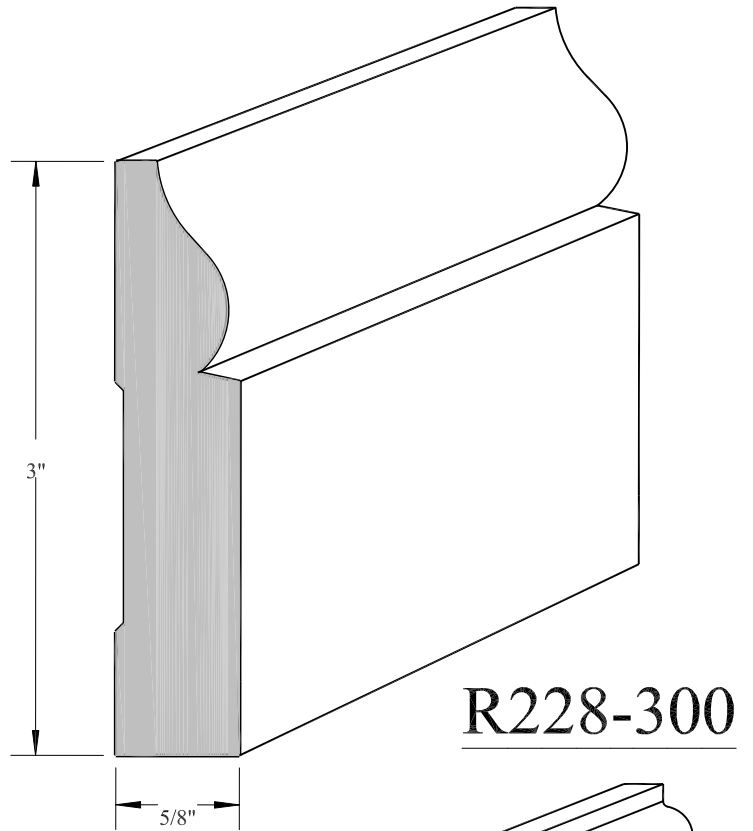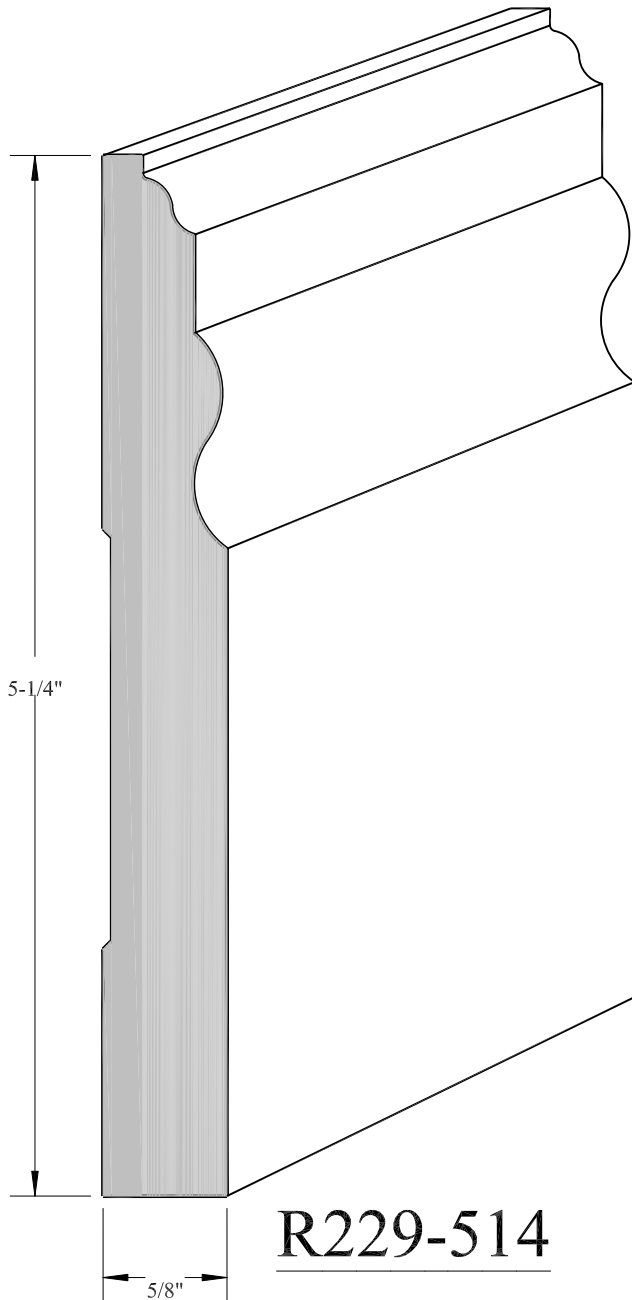


Add Lasting Value To Your Home • Traditional Designs In Solid Wood

Baseboards

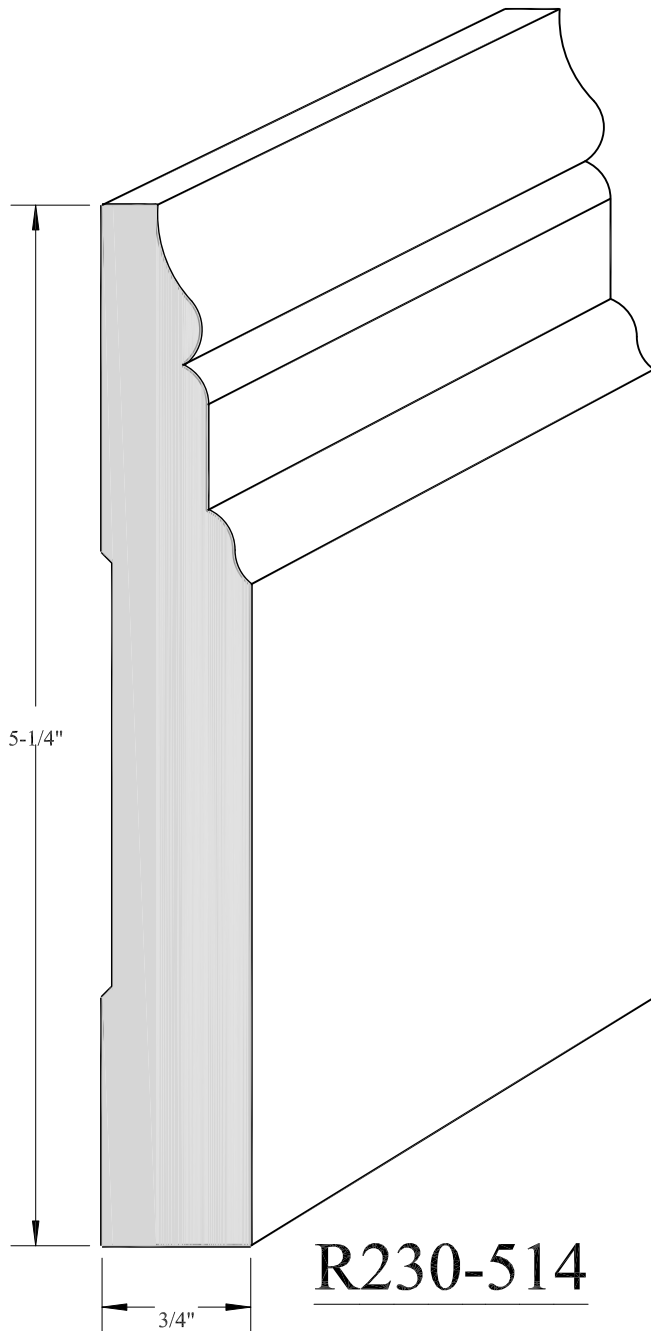



R230-514


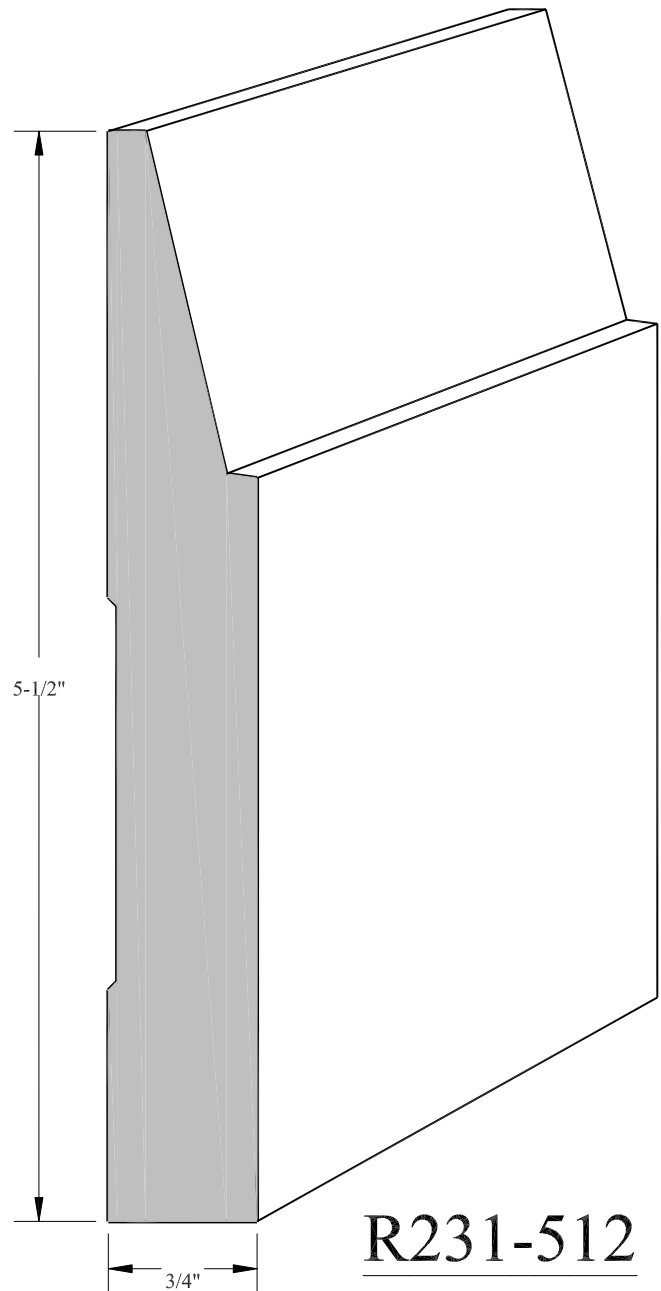



R231-512




Add Lasting Value To Your Home • Traditional Designs In Solid Wood

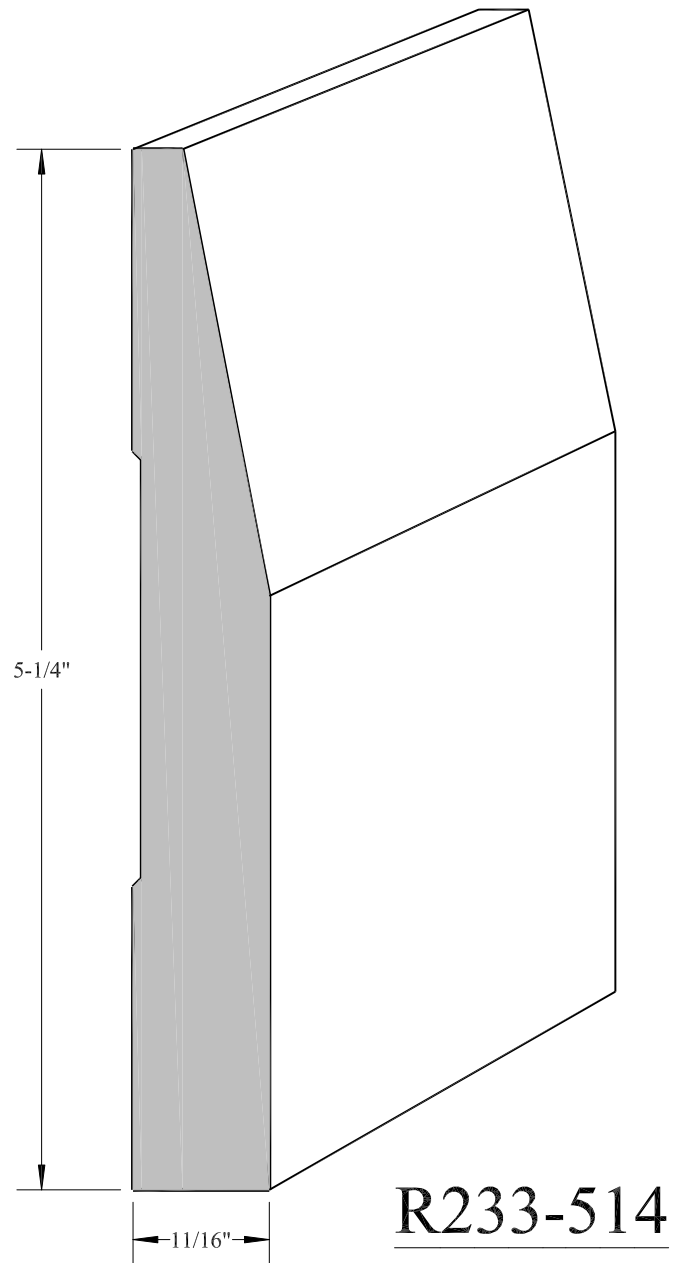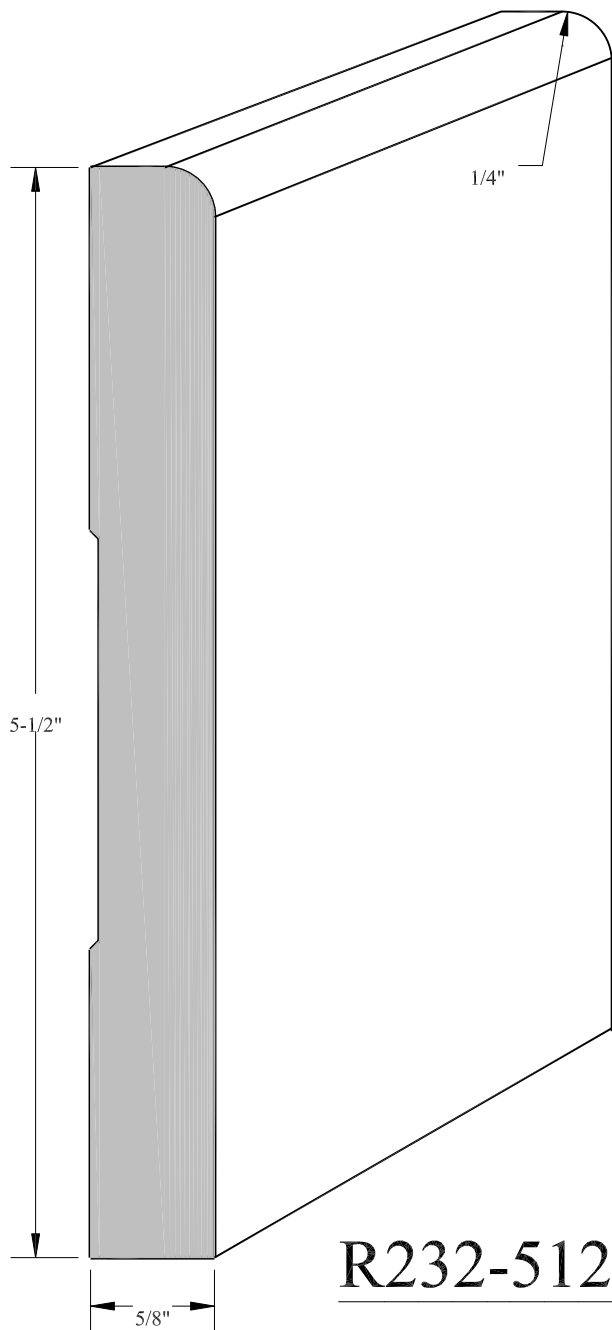

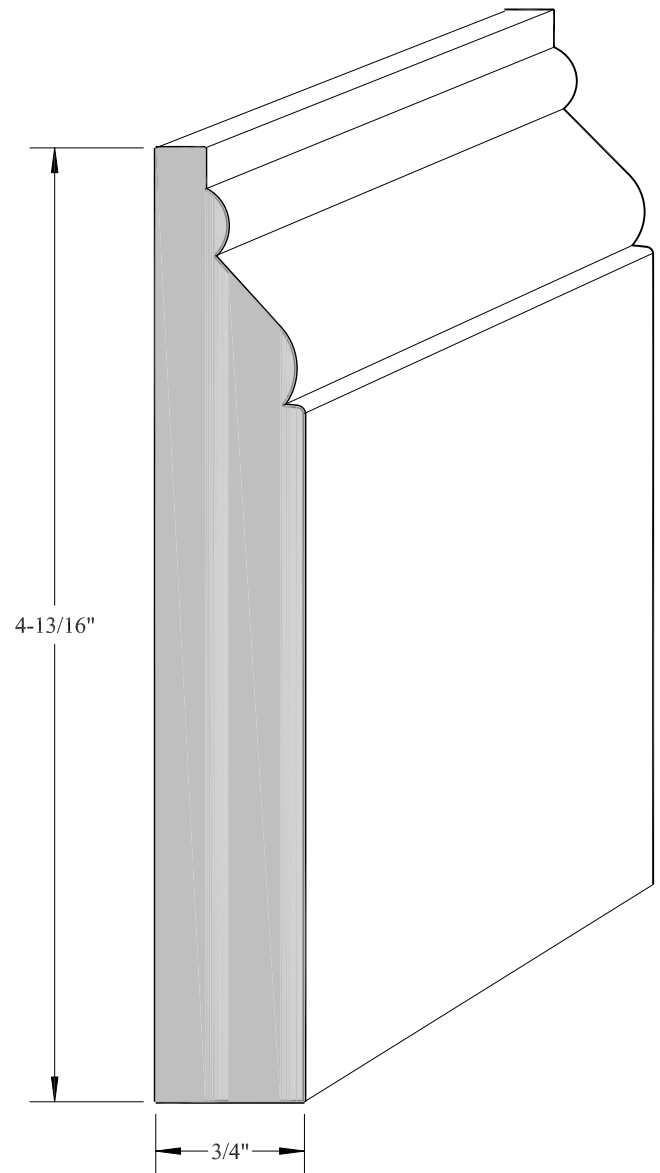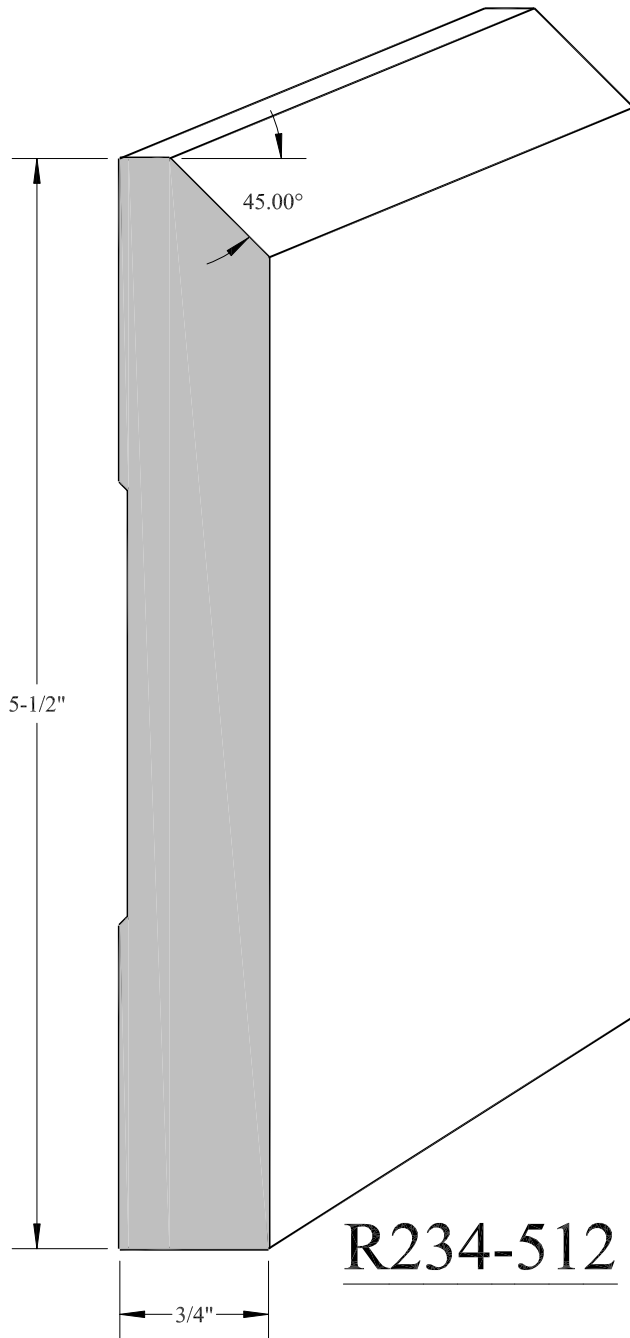

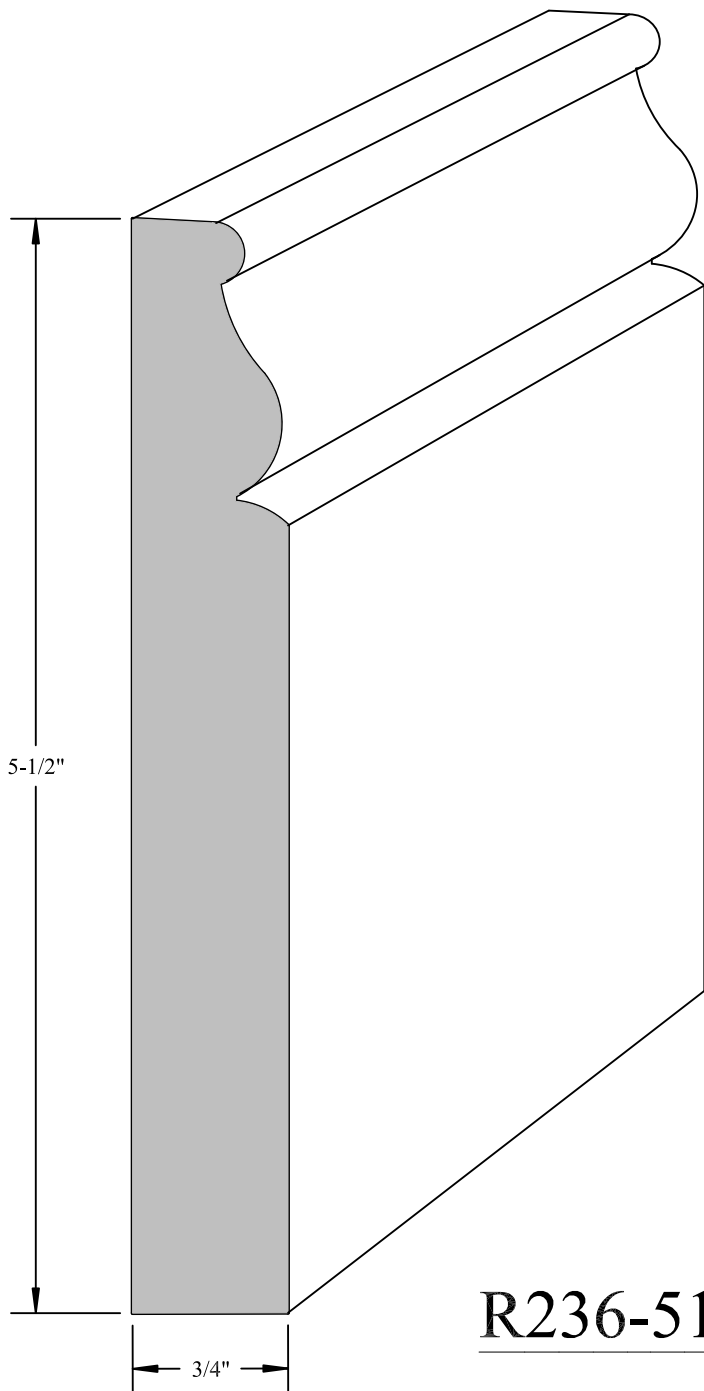

R236-512

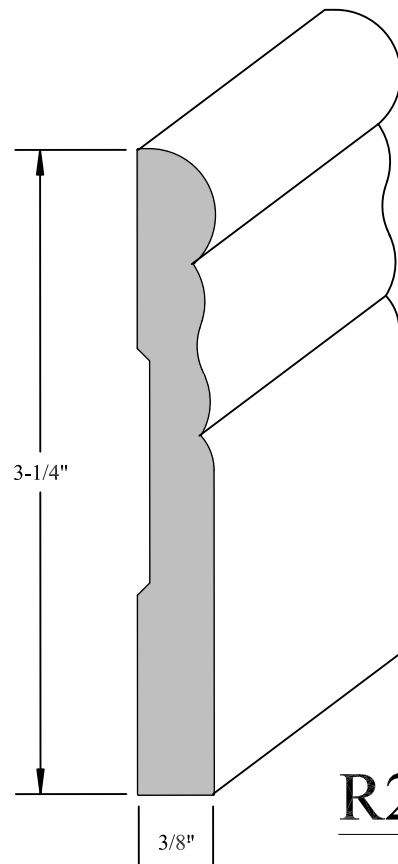


R237




Add Lasting Value To Your Home • Traditional Designs In Solid Wood

Baseboards

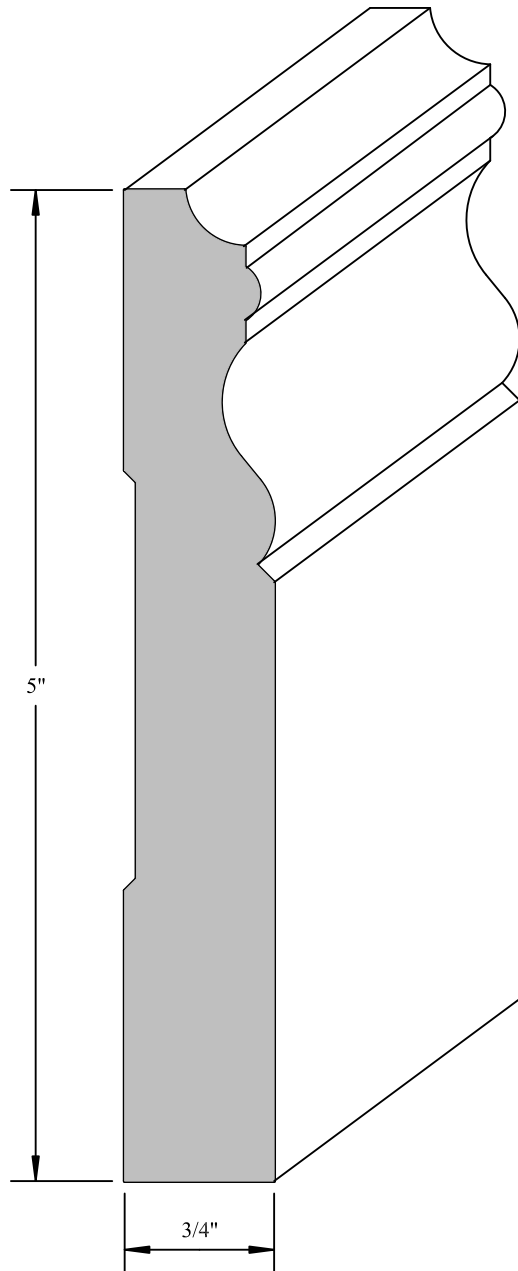

R238-500

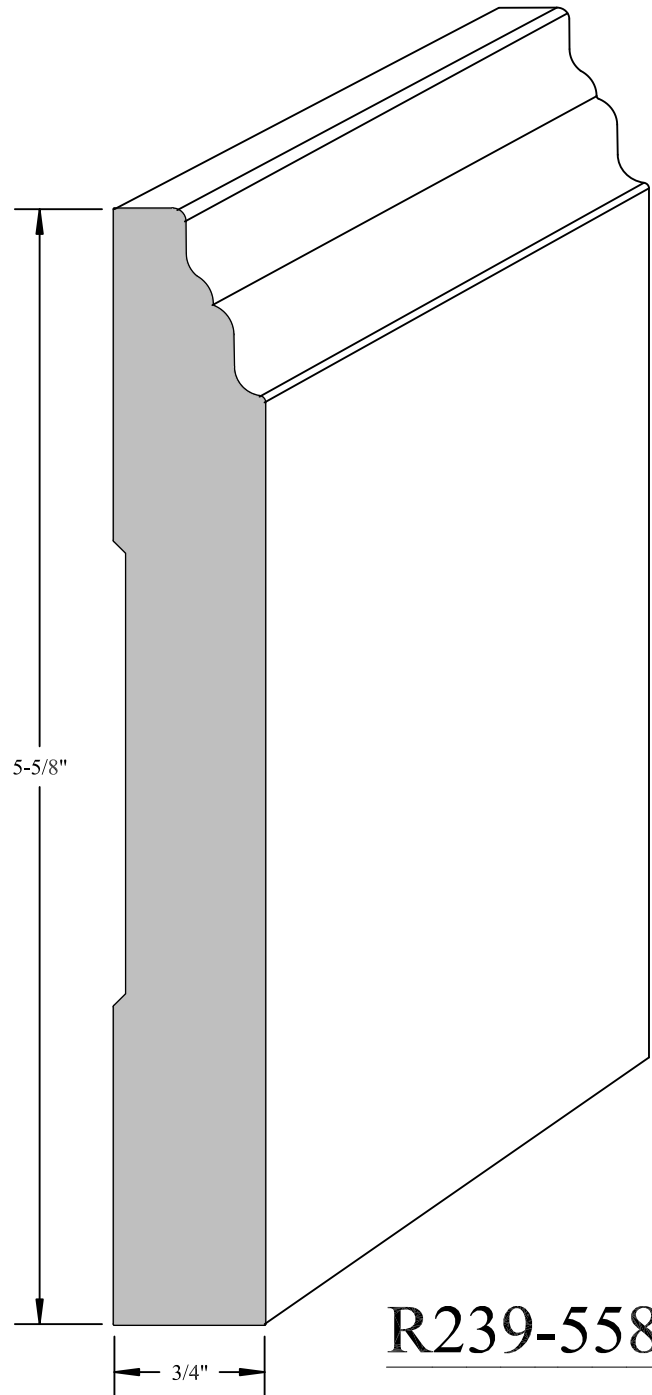


R239-558


Size range 2-1/2" to 5-5/8"



Add Lasting Value To Your Home • Traditional Designs In Solid Wood

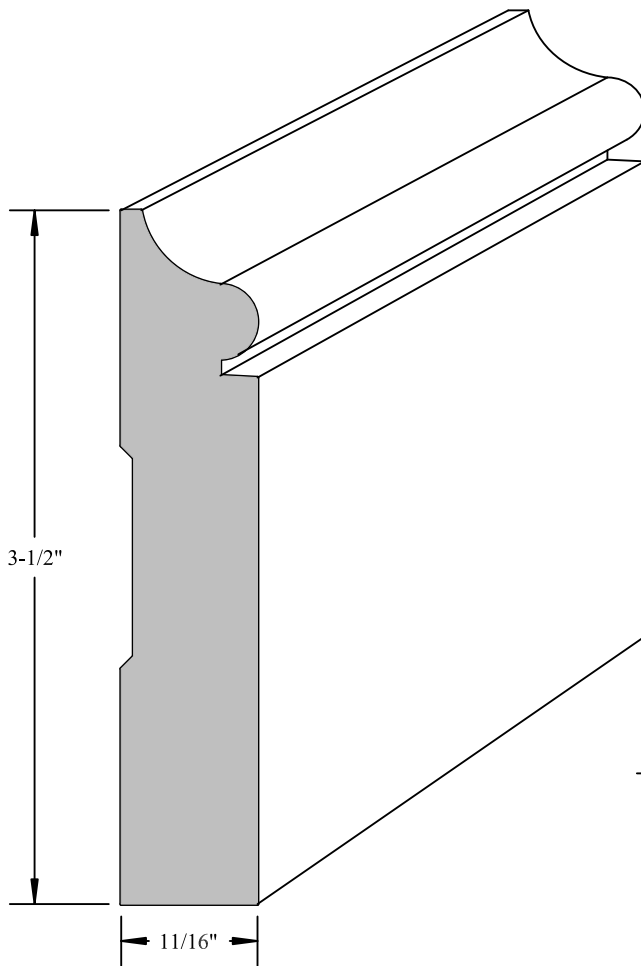


R240-312
Max Size 3-1/2"

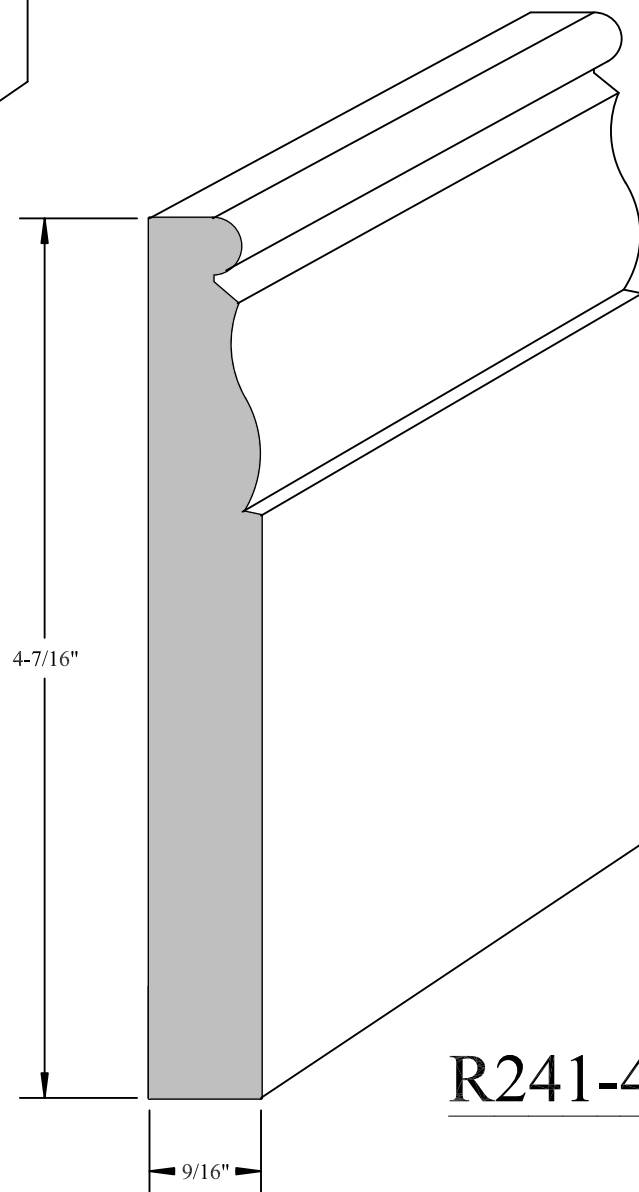

R241-4716






Add Lasting Value To Your Home • Traditional Designs In Solid Wood

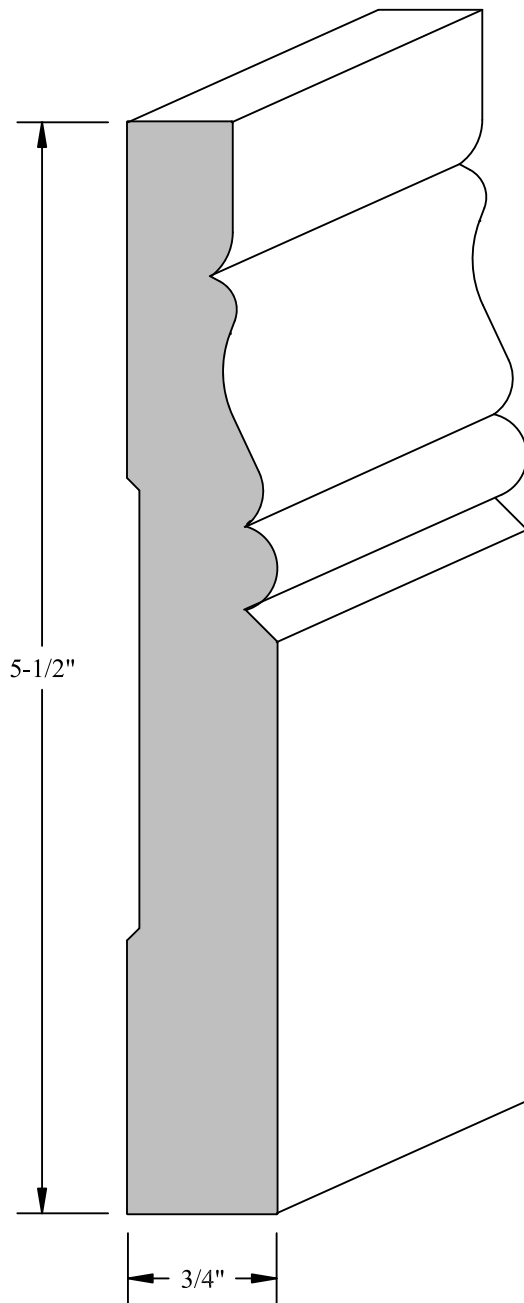


R242-512




Add Lasting Value To Your Home • Traditional Designs In Solid Wood

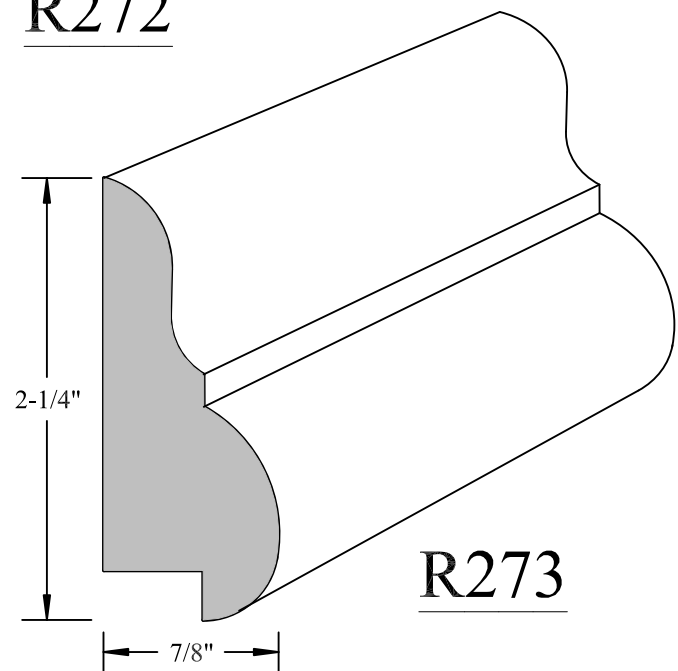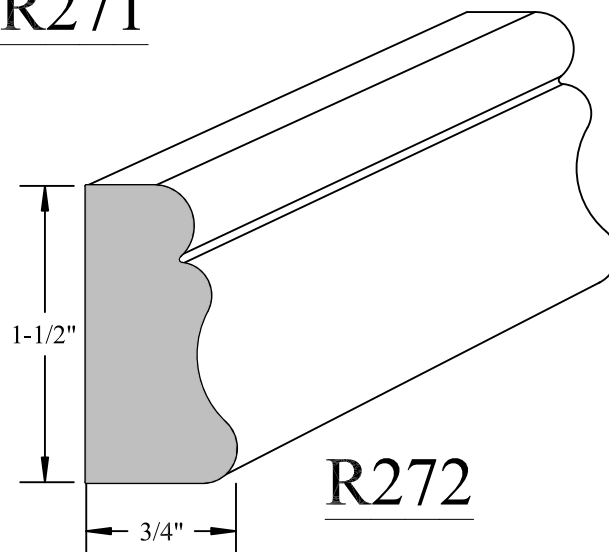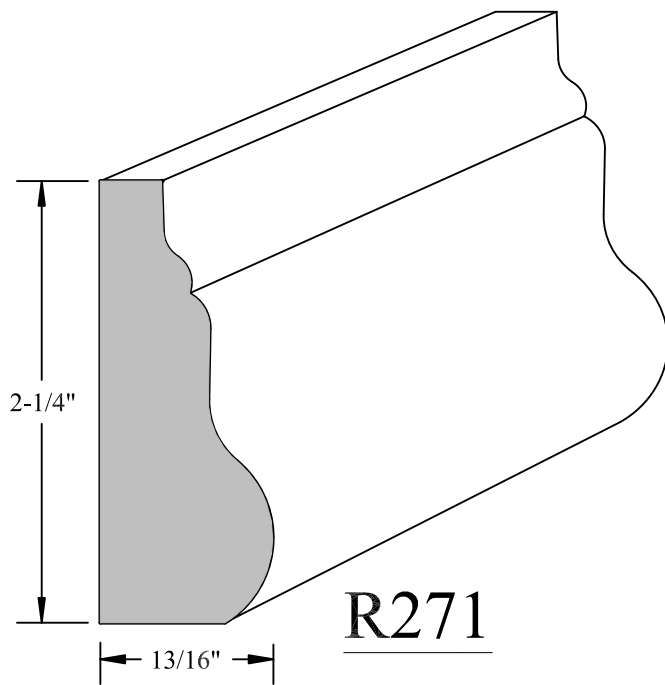


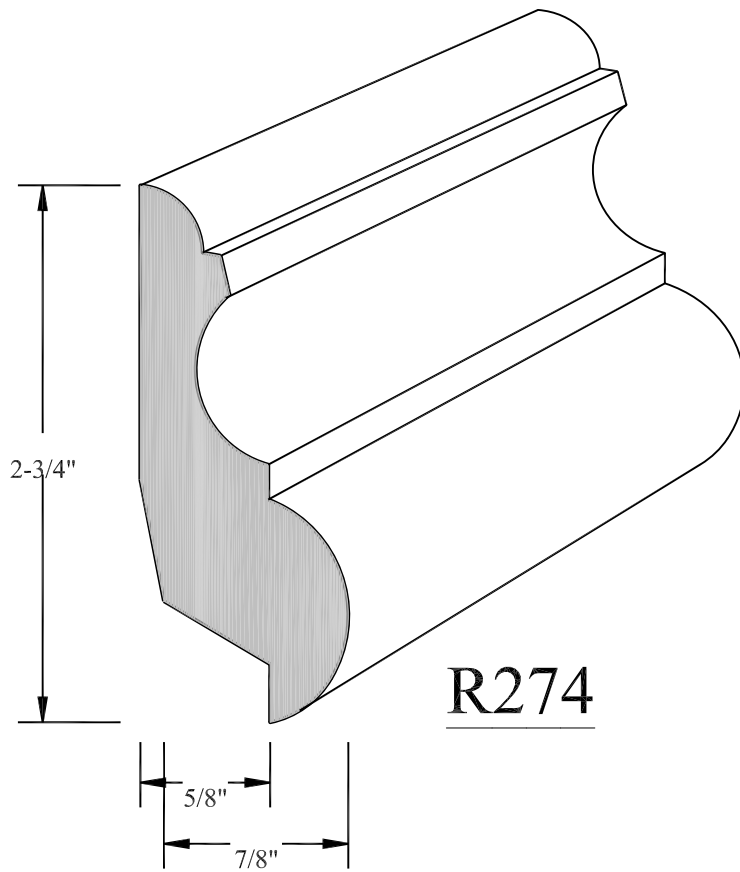


R274

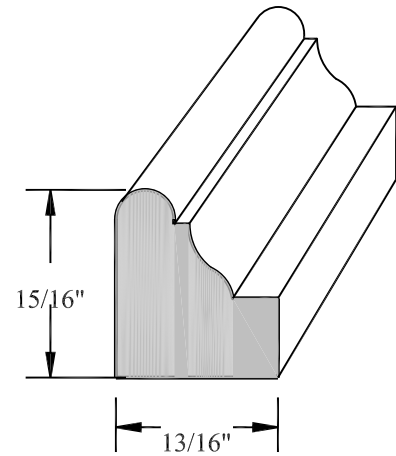

R275

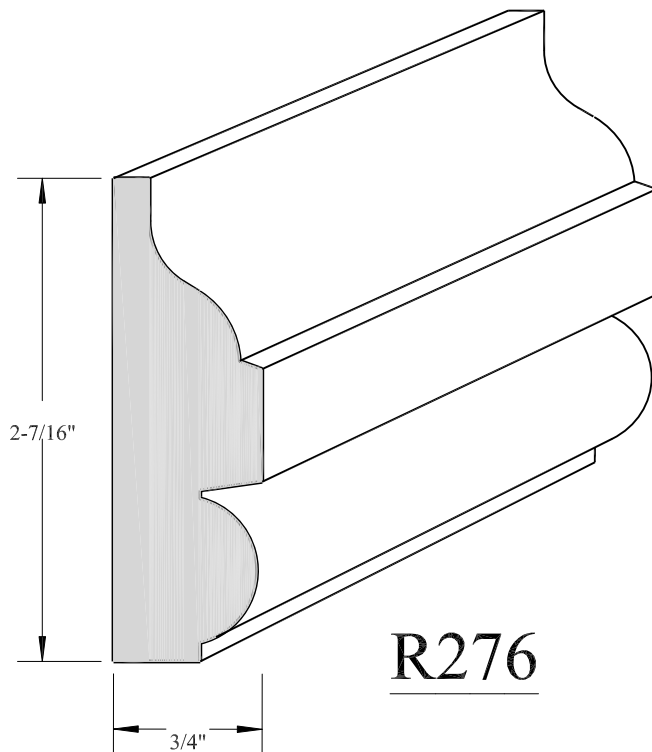


R276

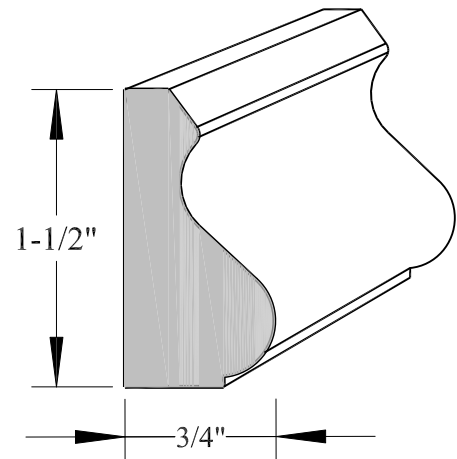


R277




Rasmussen's

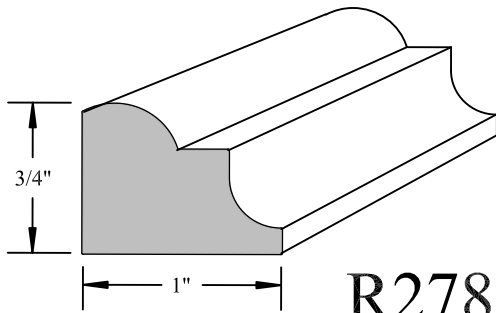

R278


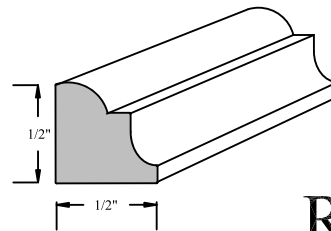






R279

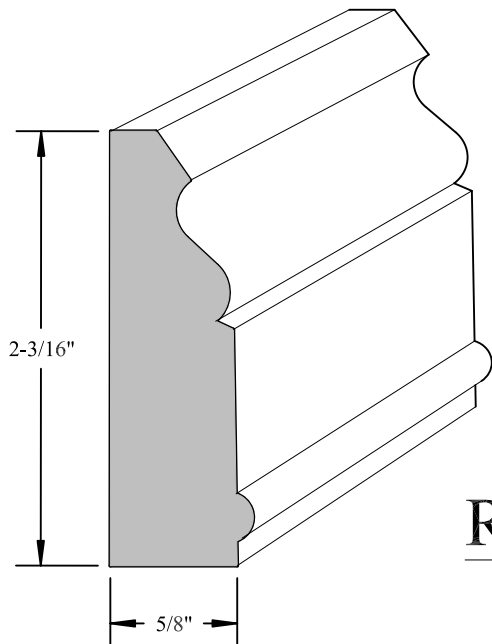




R280




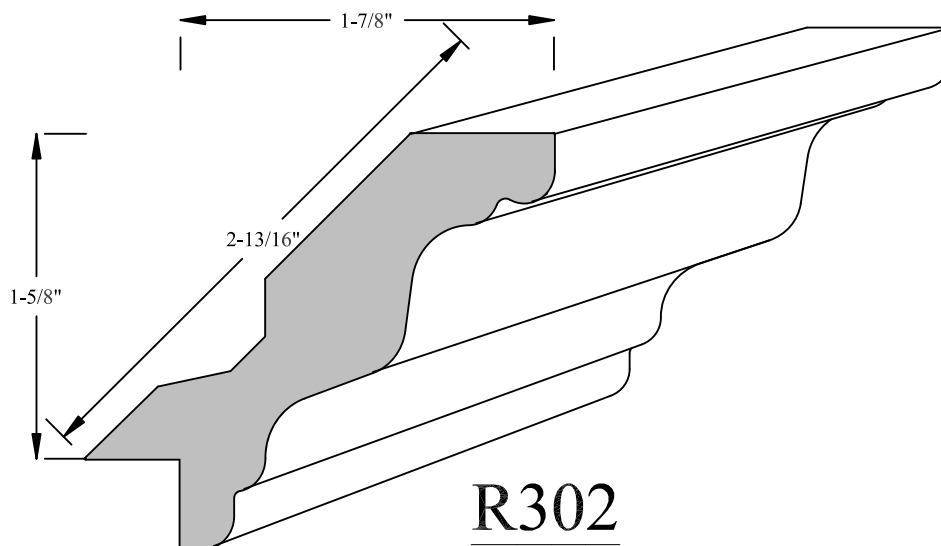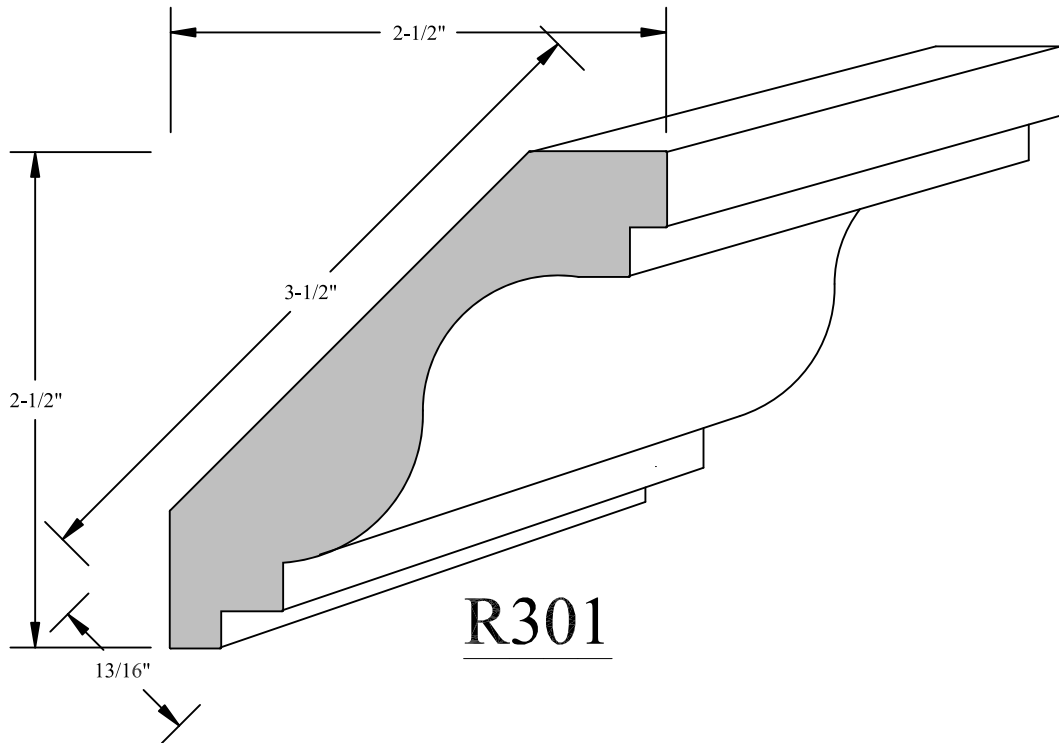


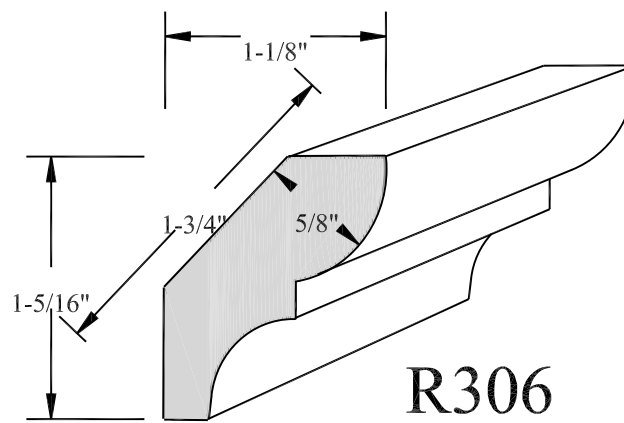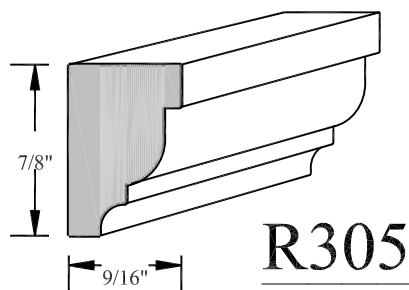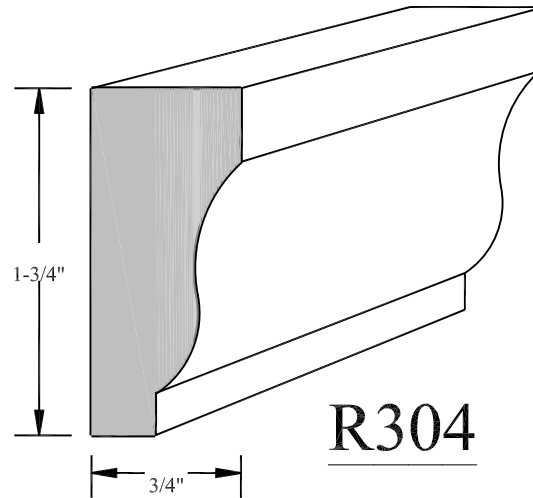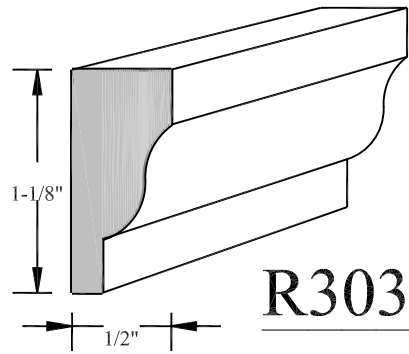


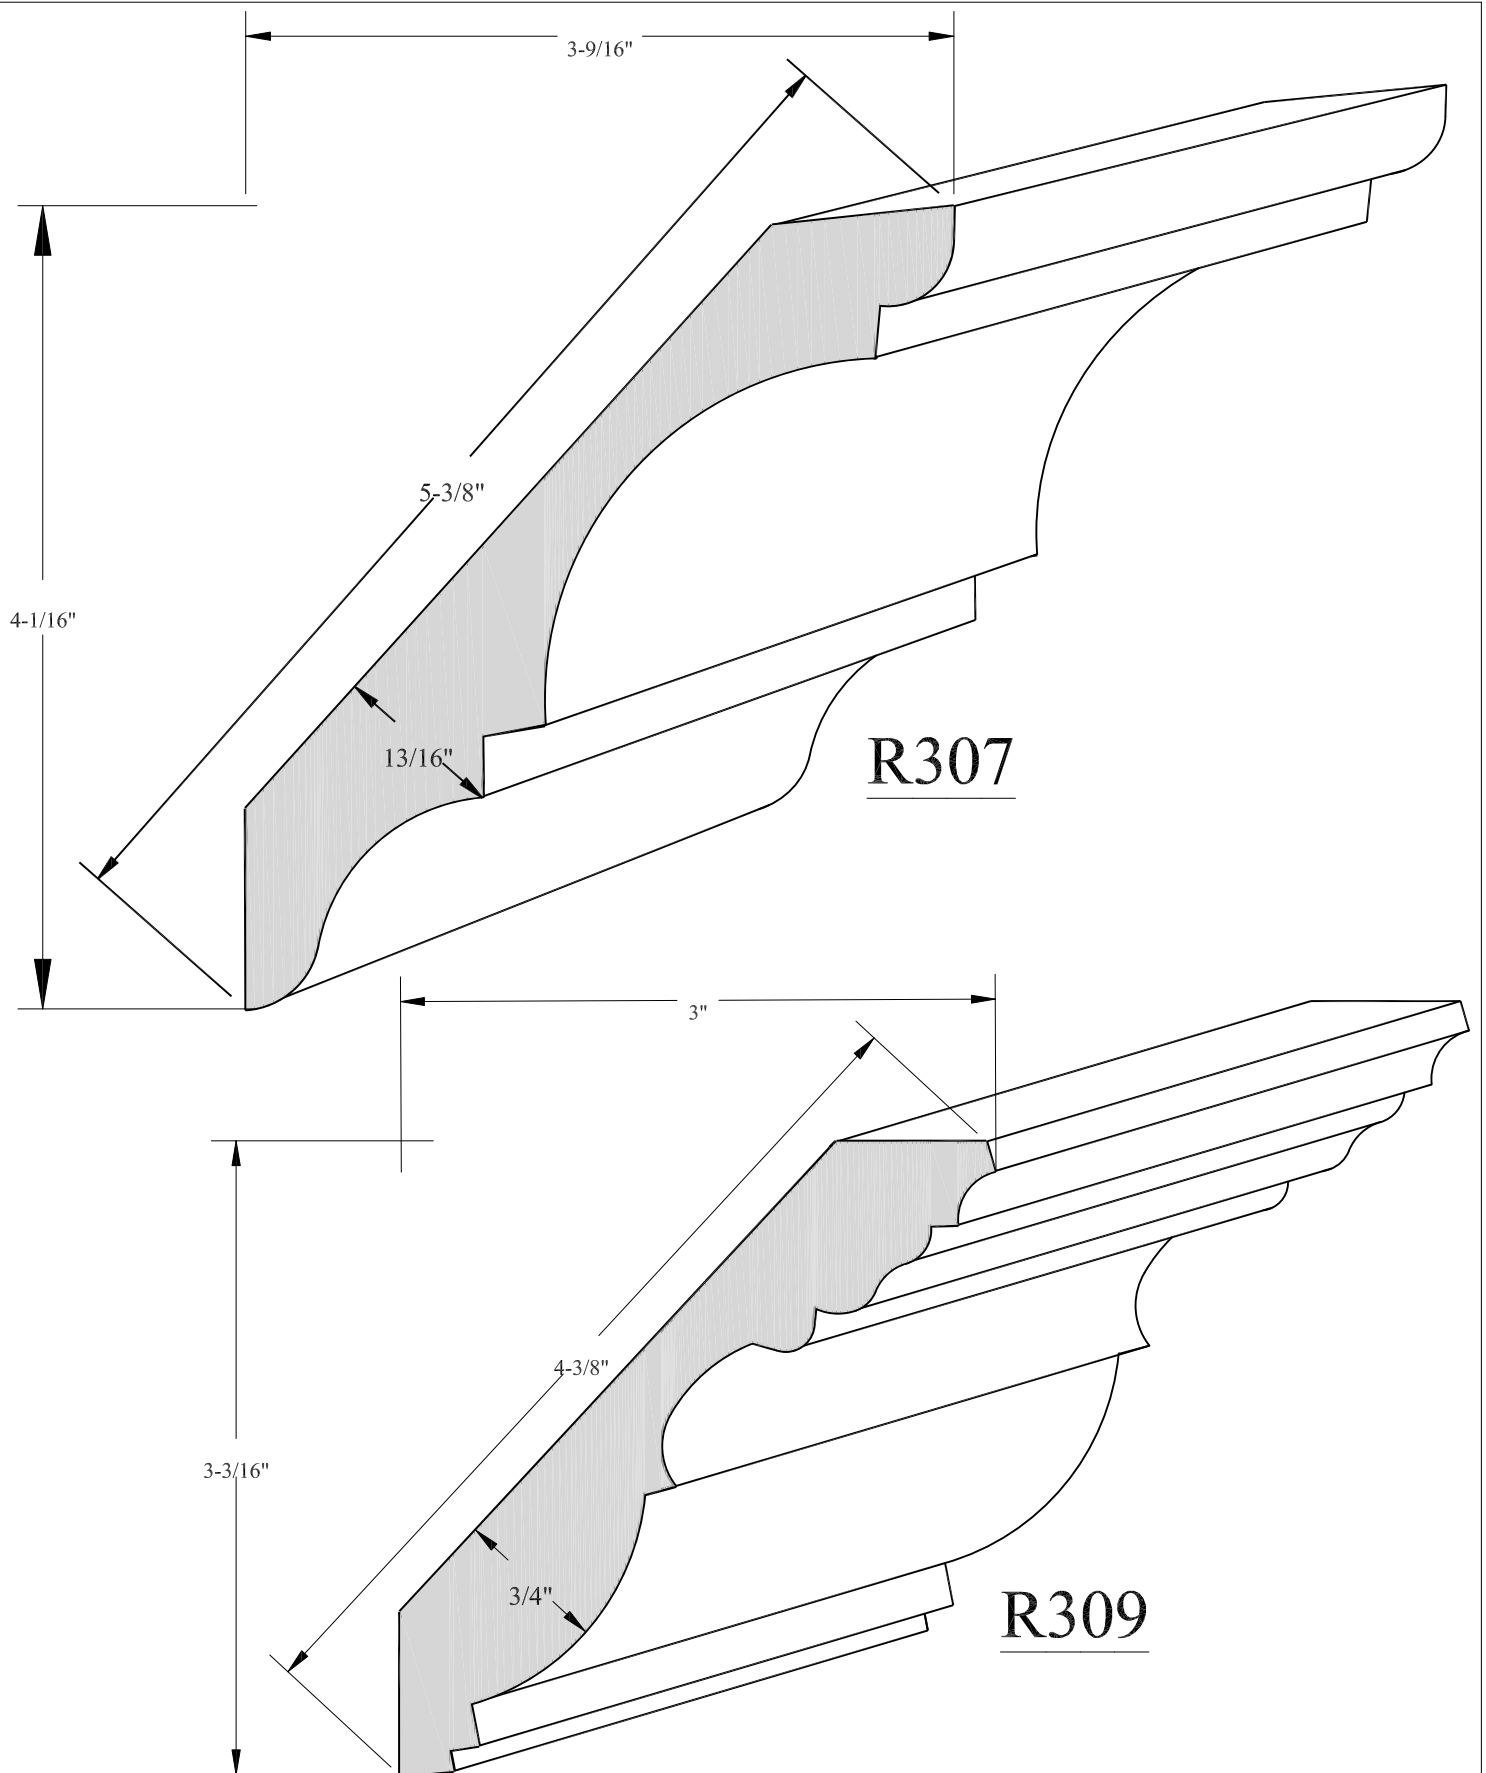


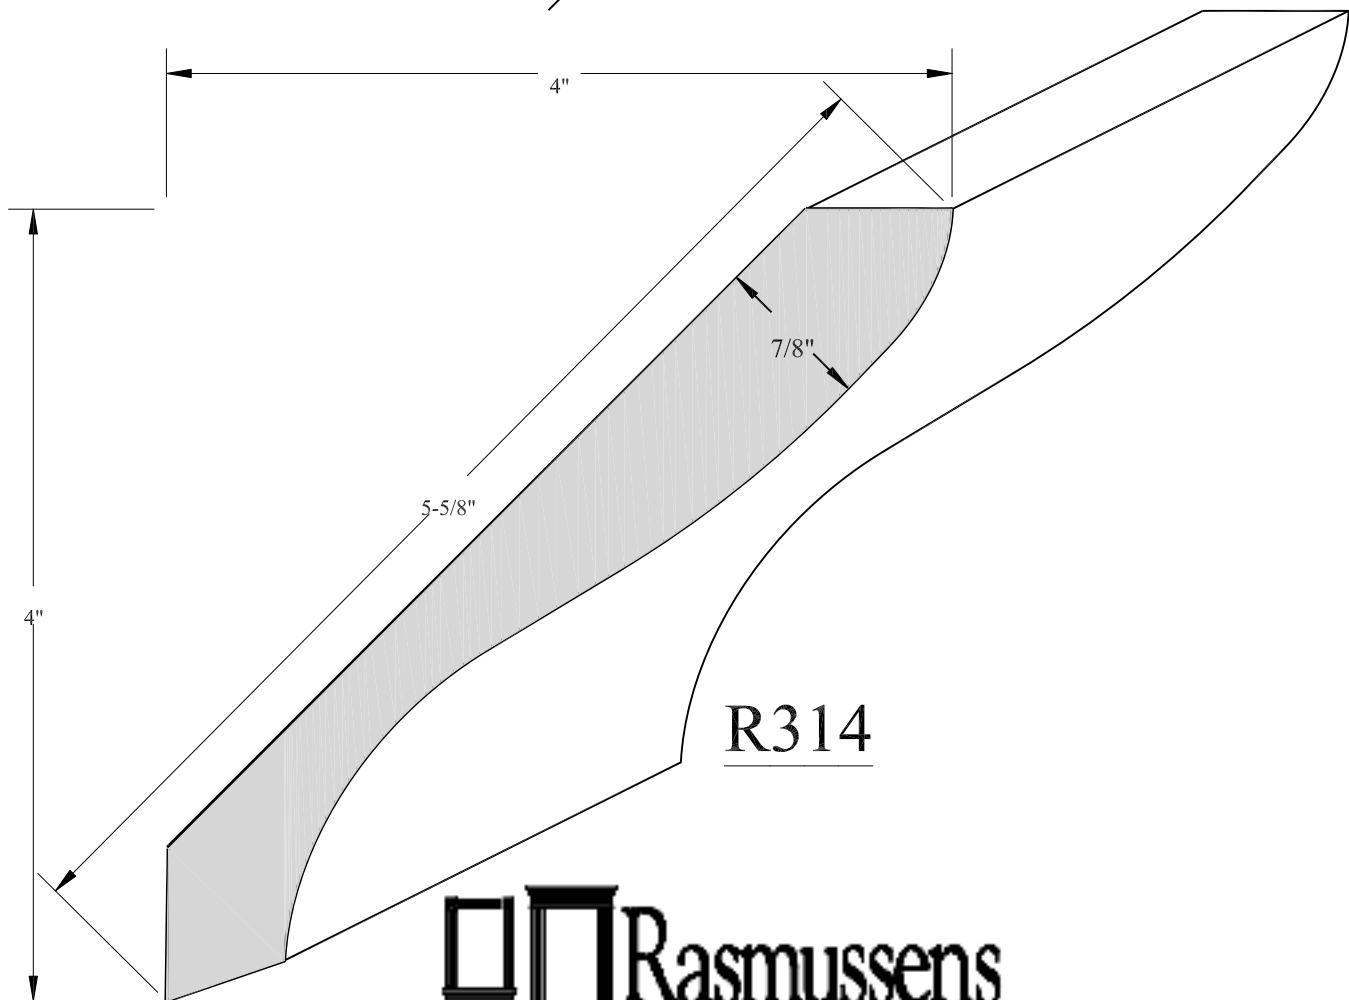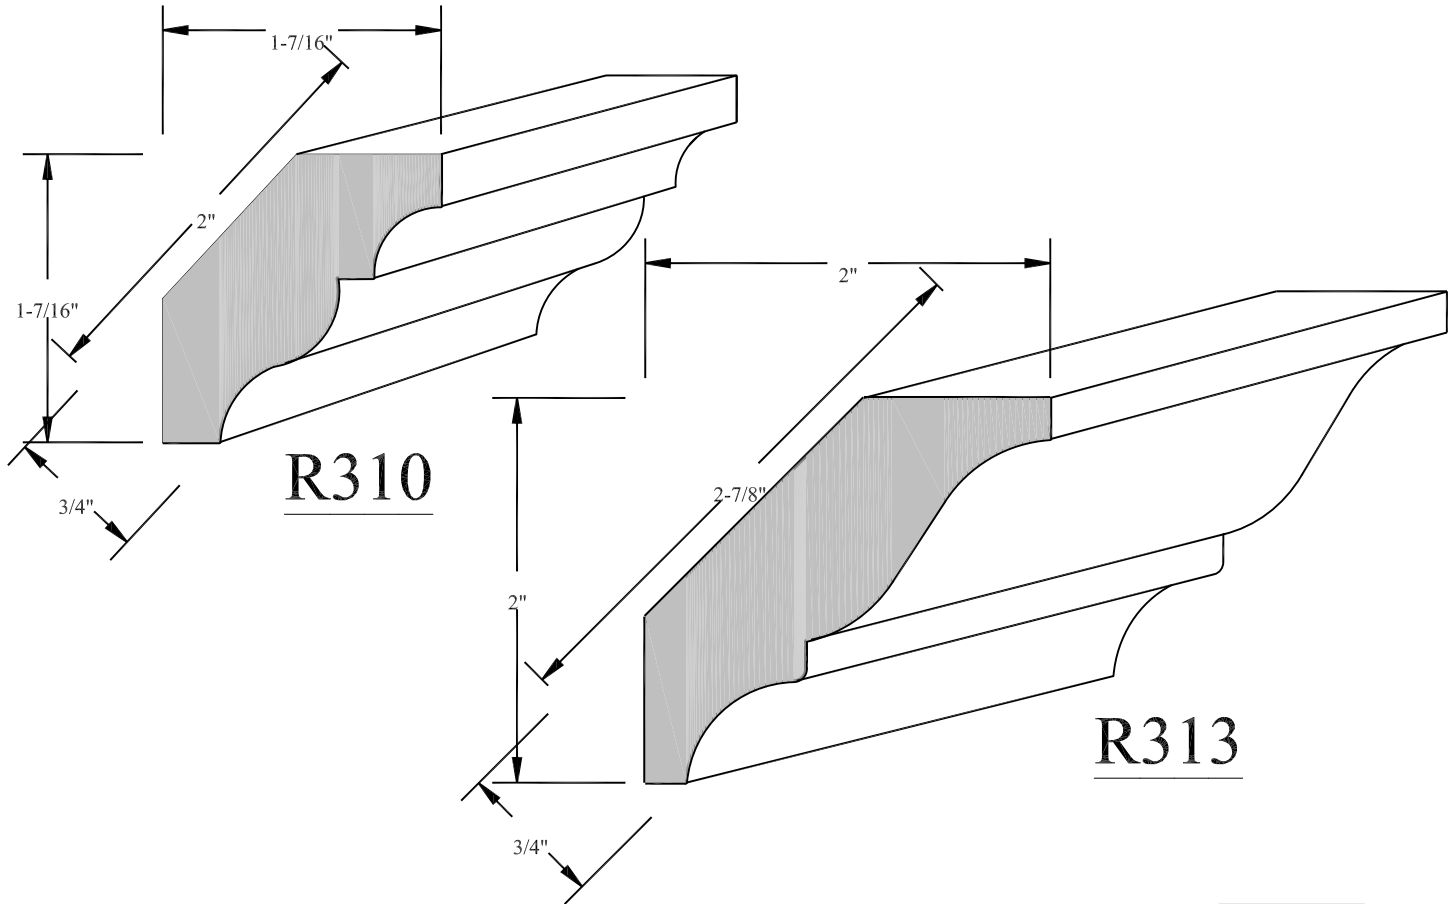


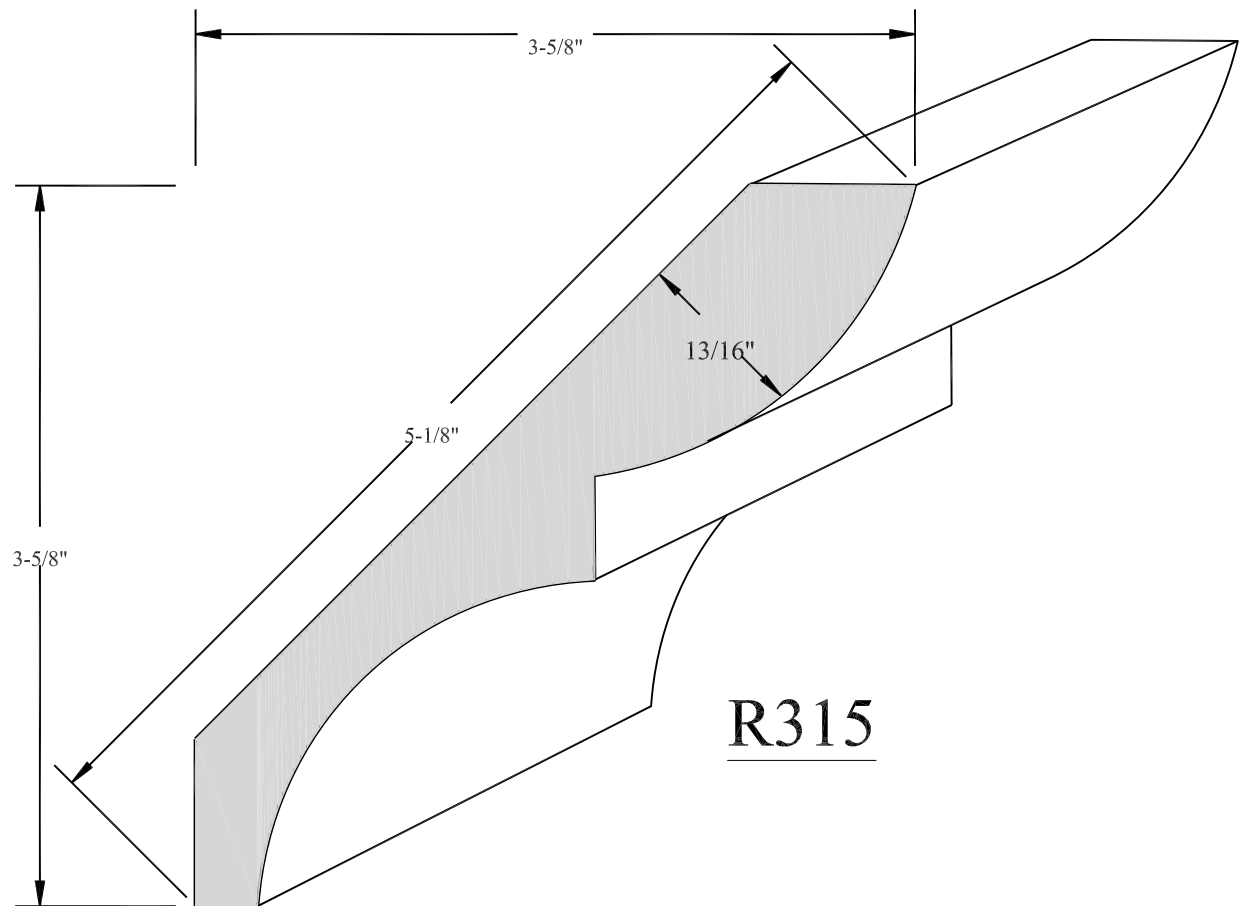

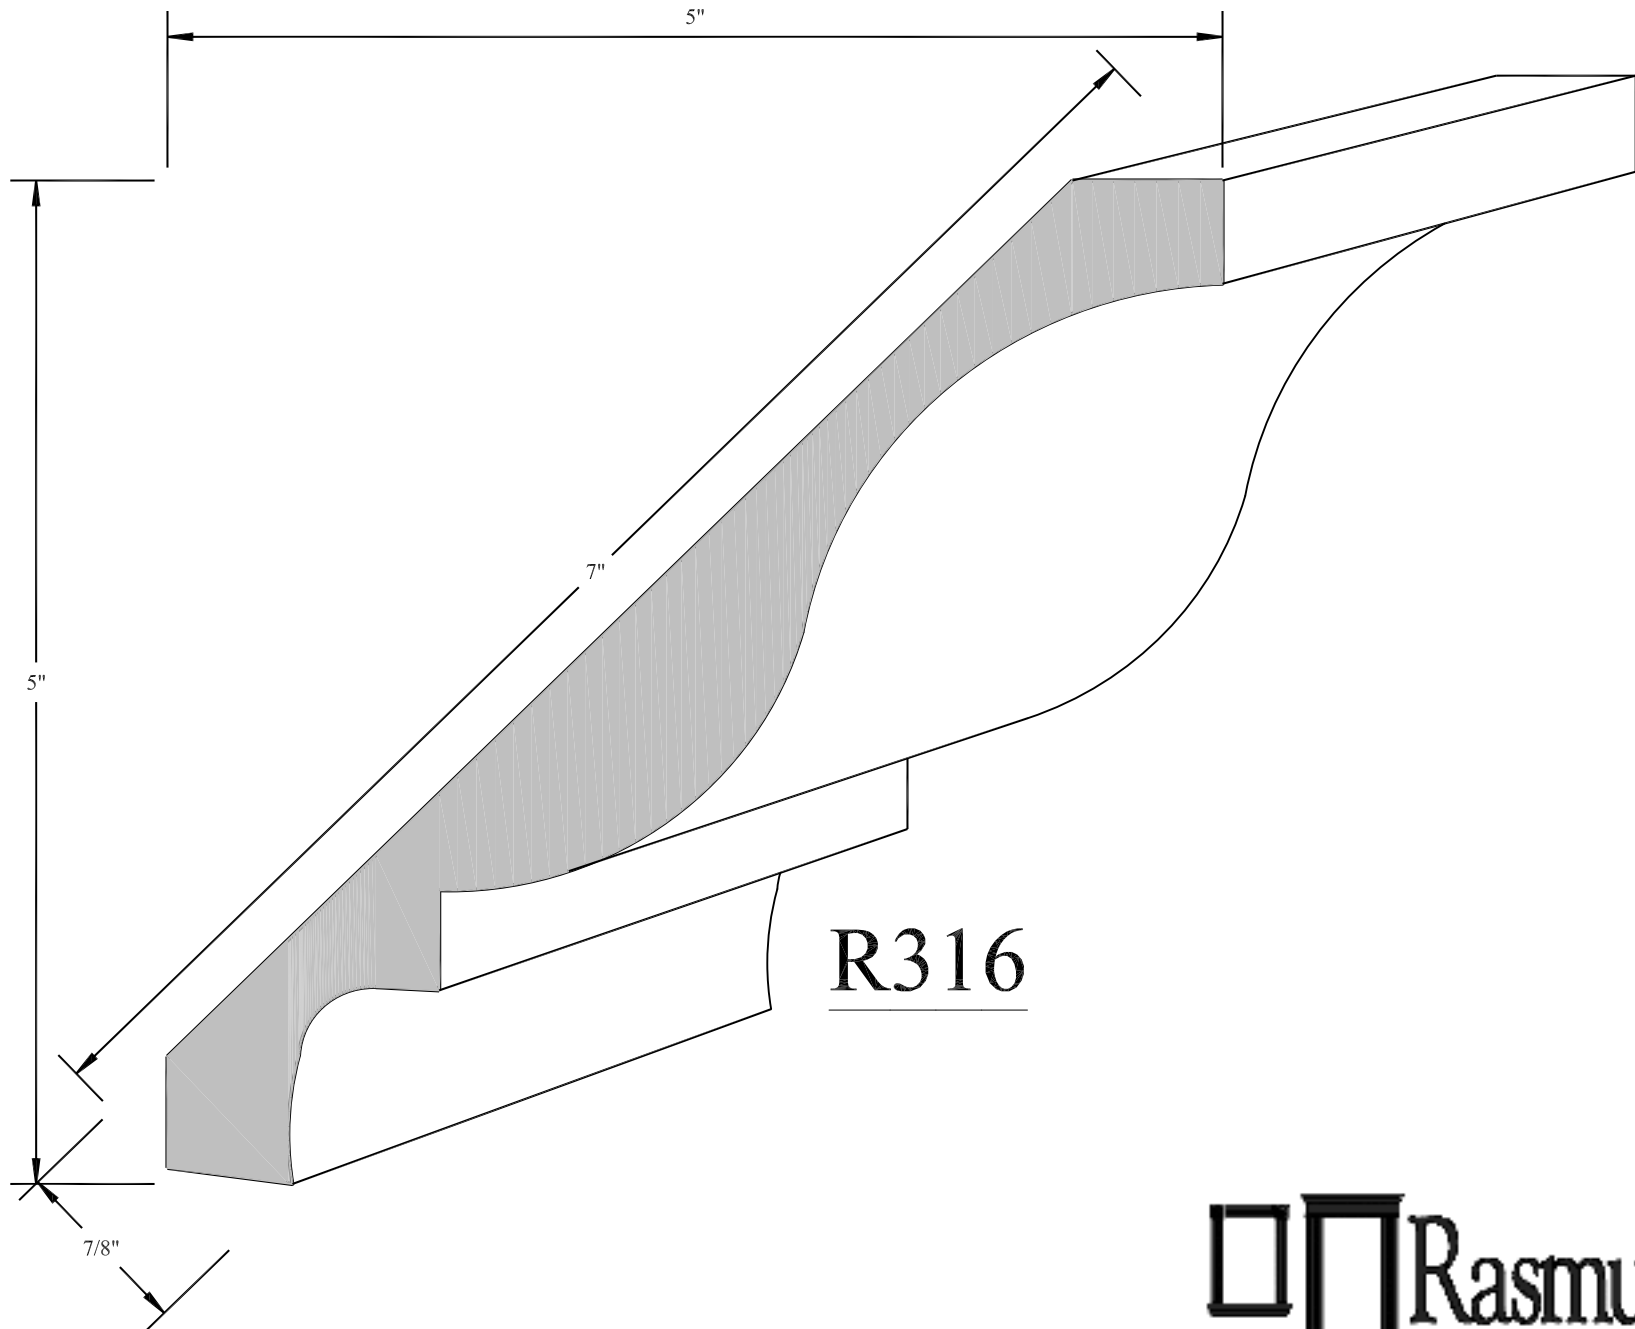


R316

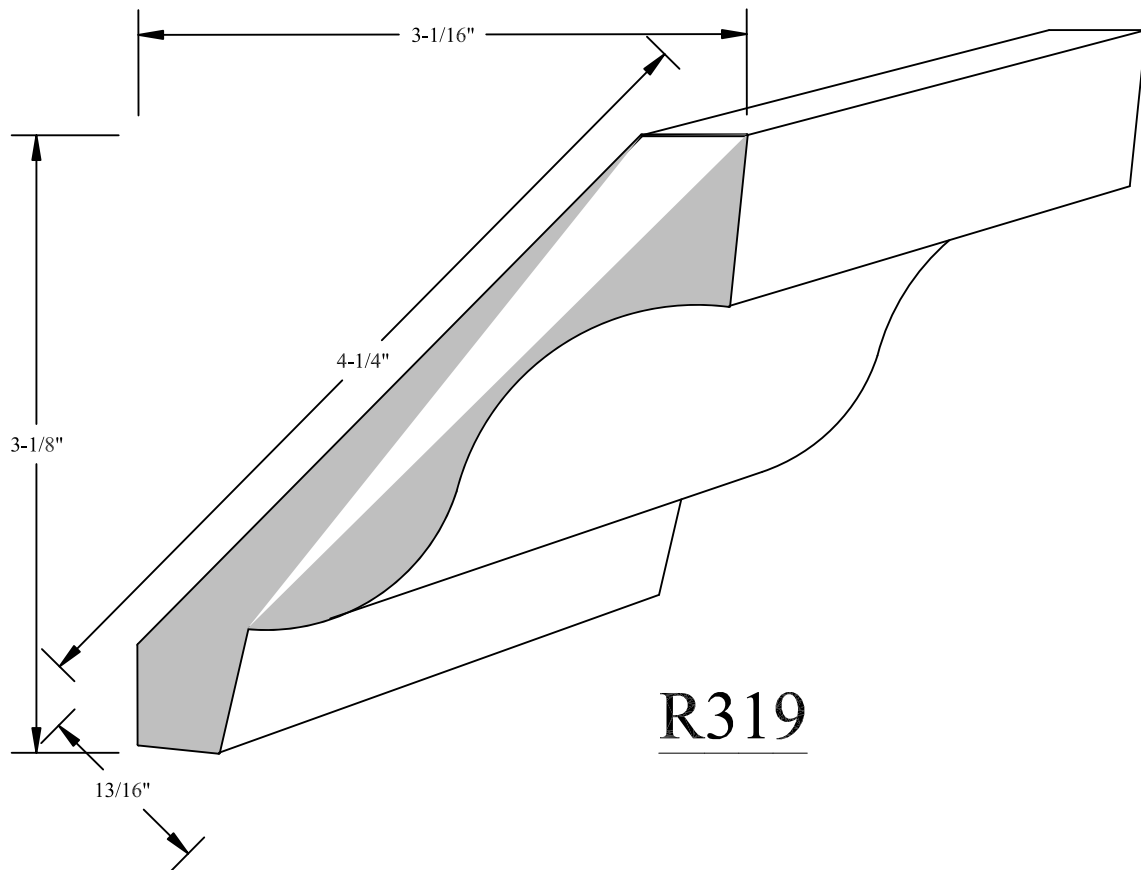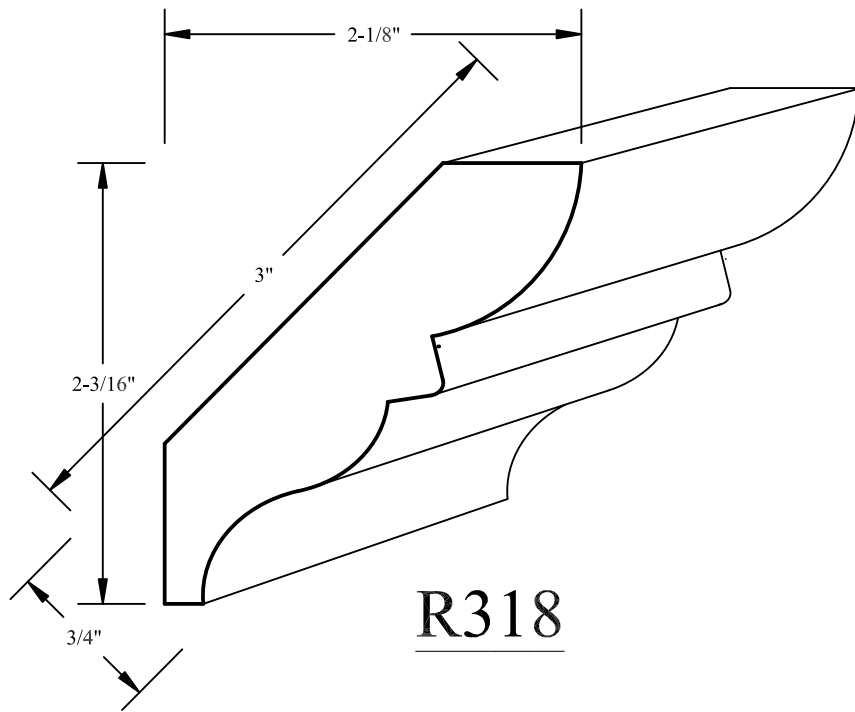


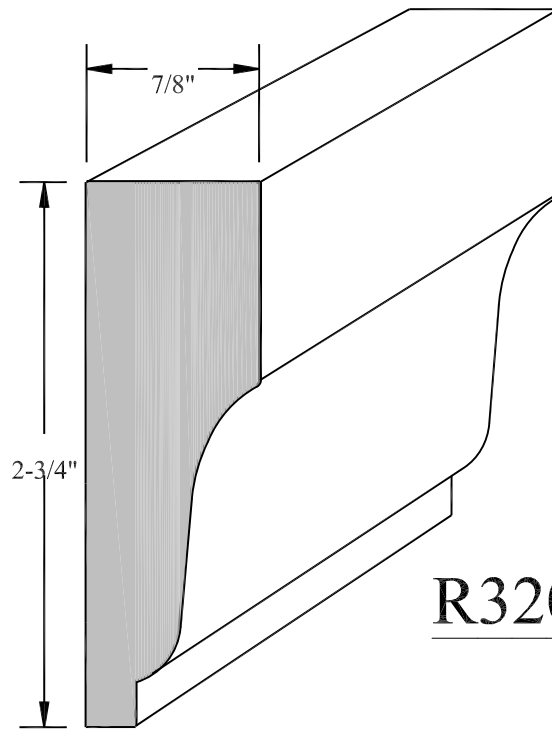

R320

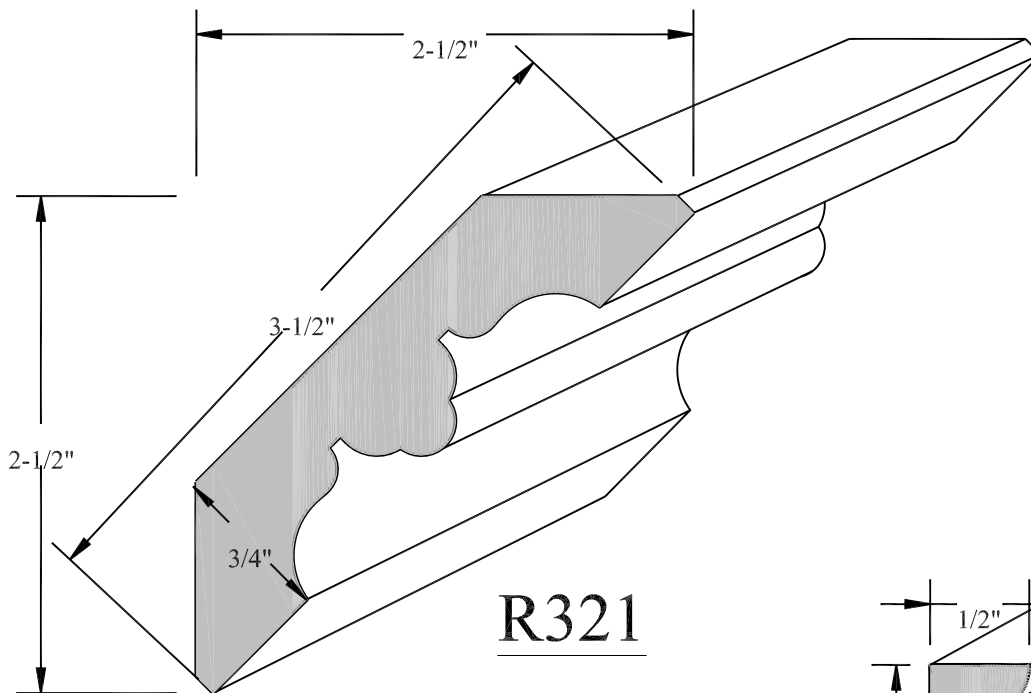


R321

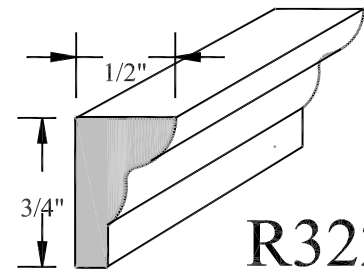


R322




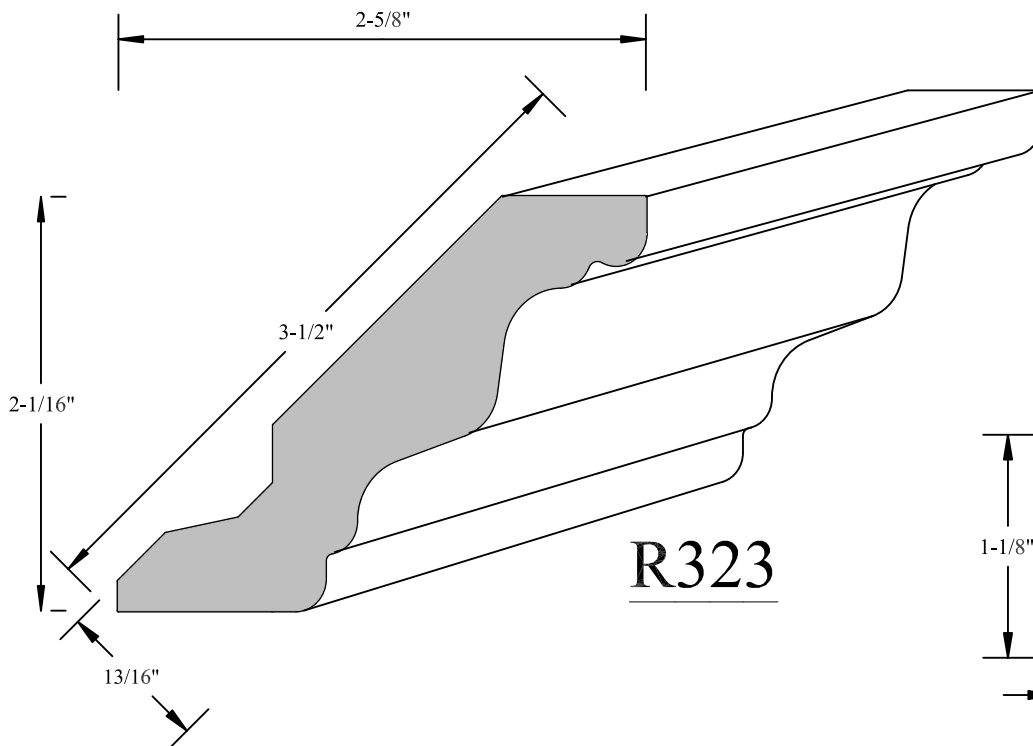

R323

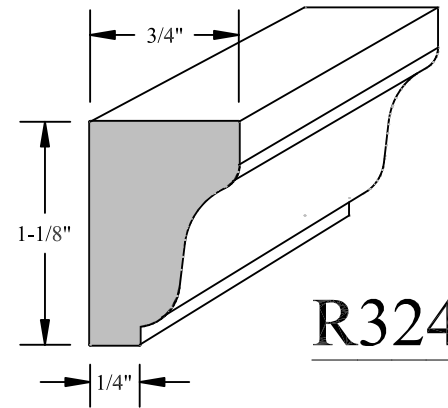


R324

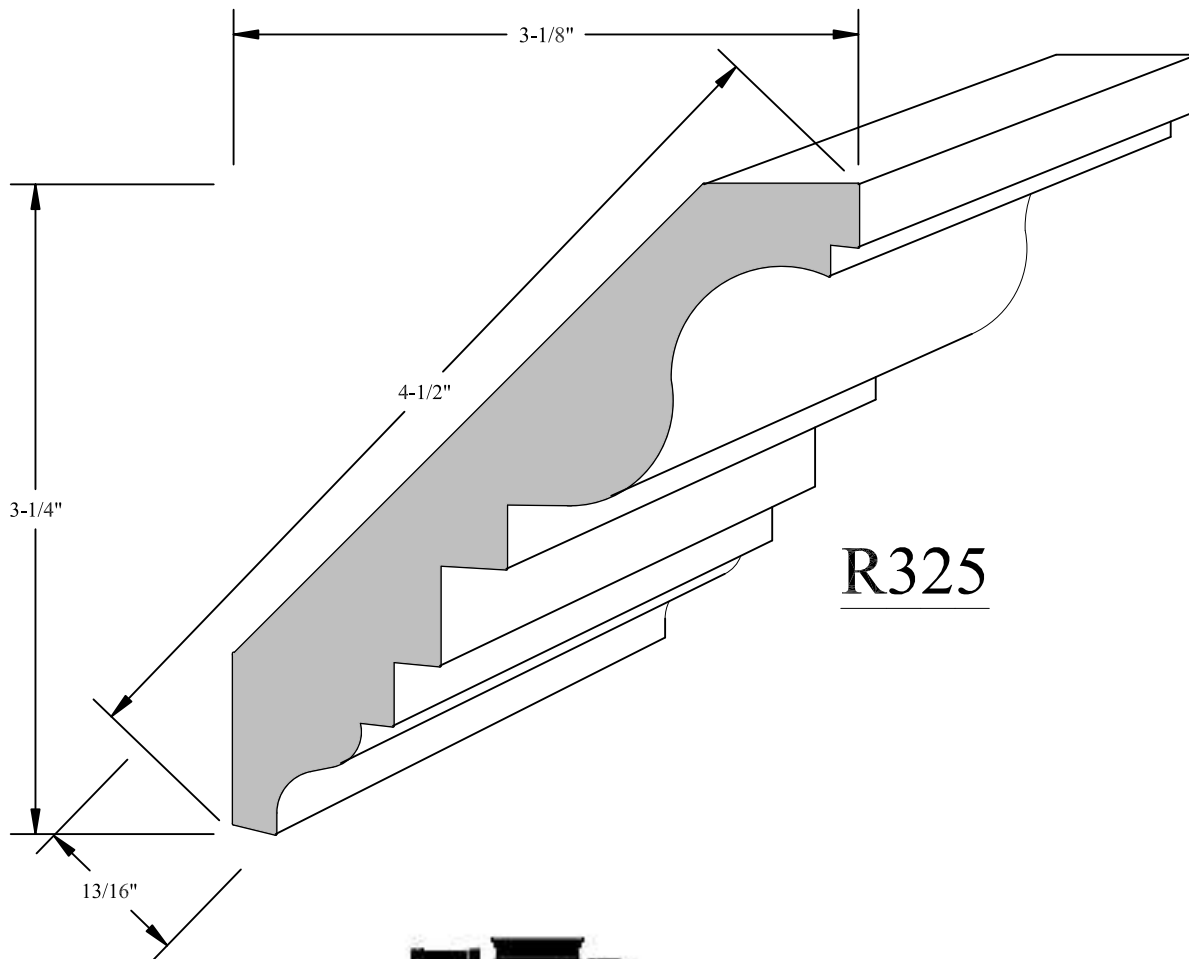


R325



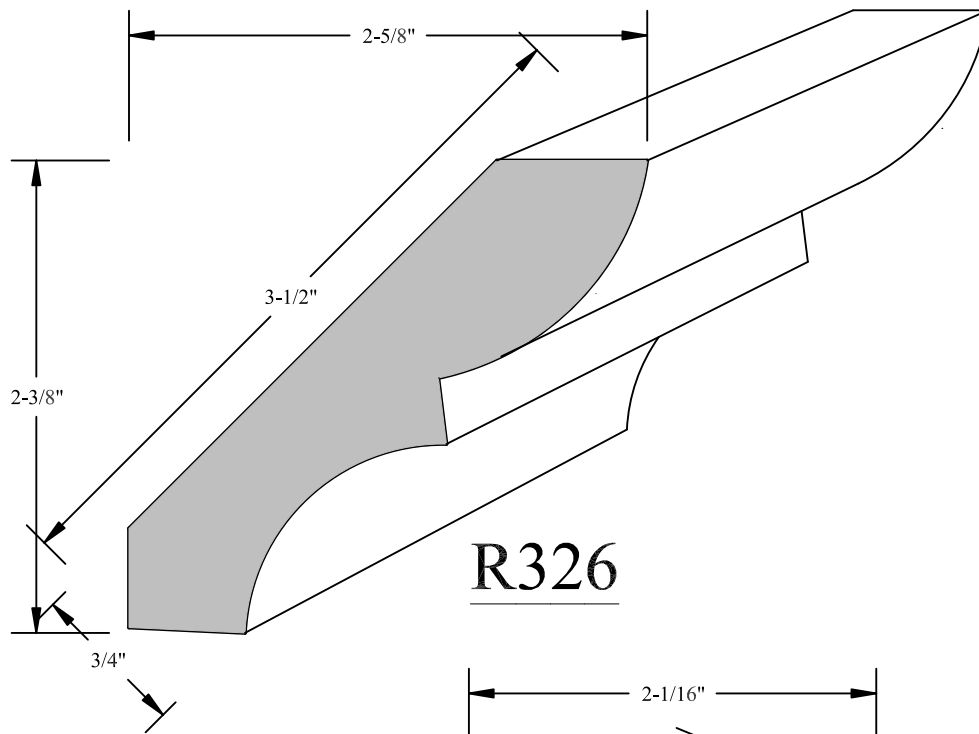


R326

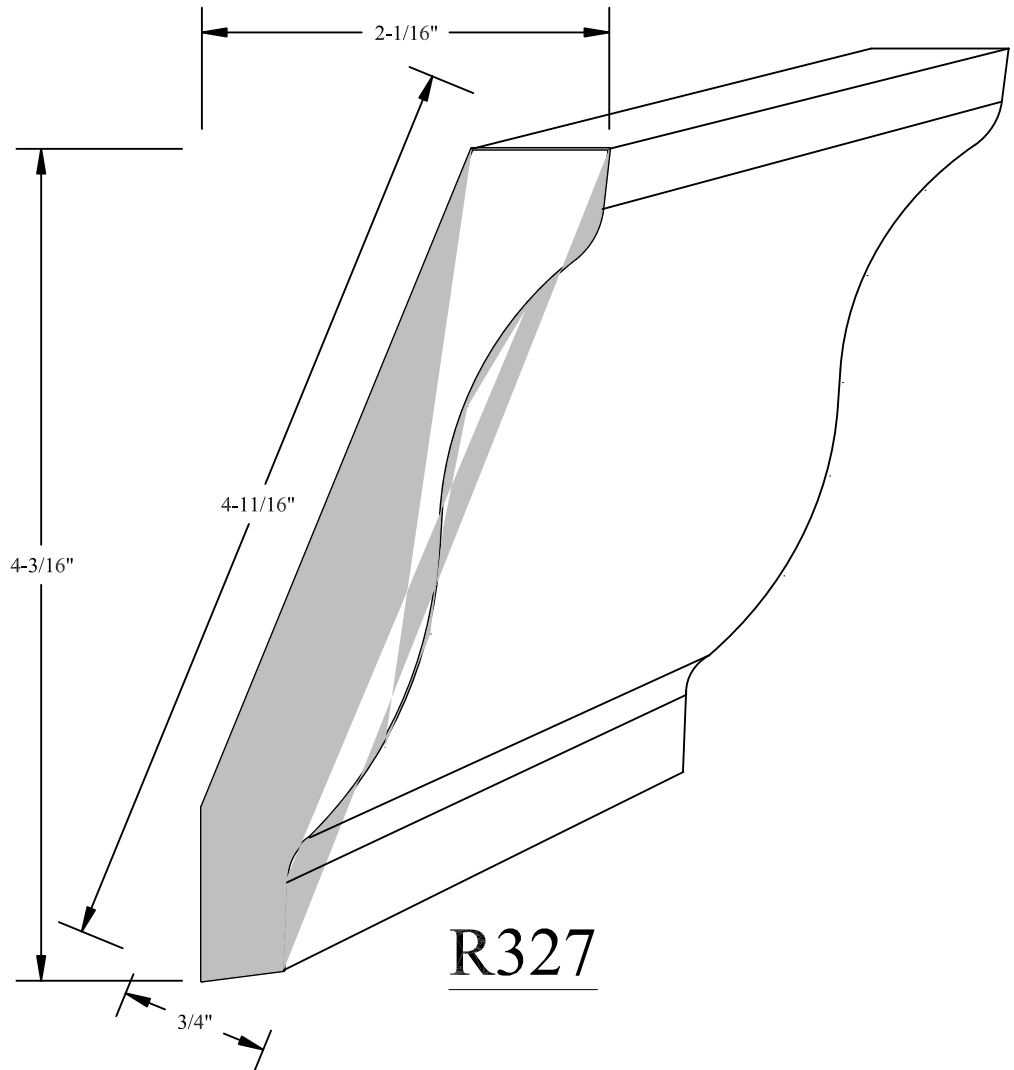


R327




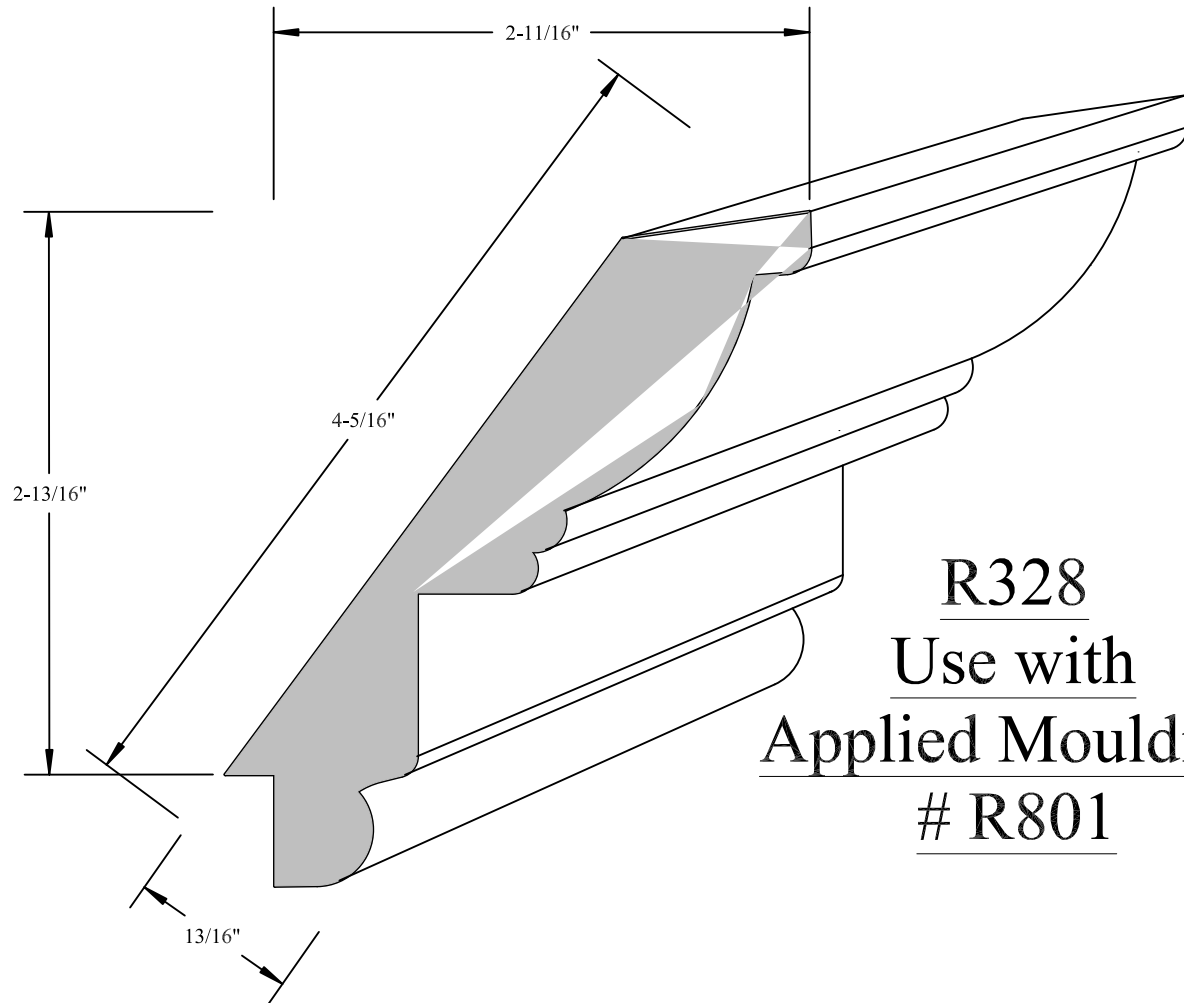




R328
Use with
Applied Moulding
R801

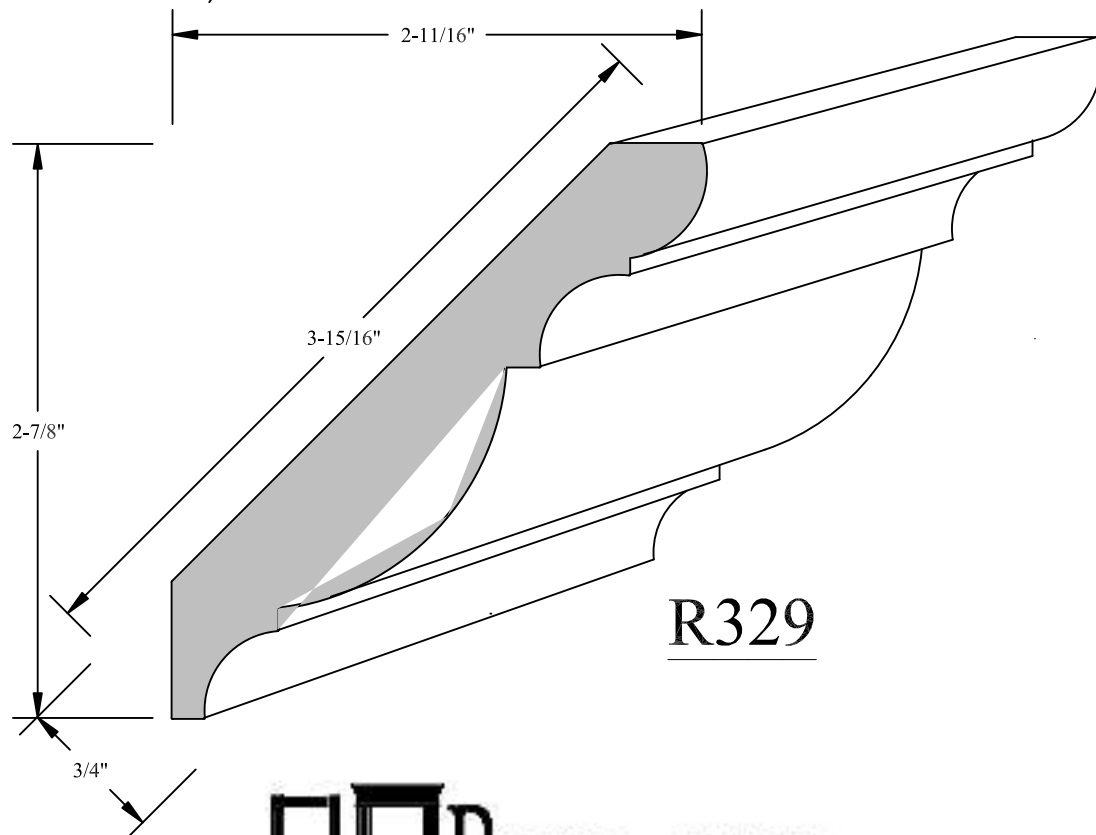


R329




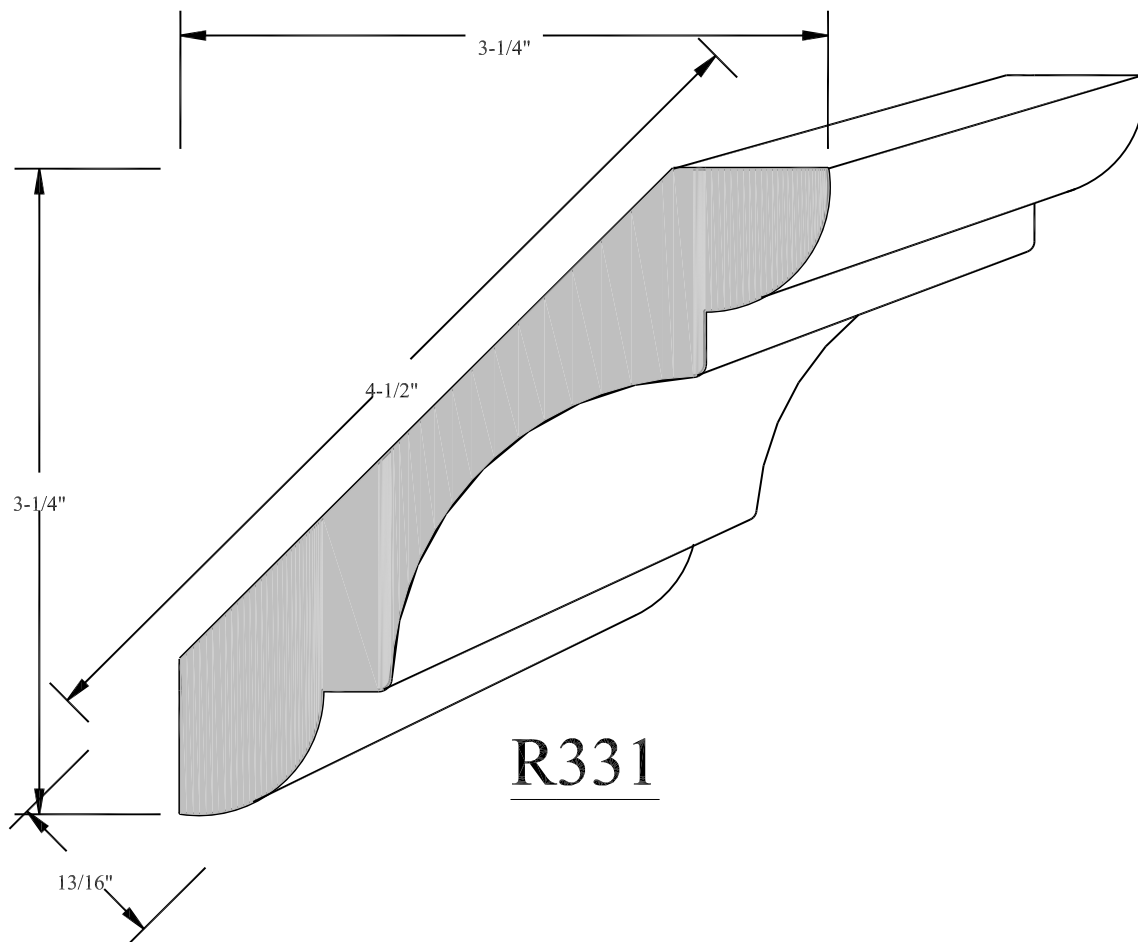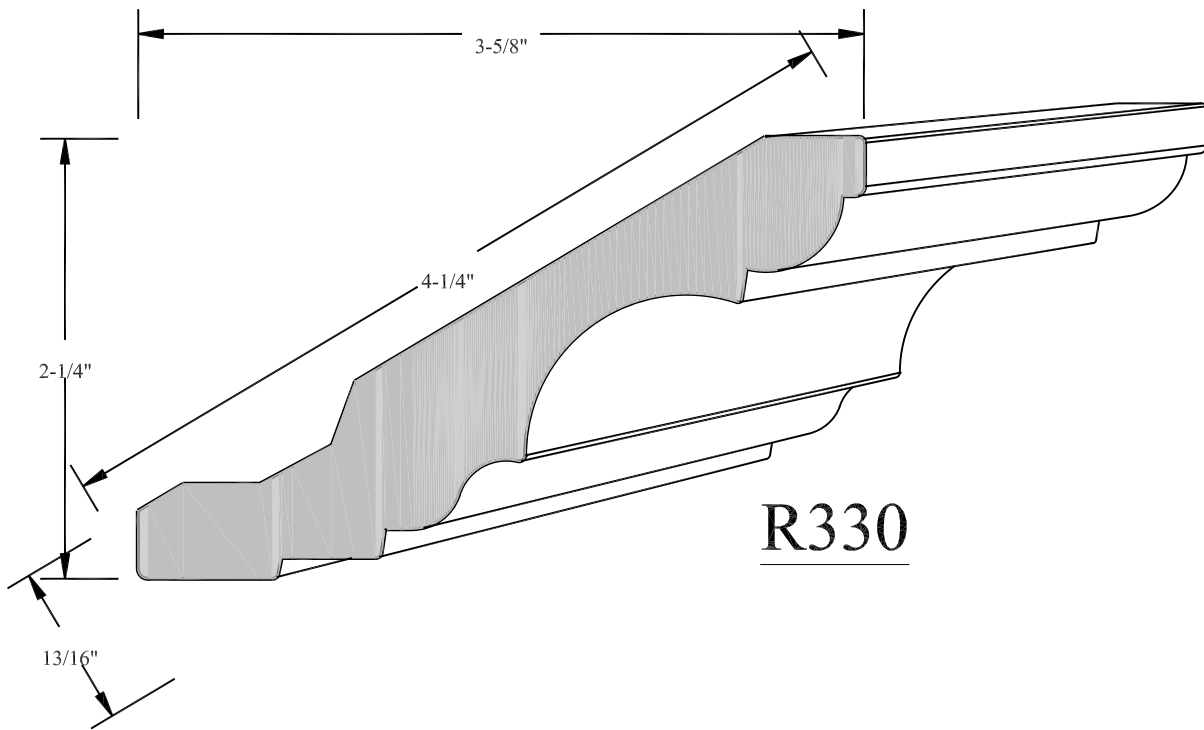

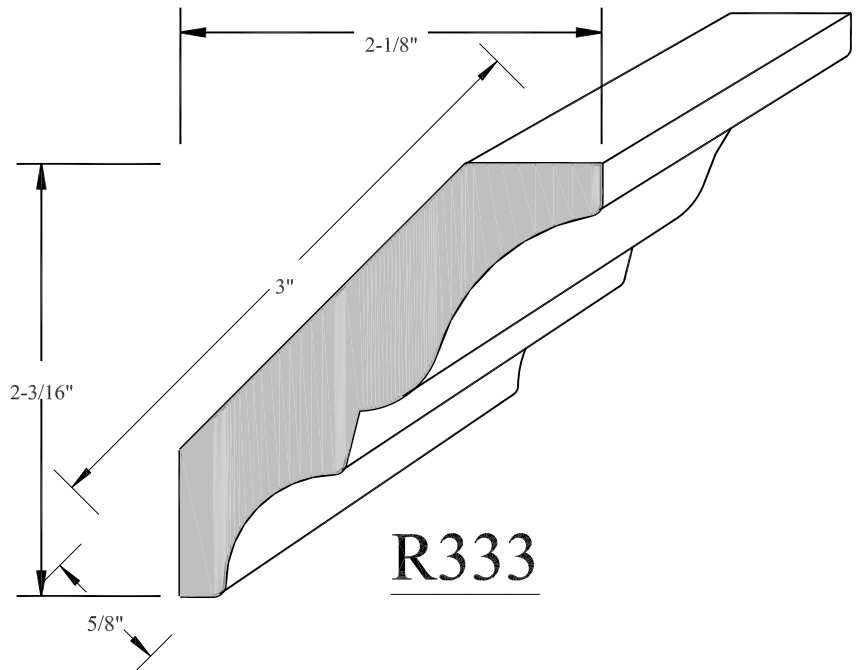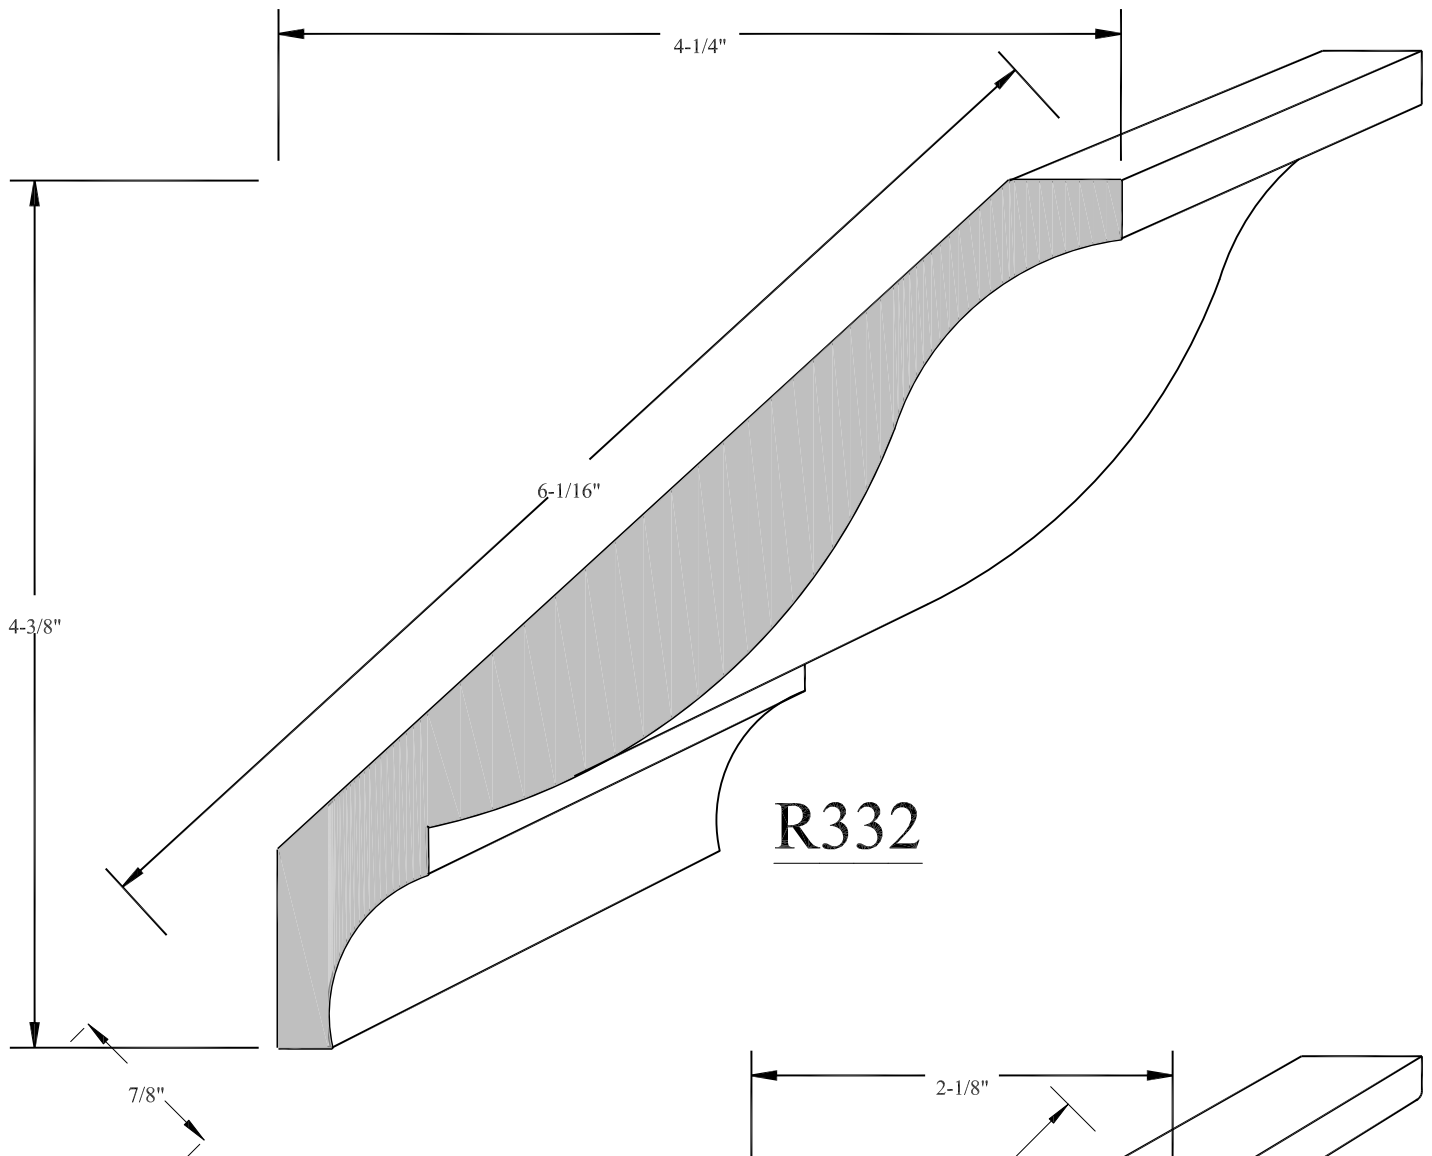


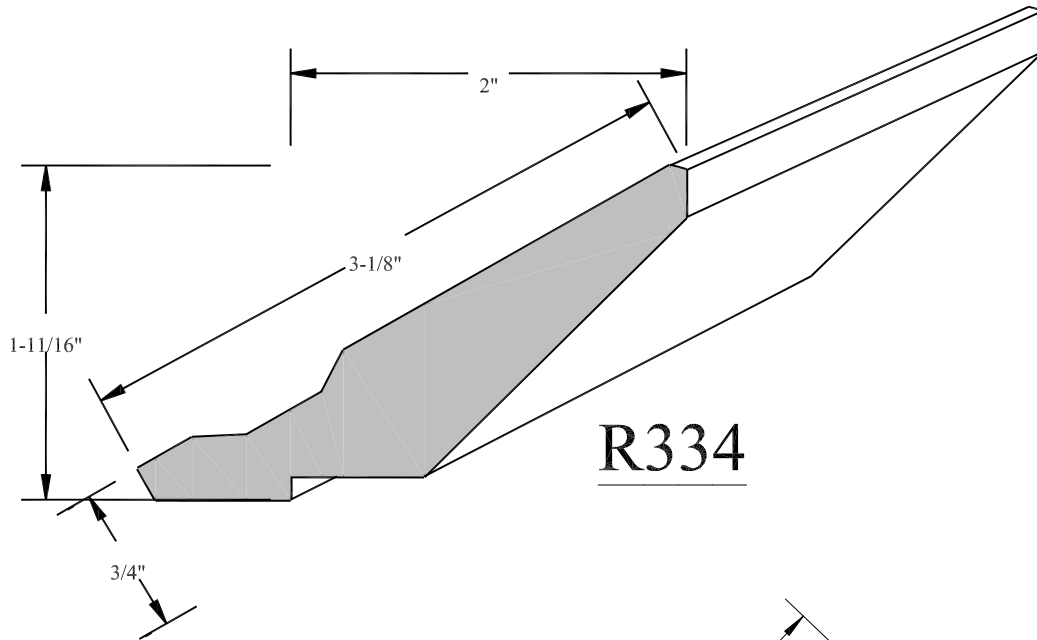



R334

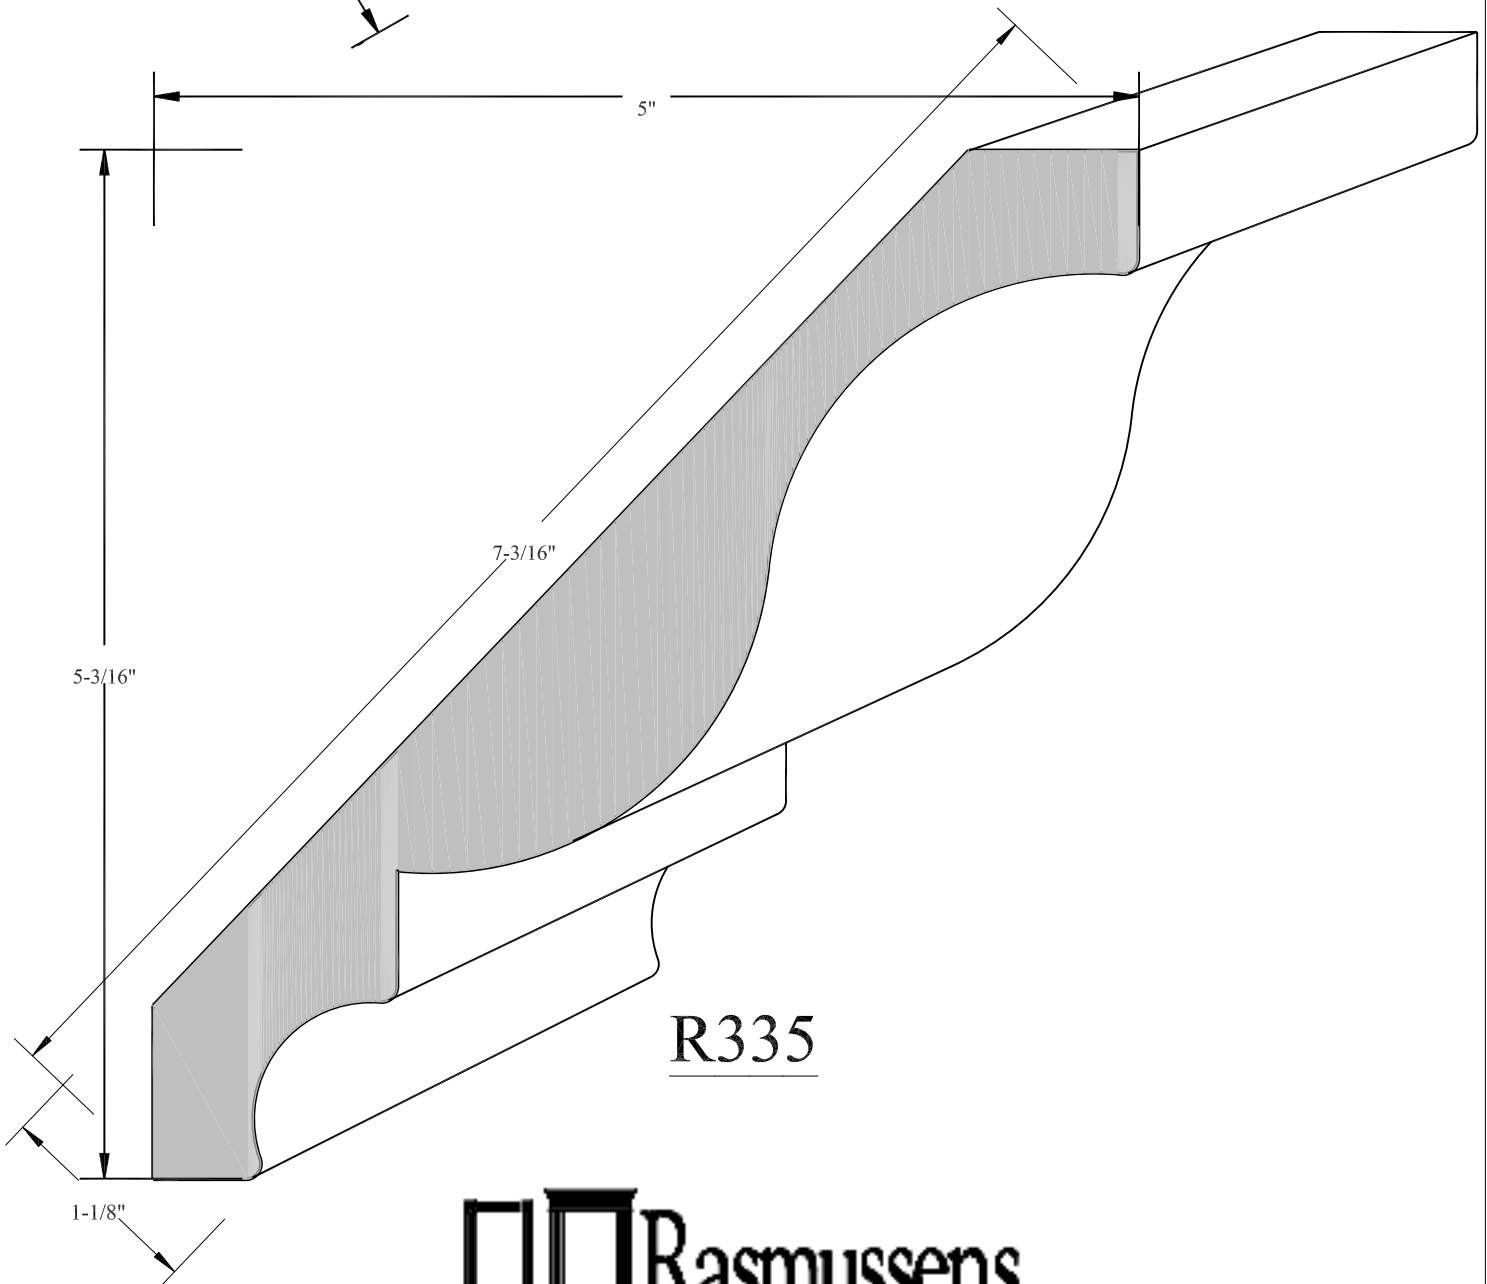


R335



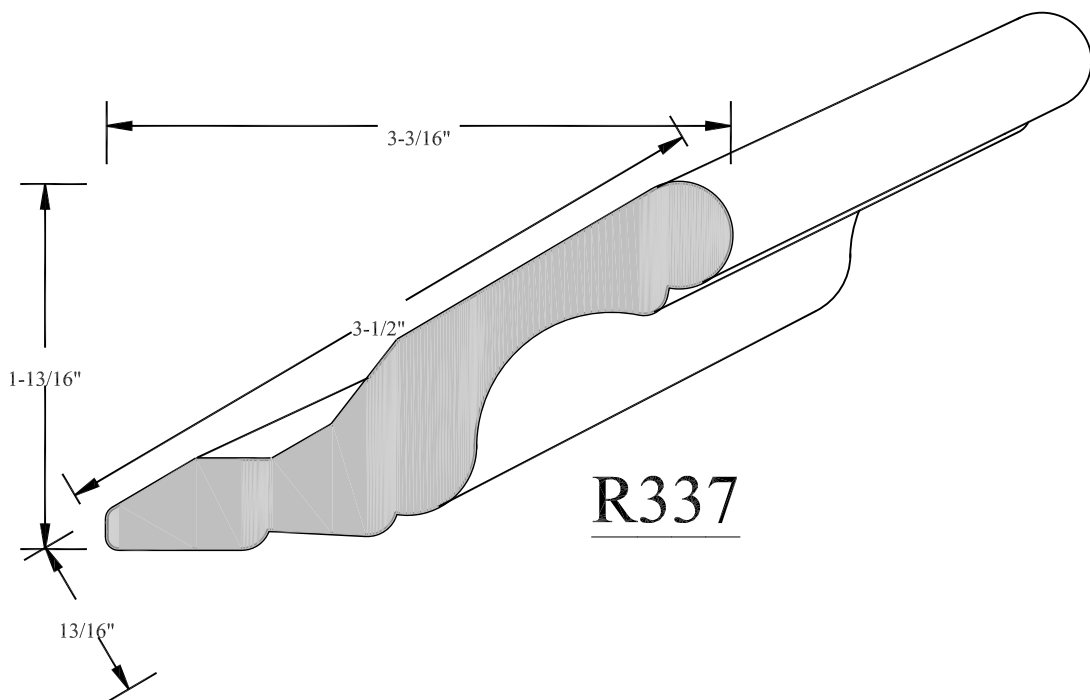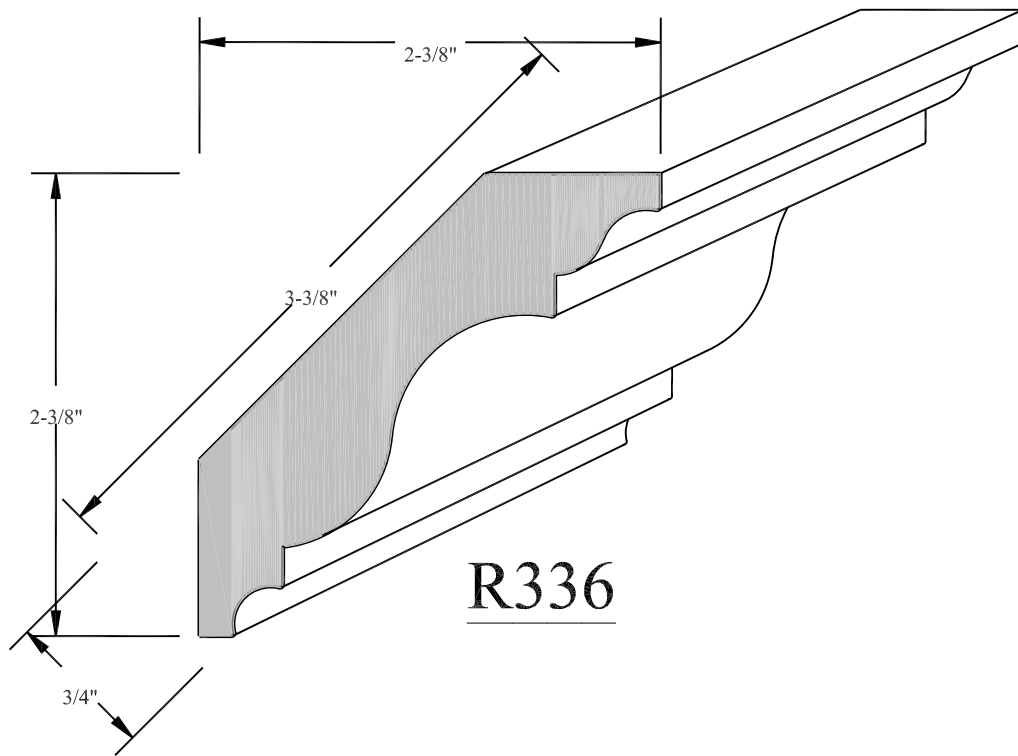


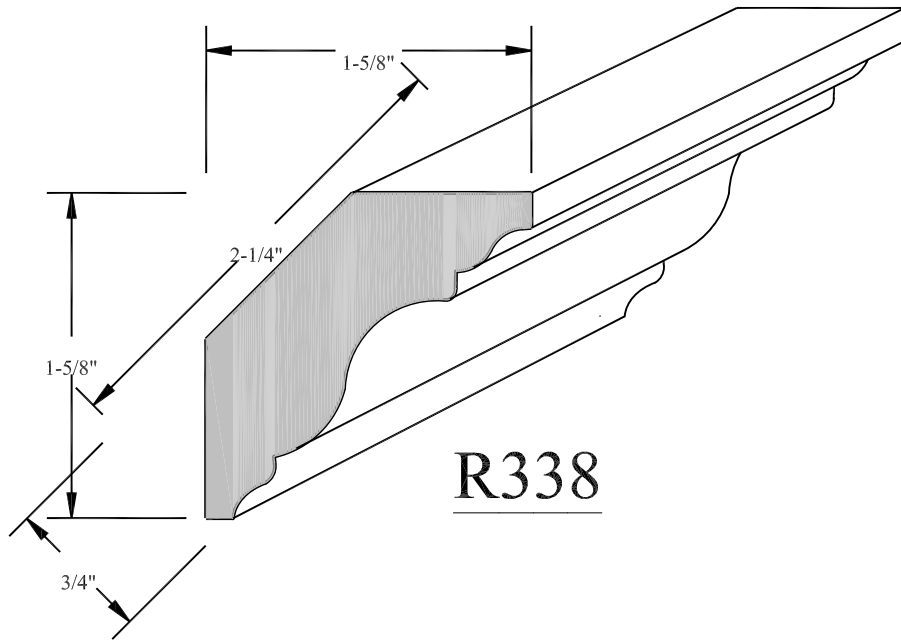




R338

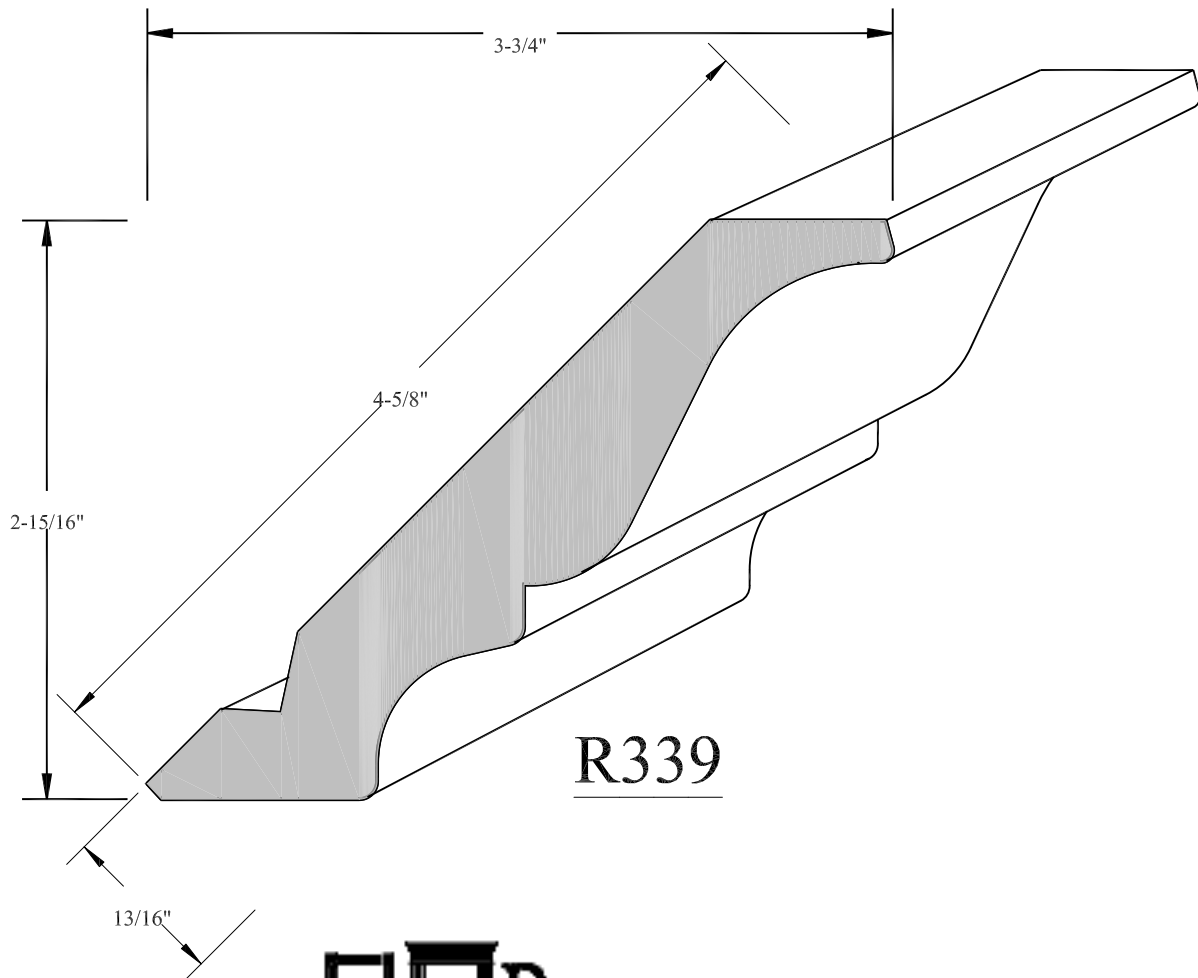


R339



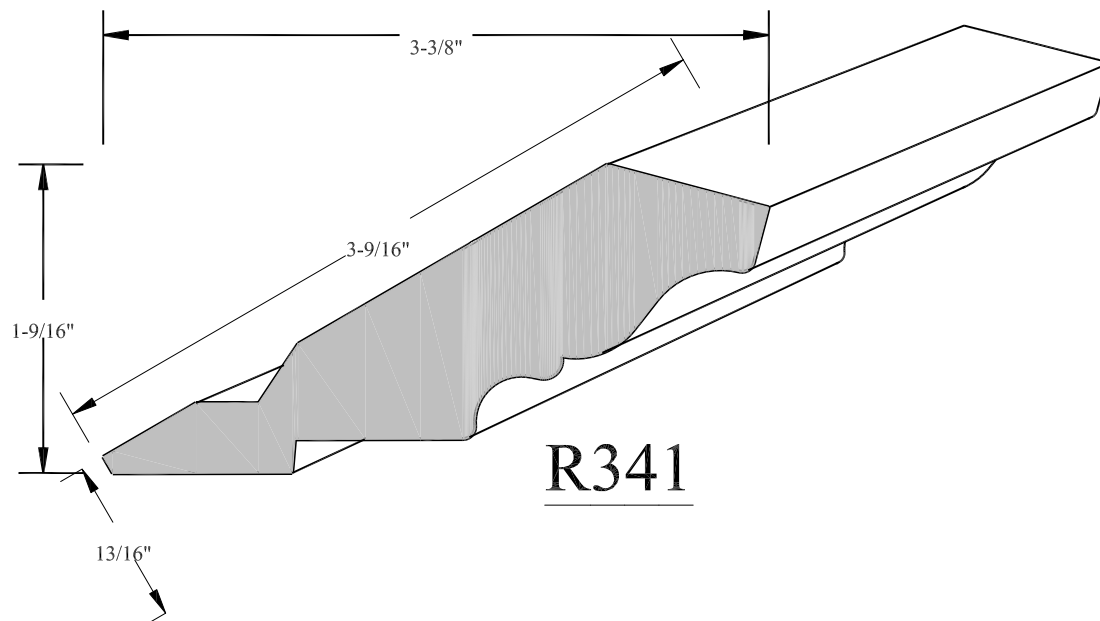
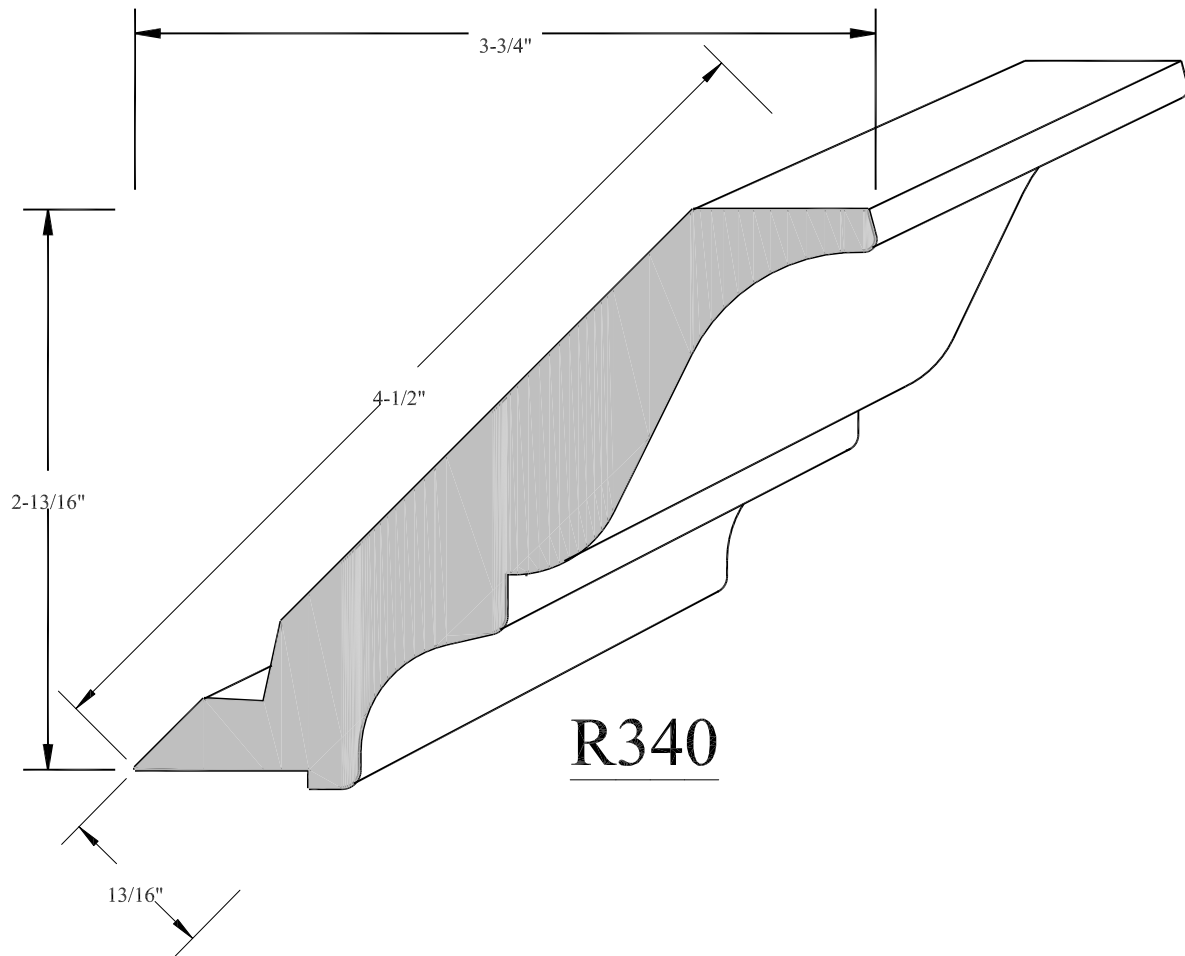


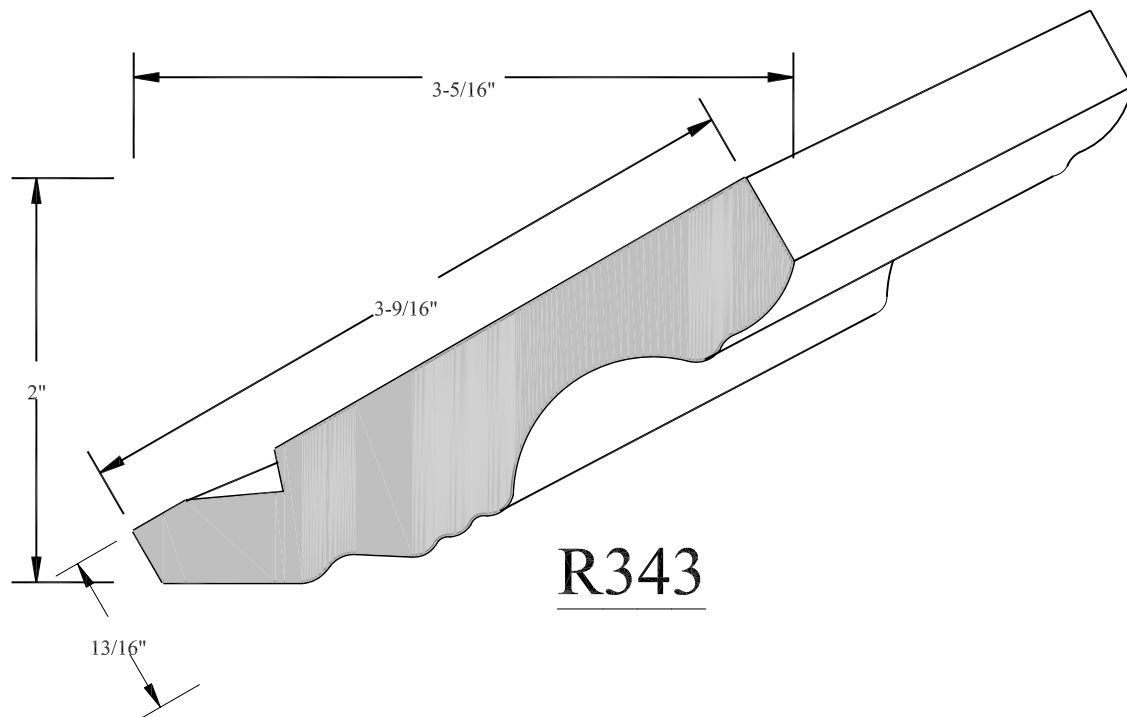
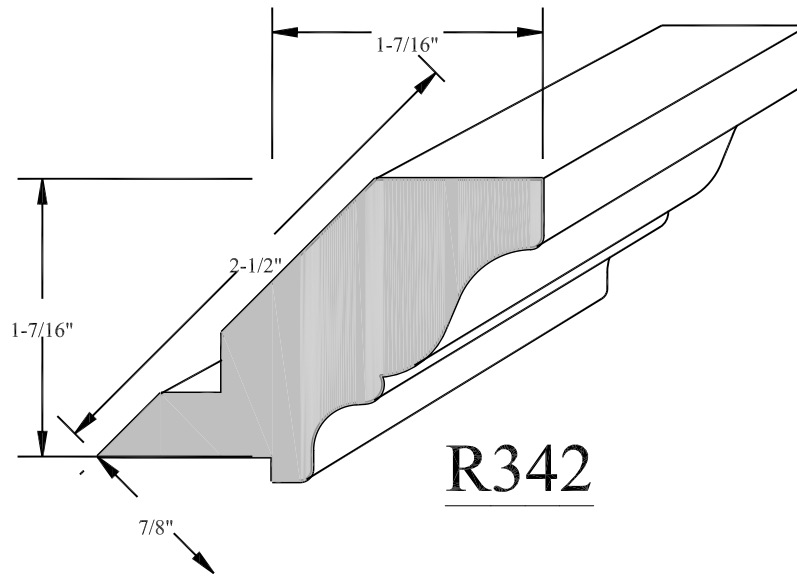



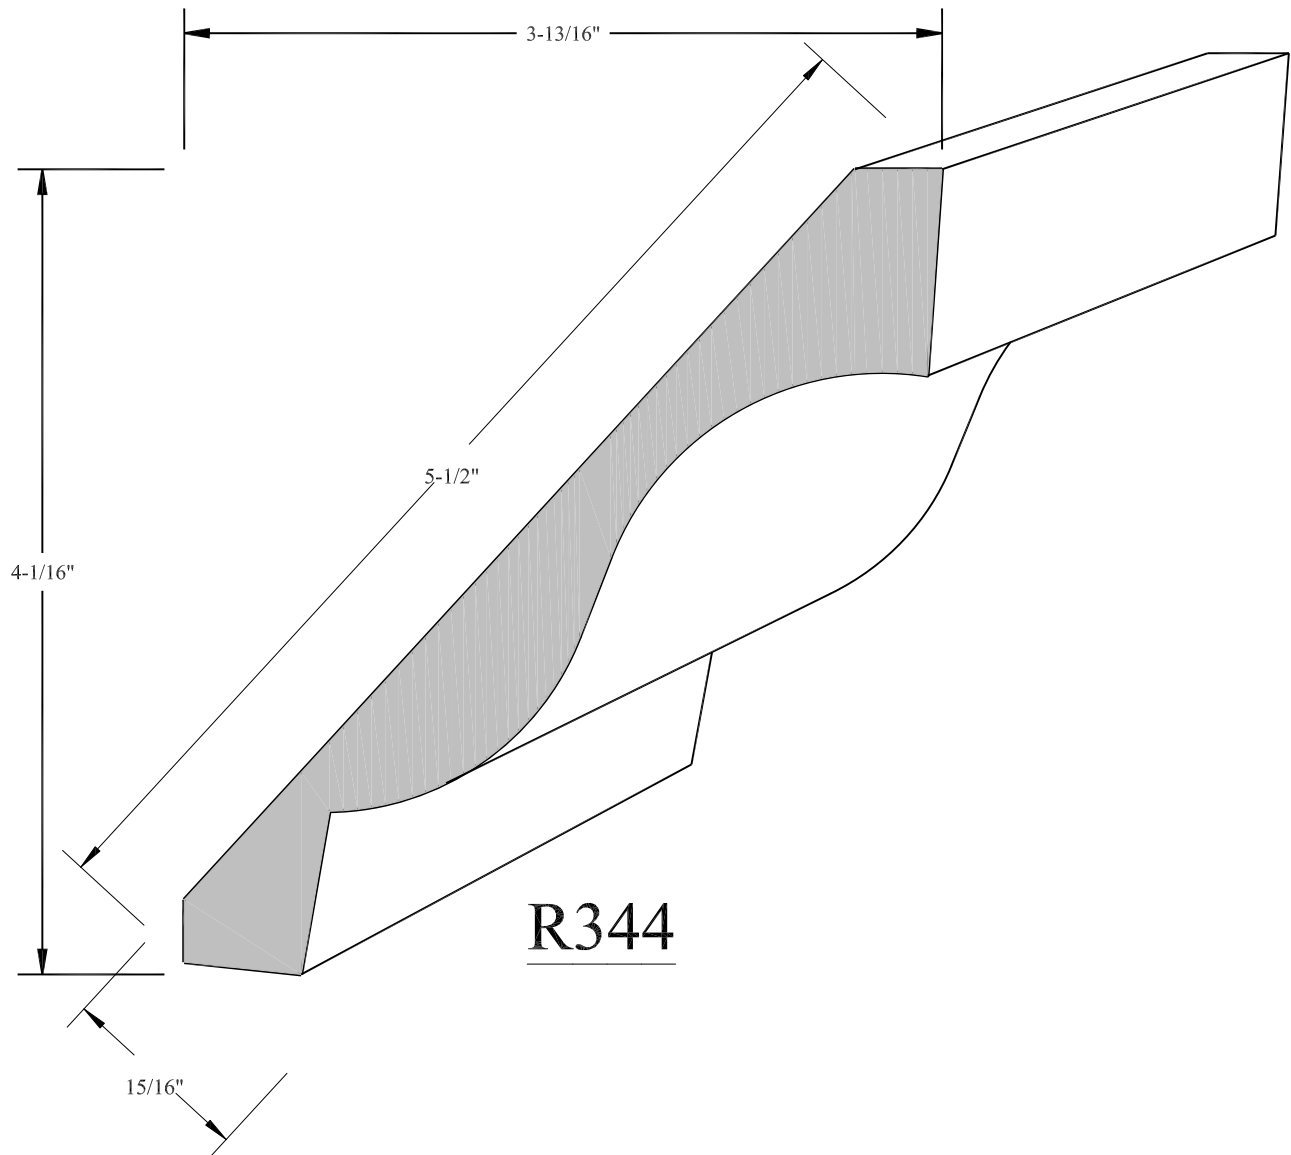




R344




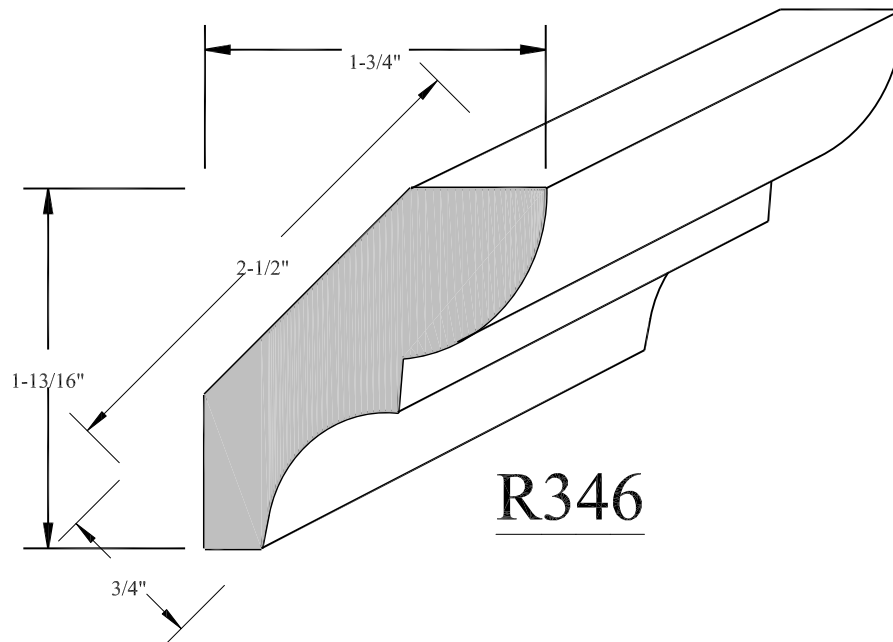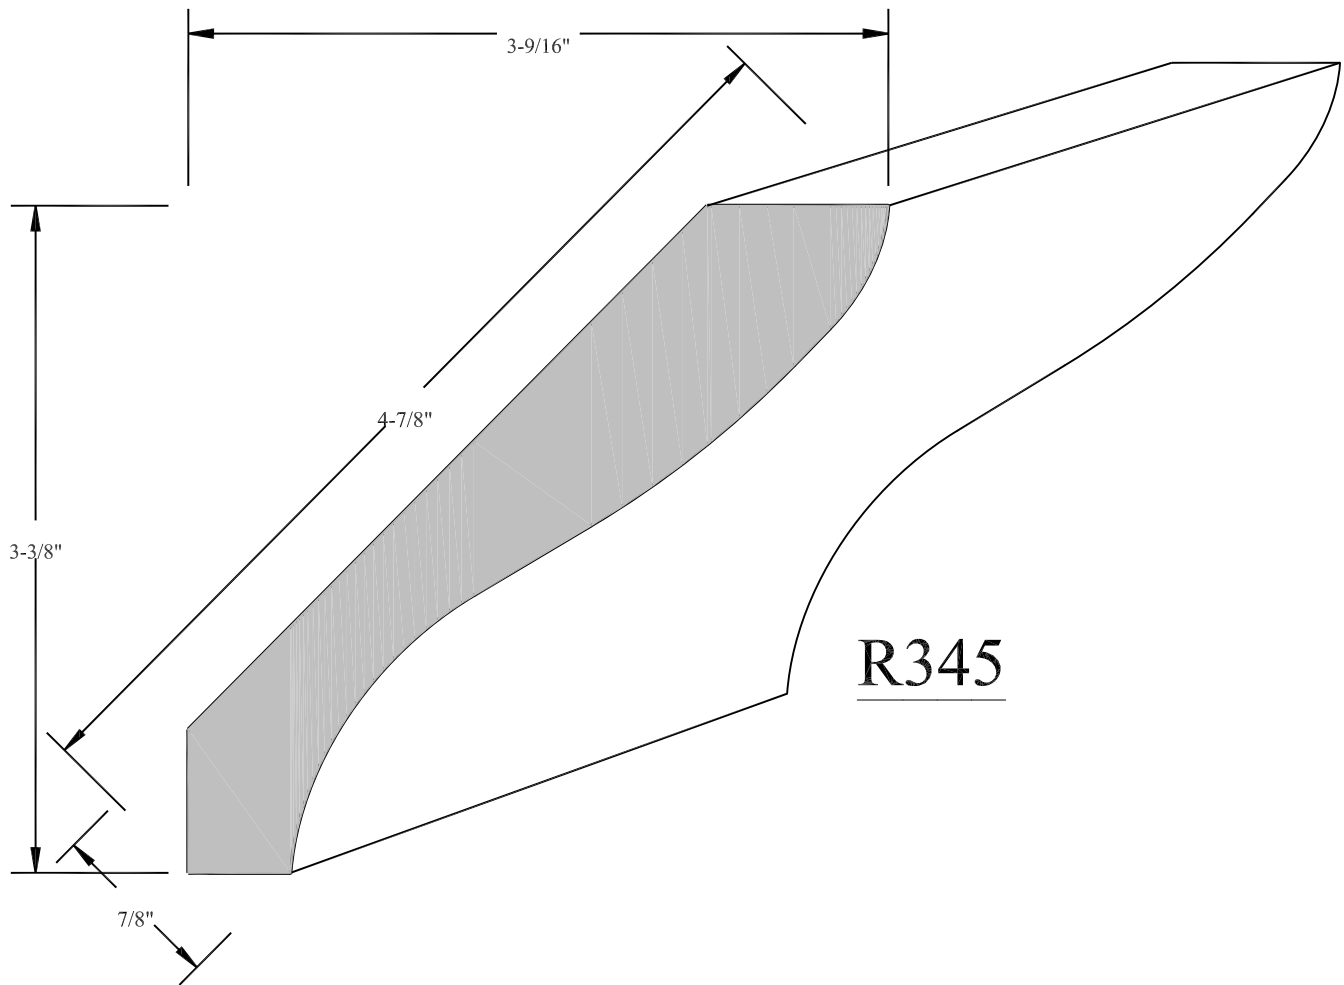

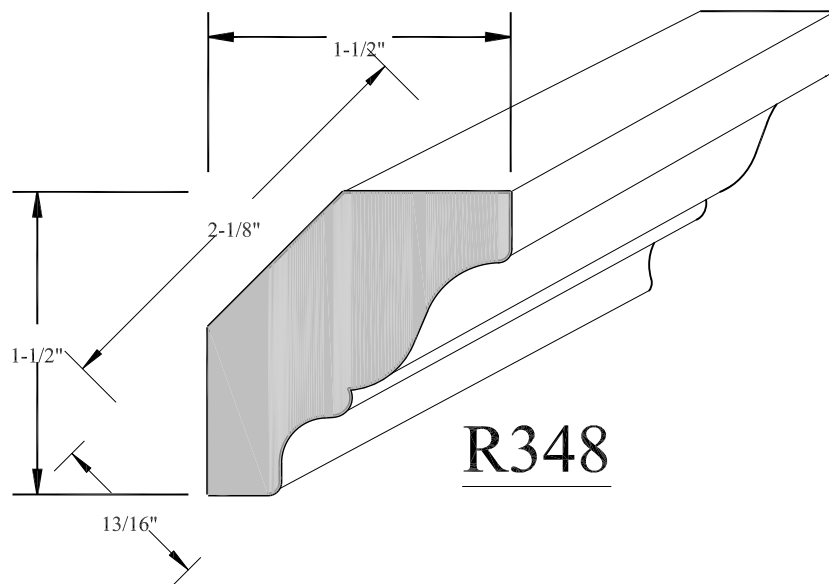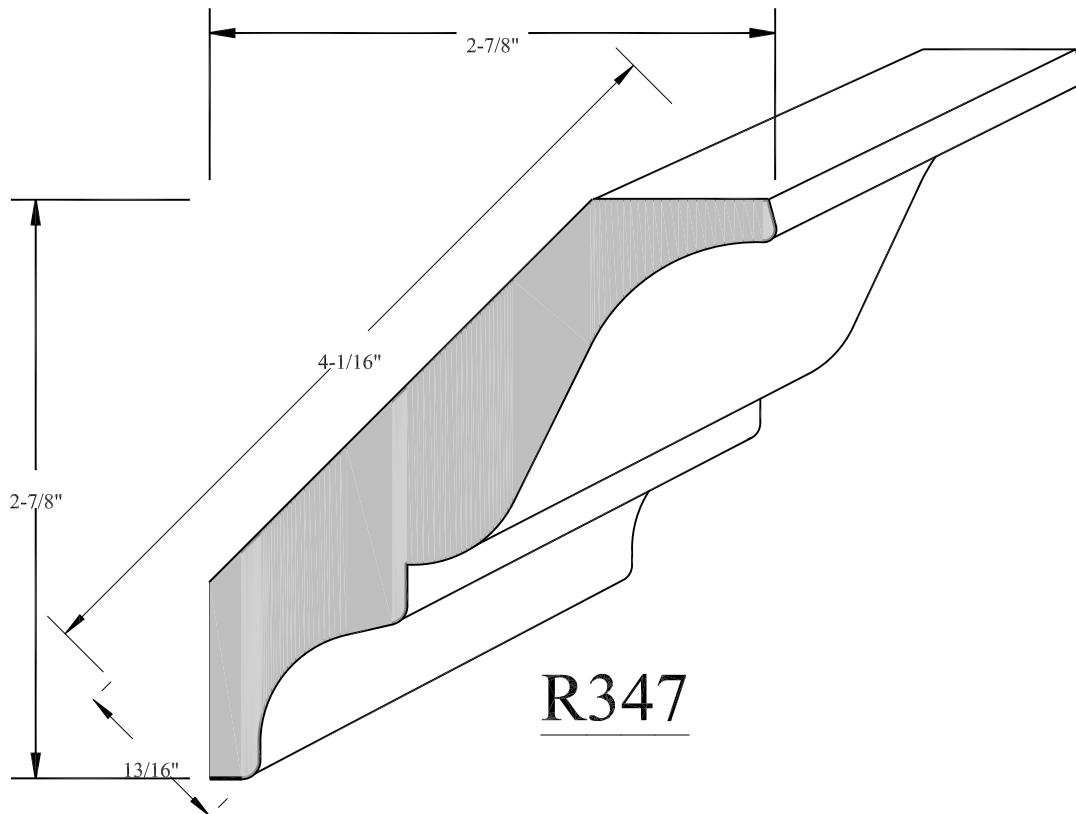

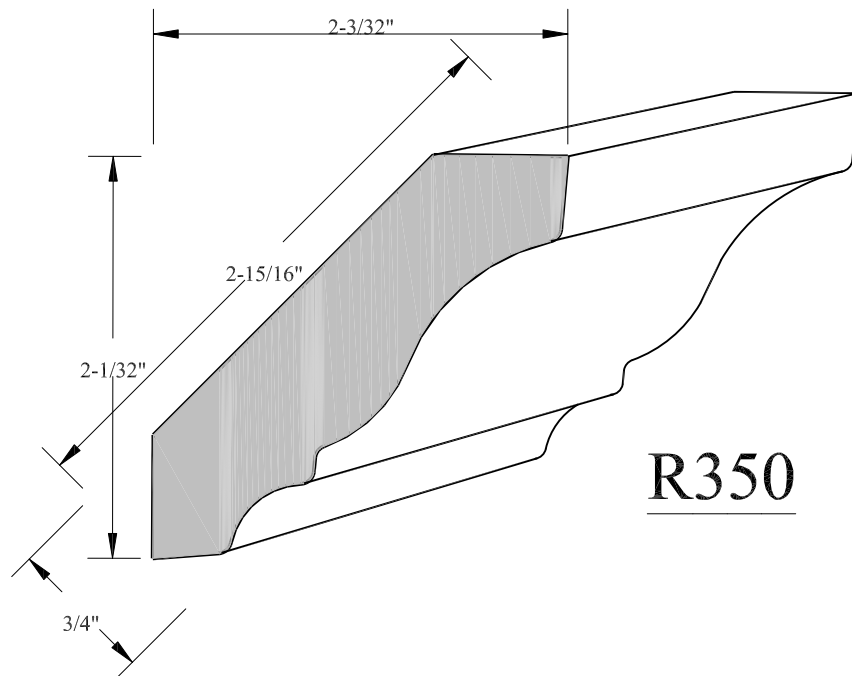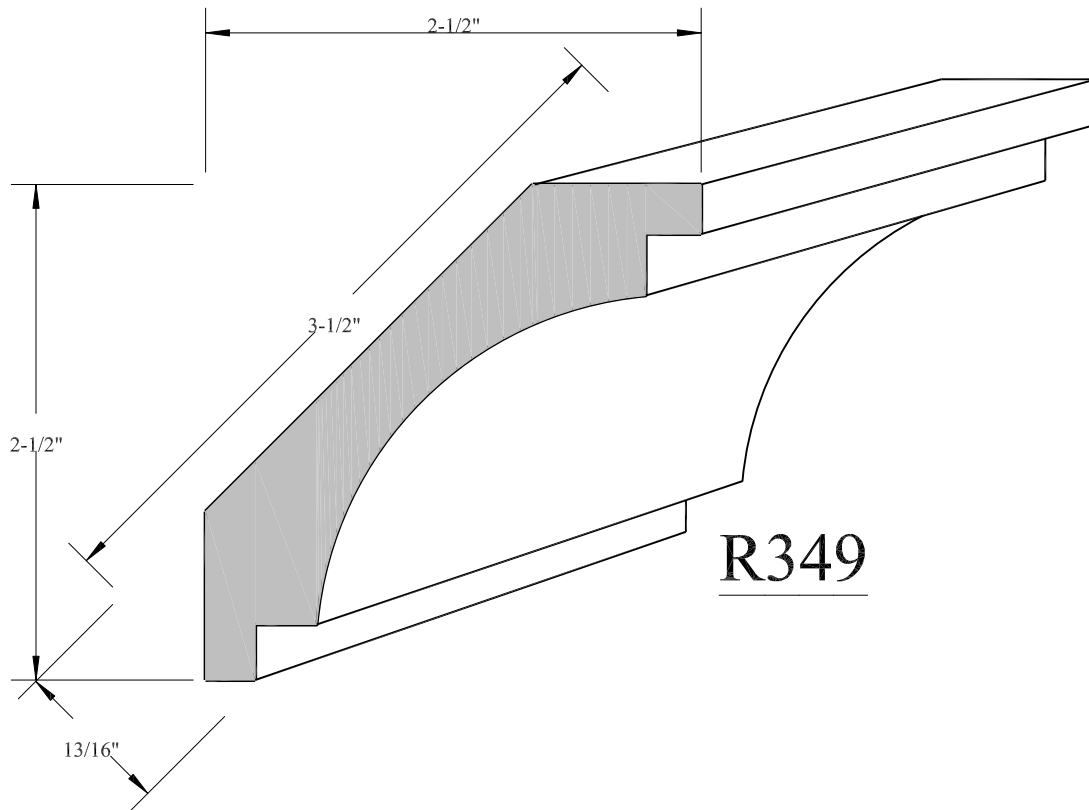


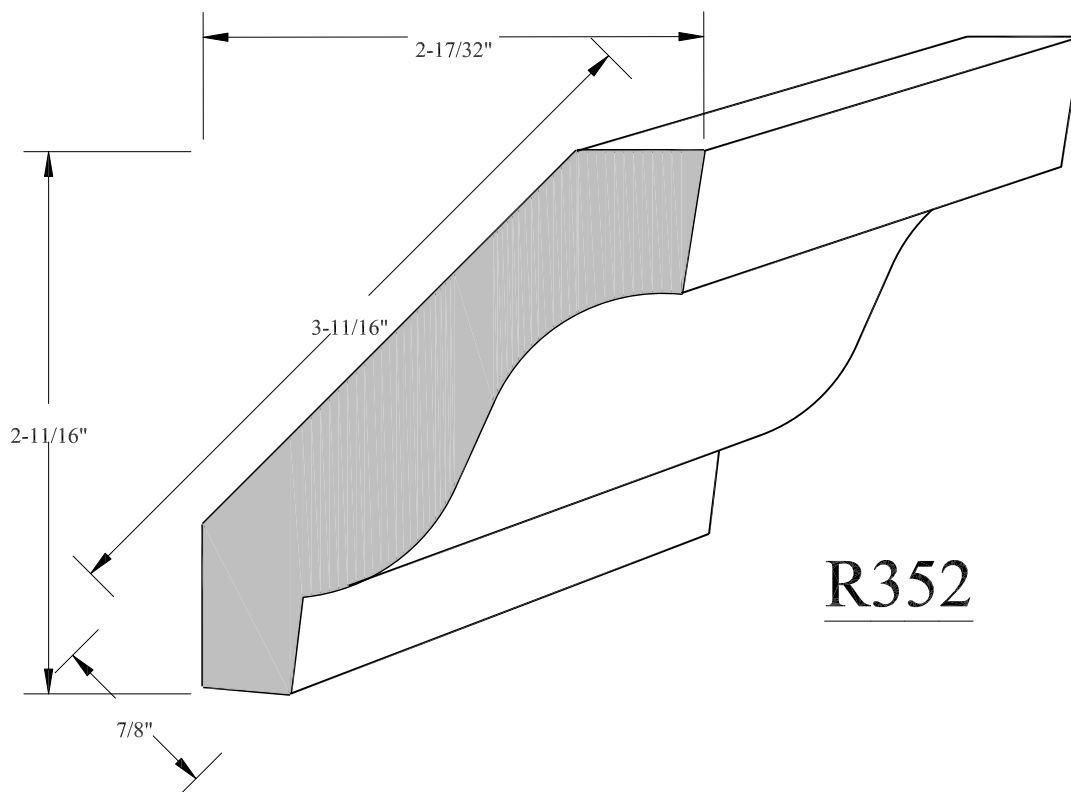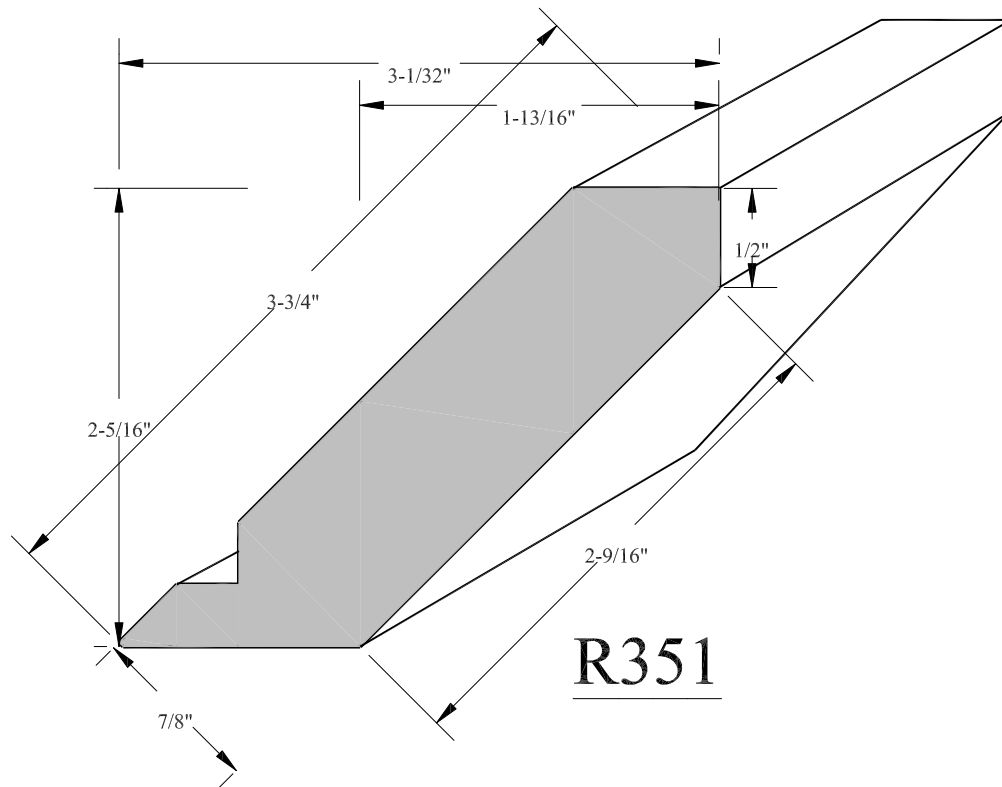

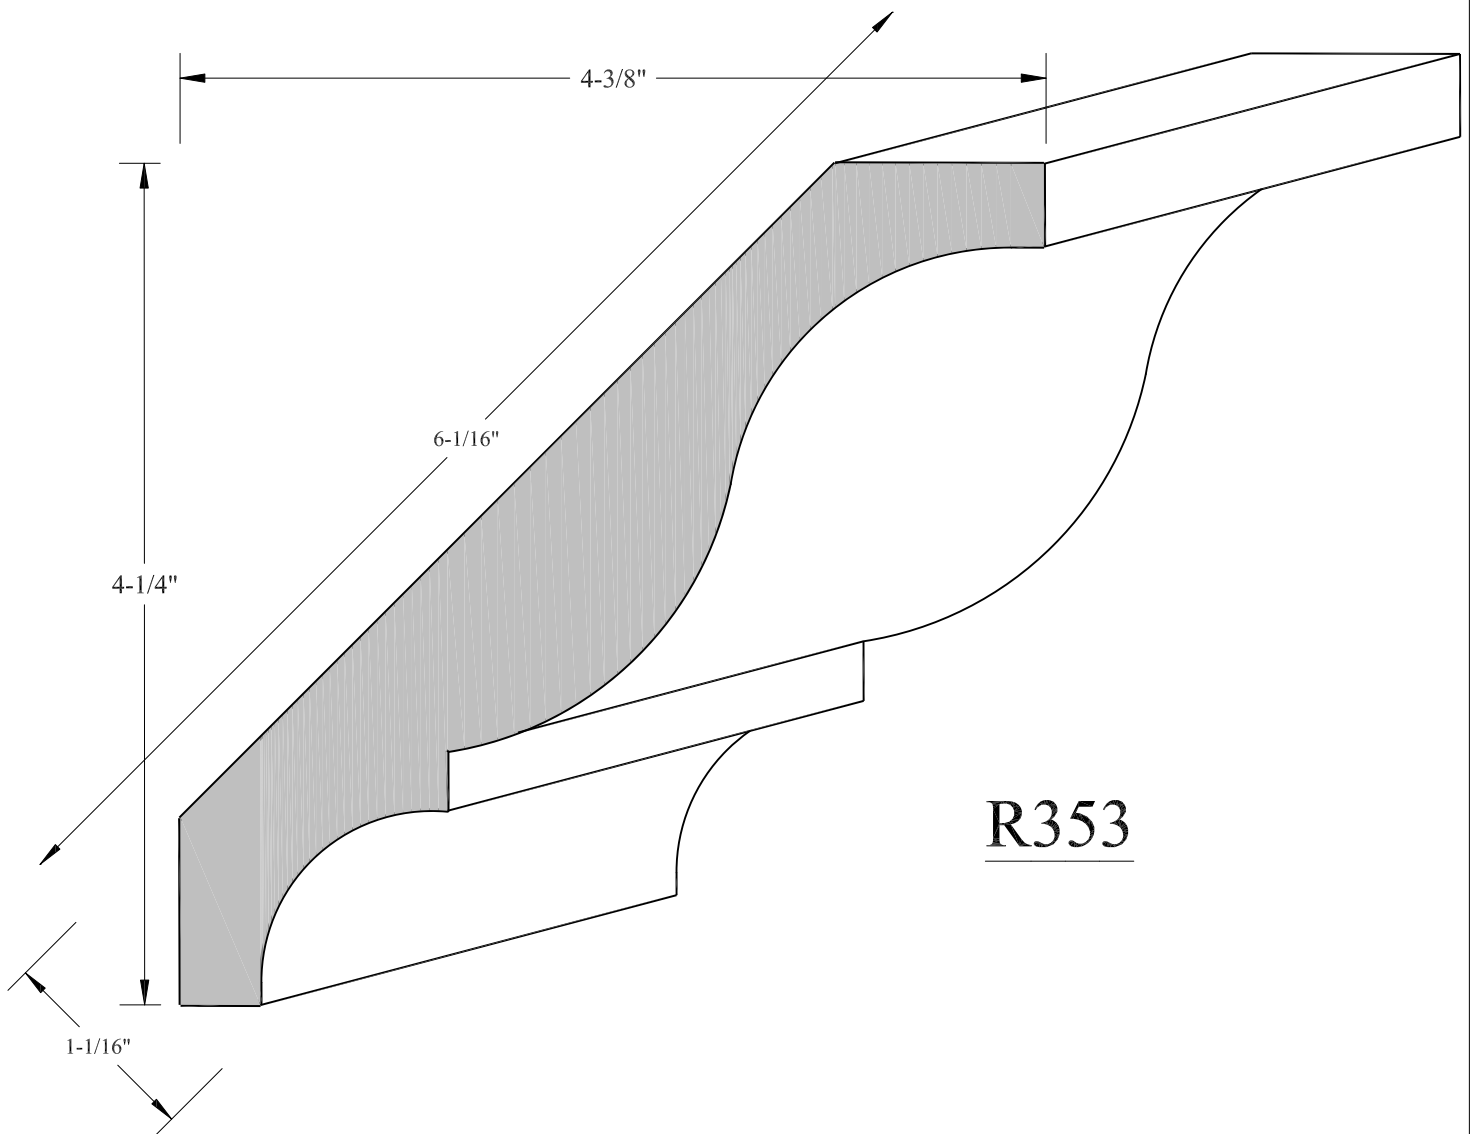


R353



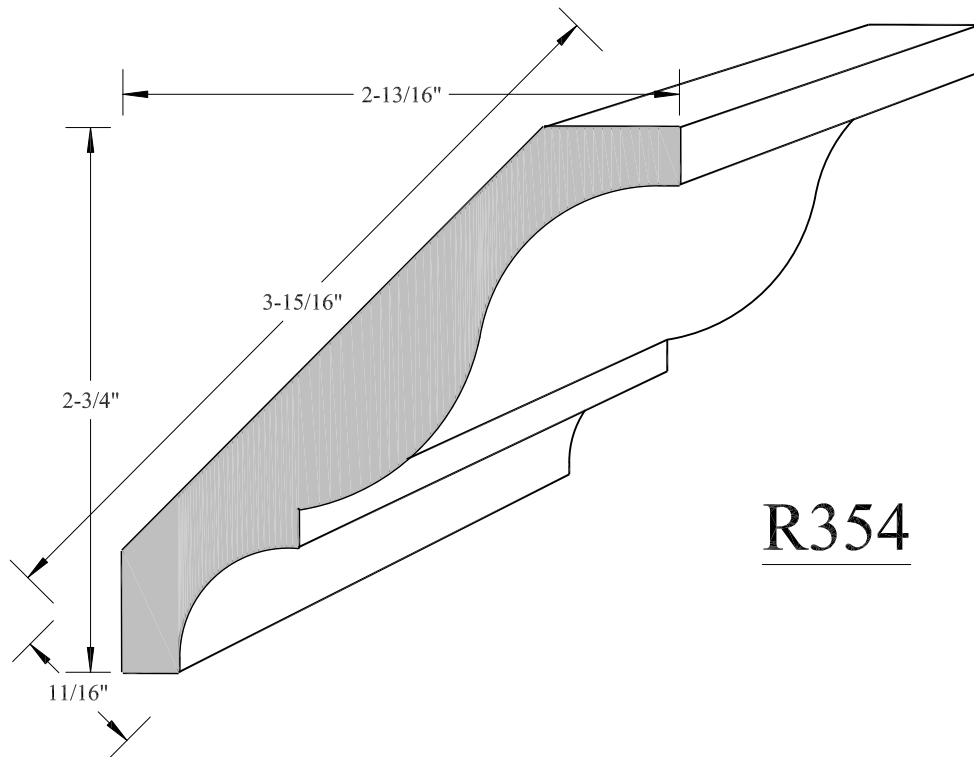


R354

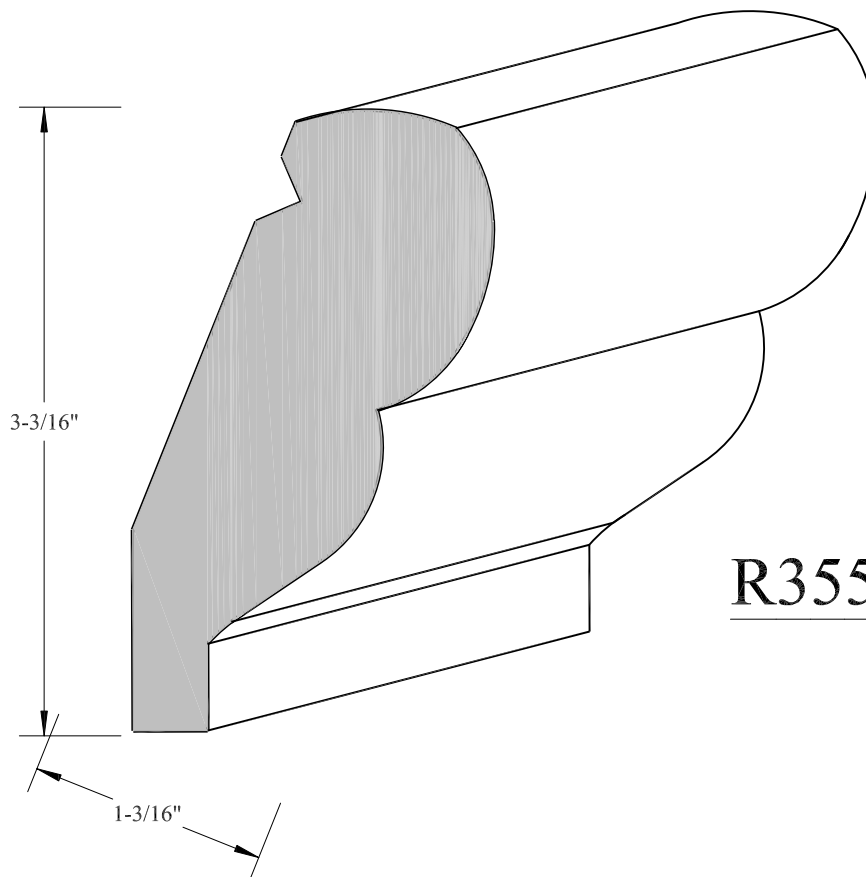


R355




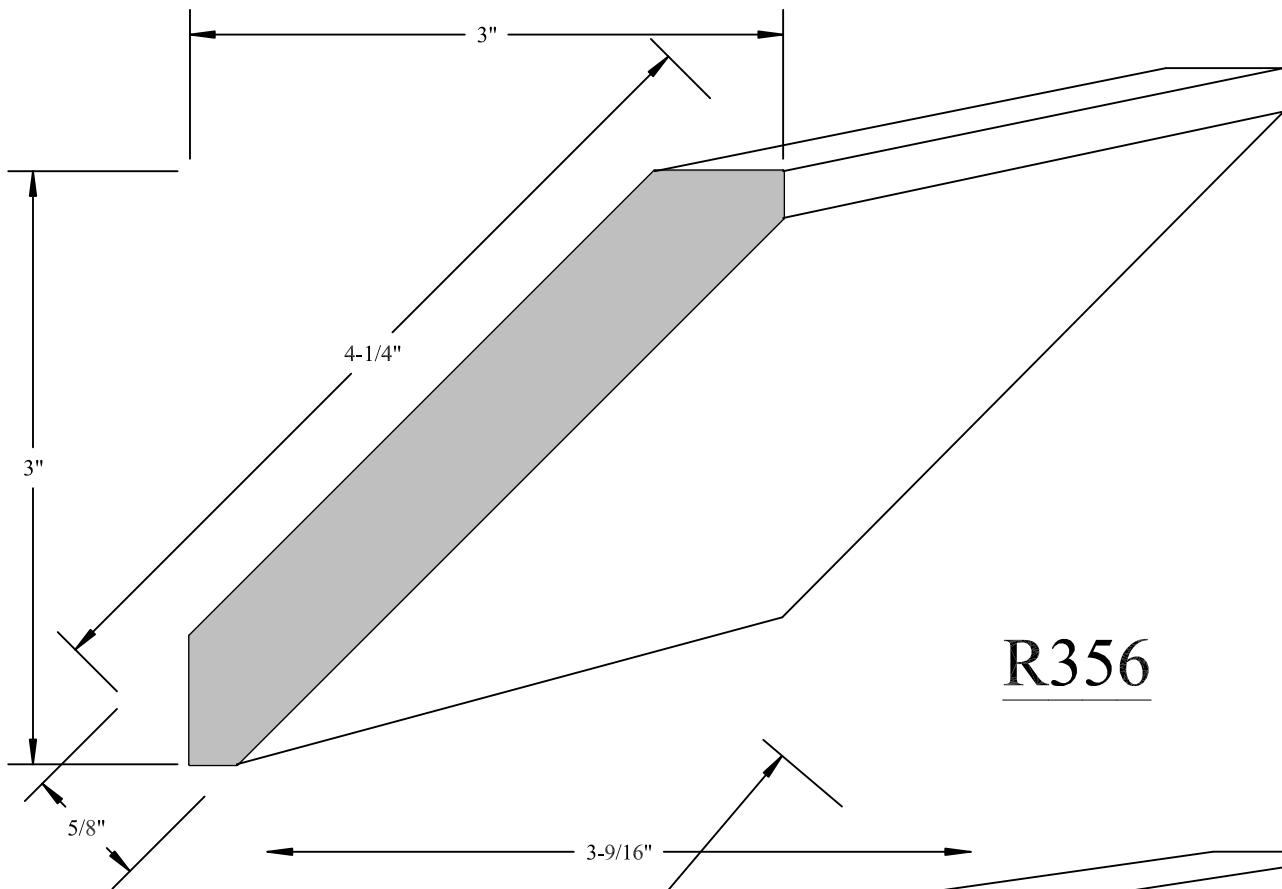



R356

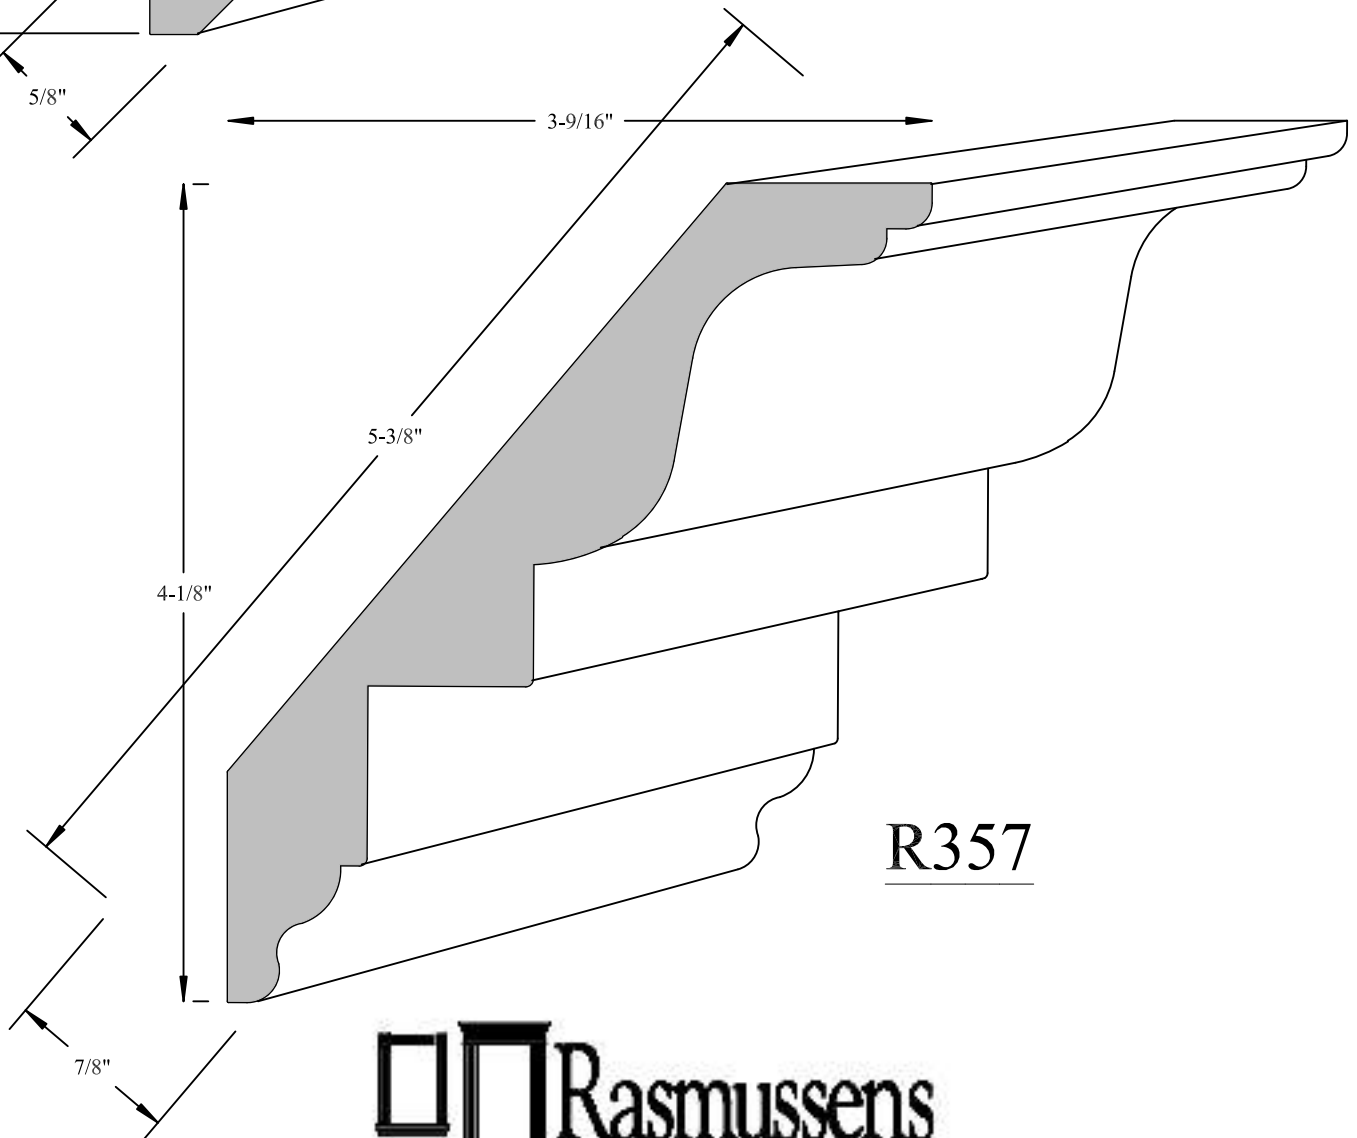


R357



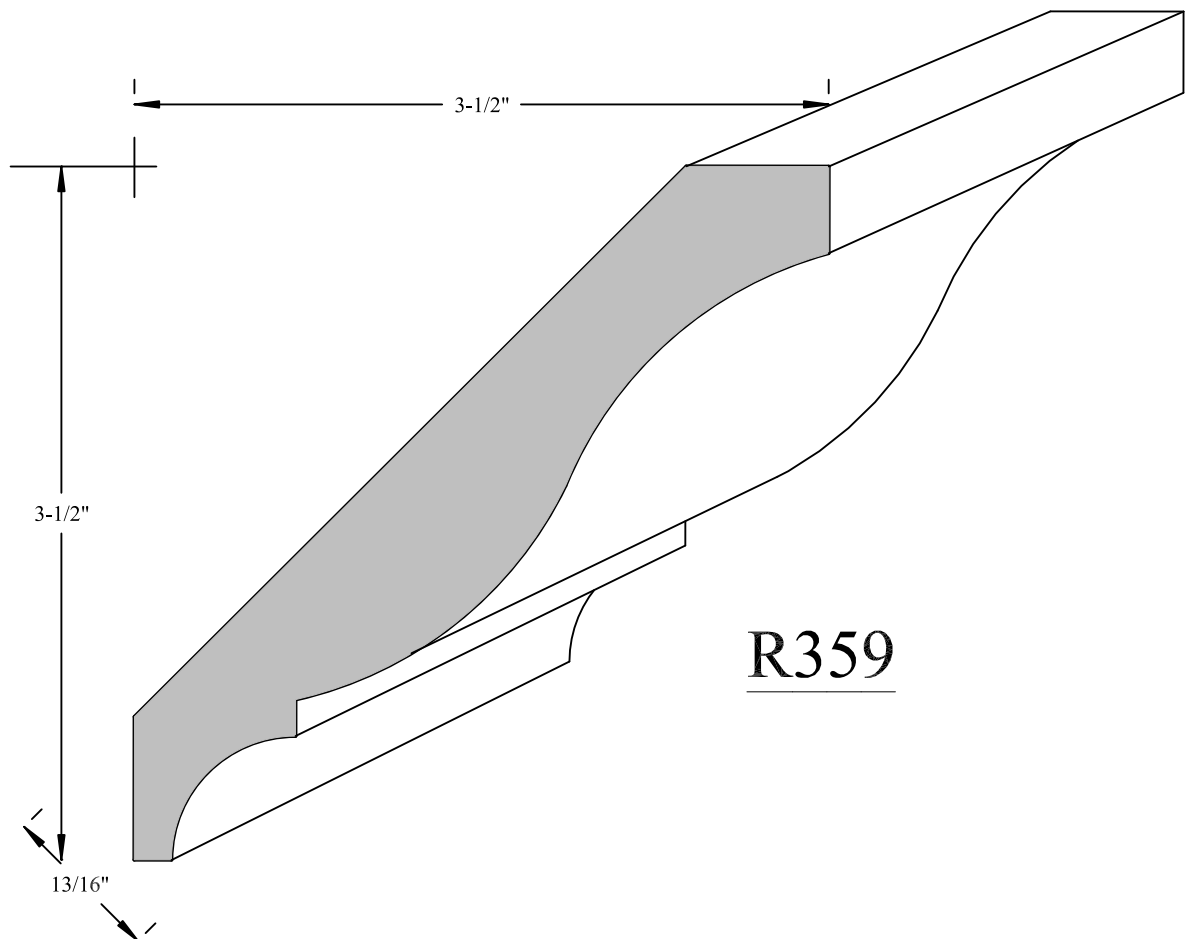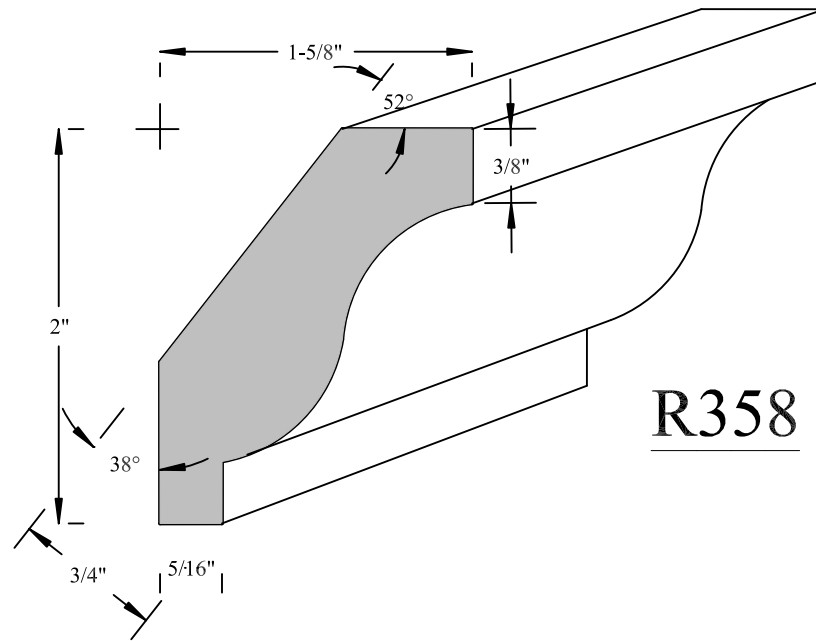

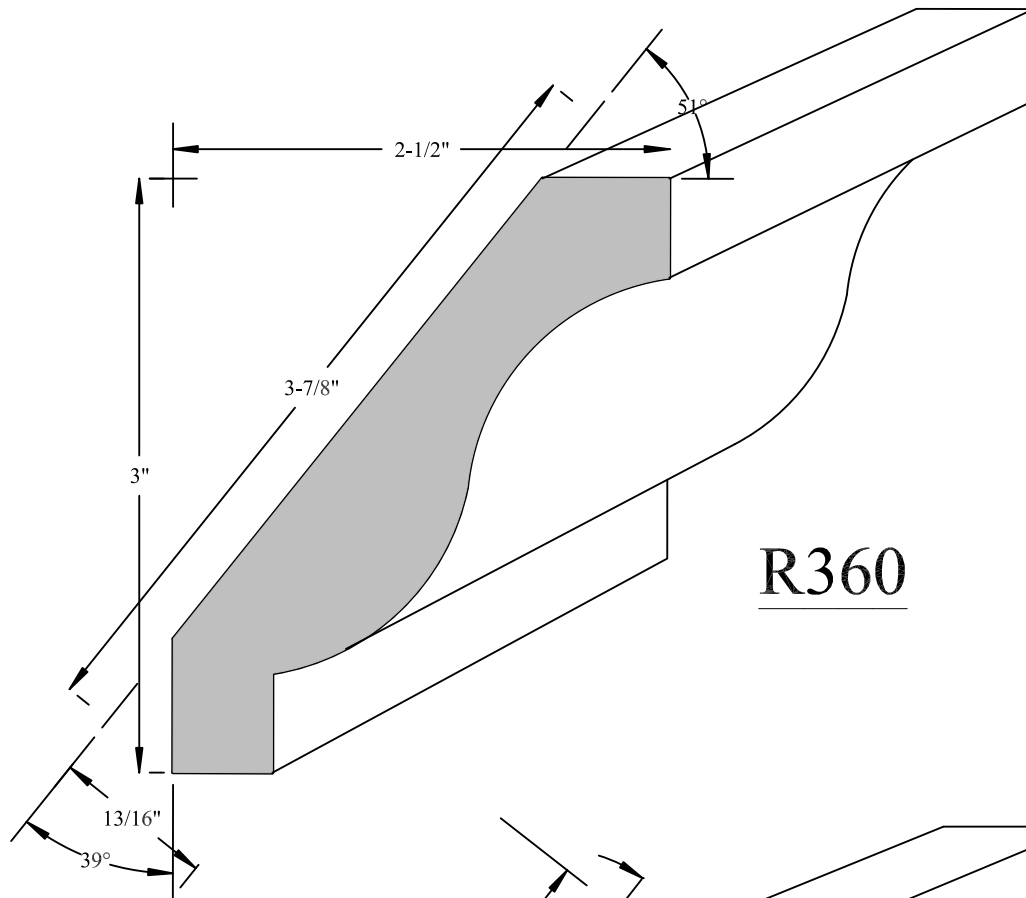


R360

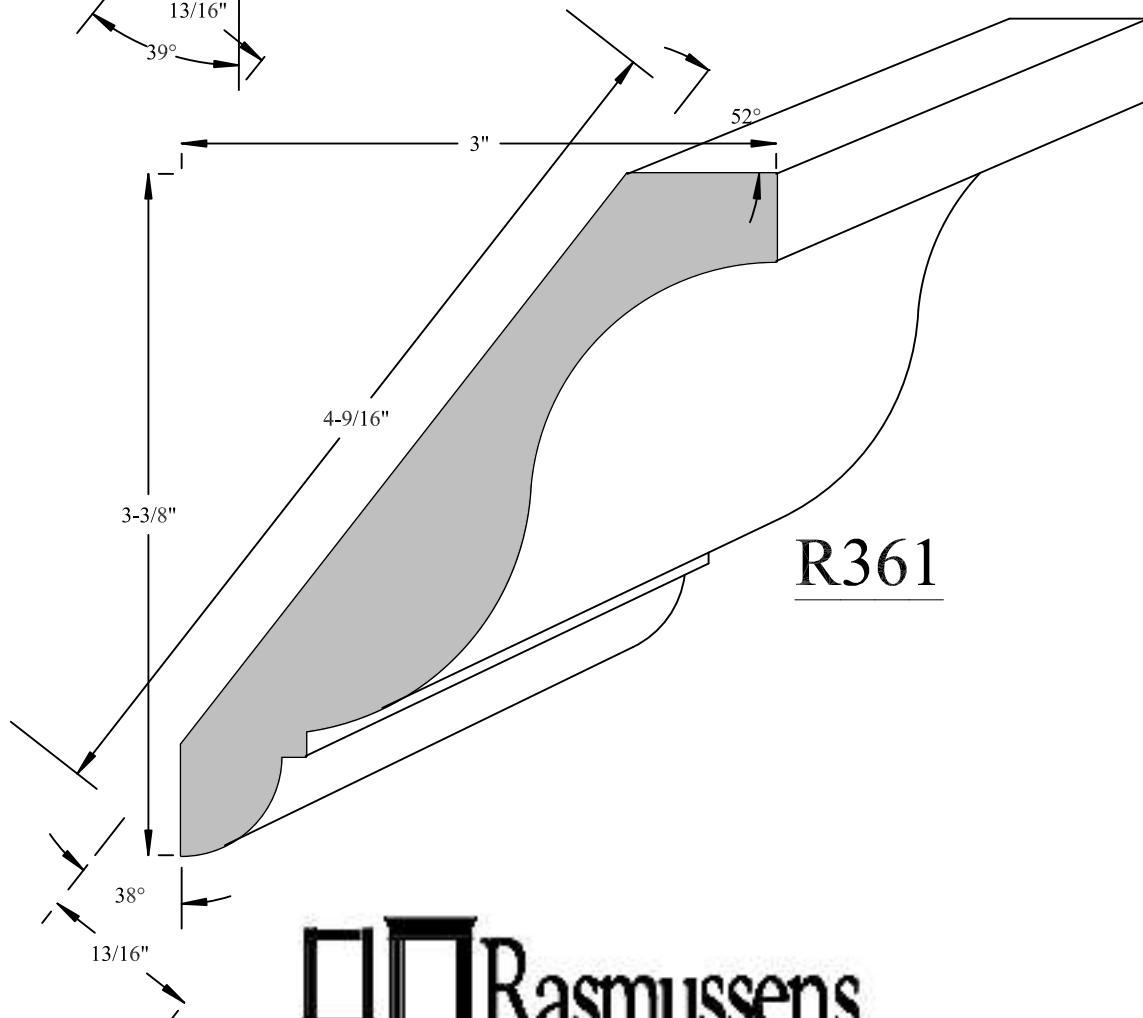


R361



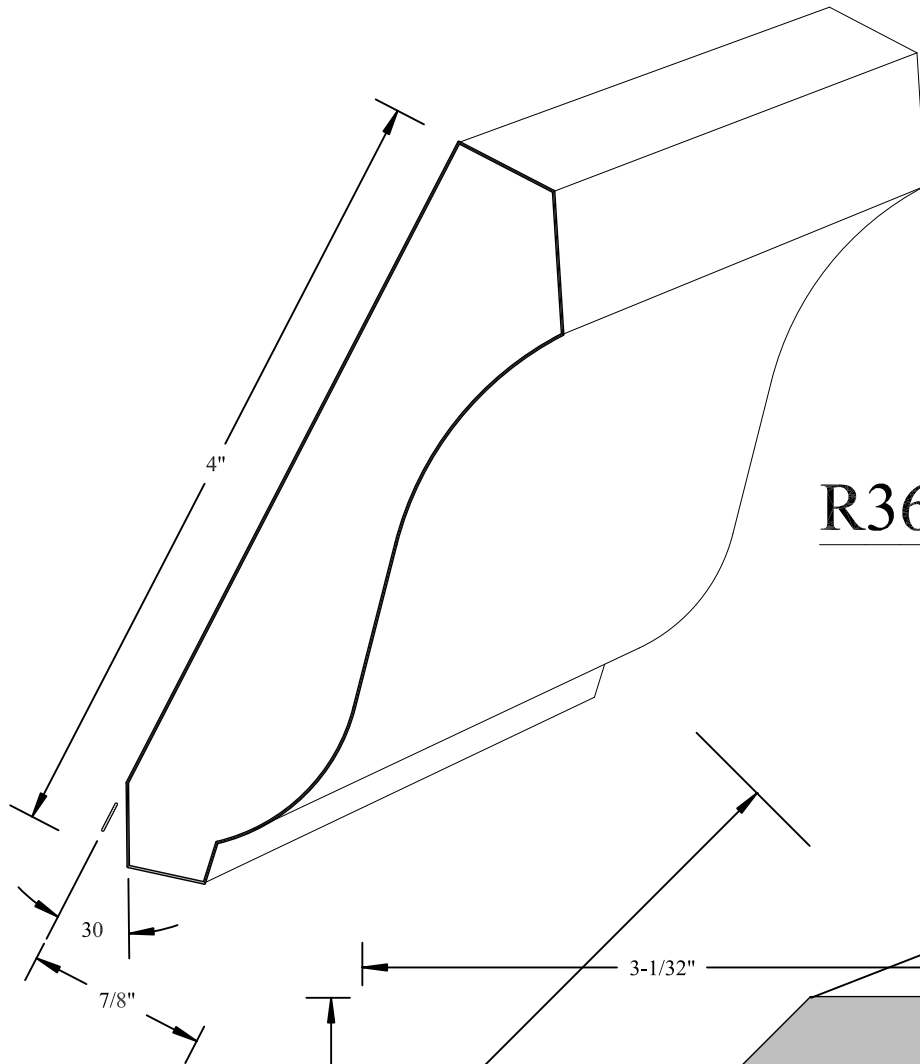


R362

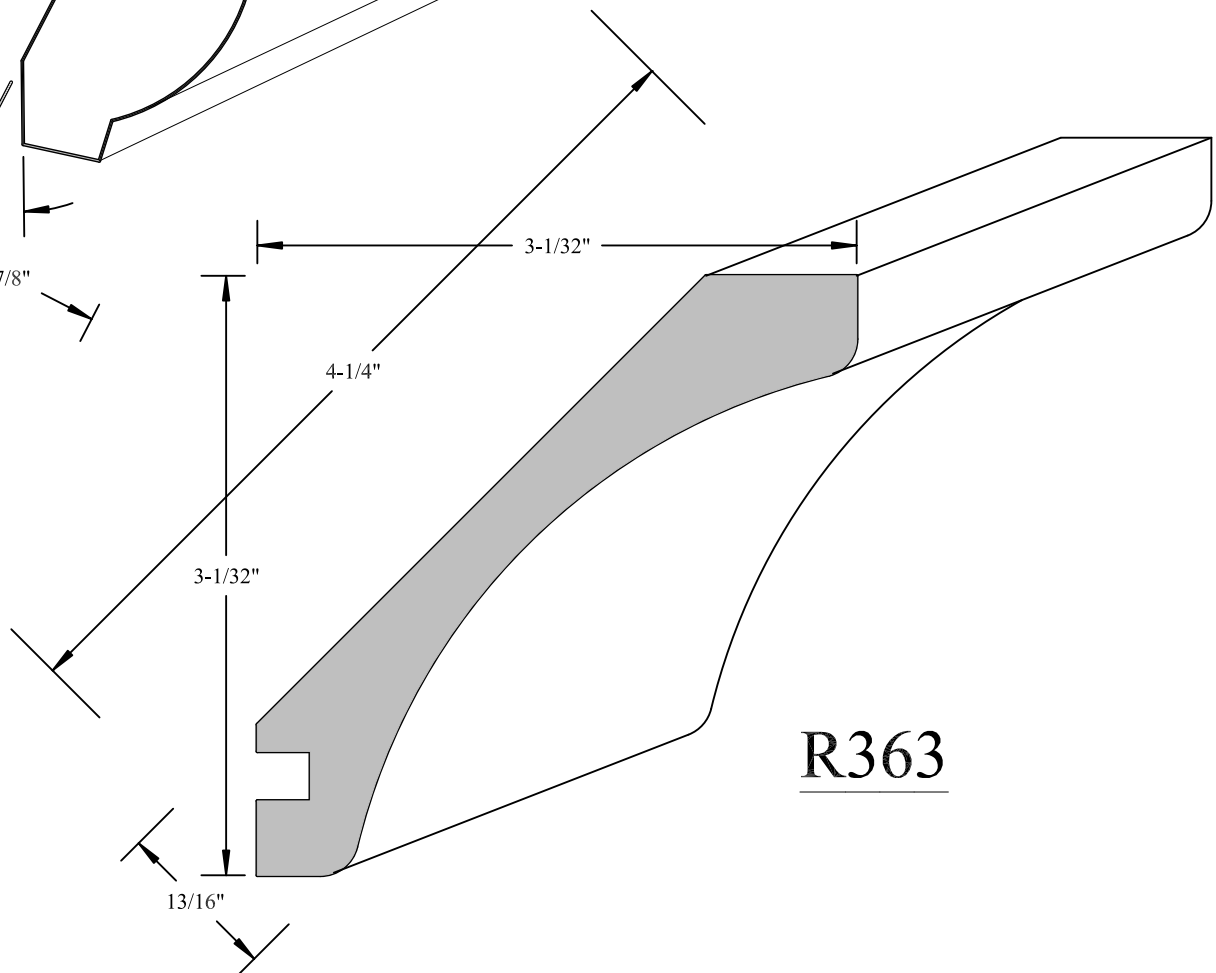


R363



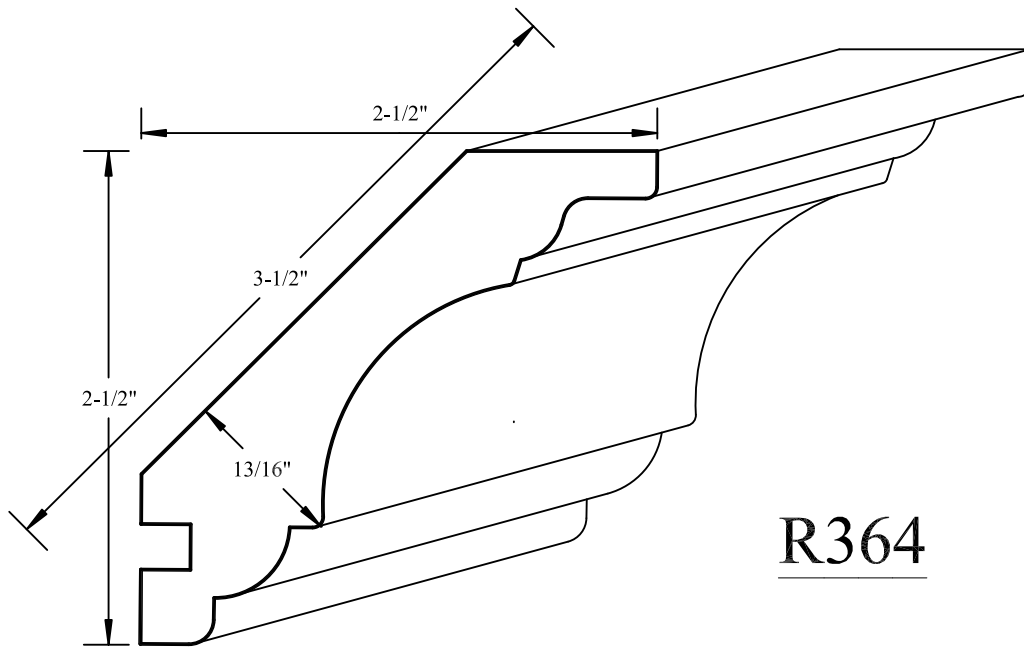


R364

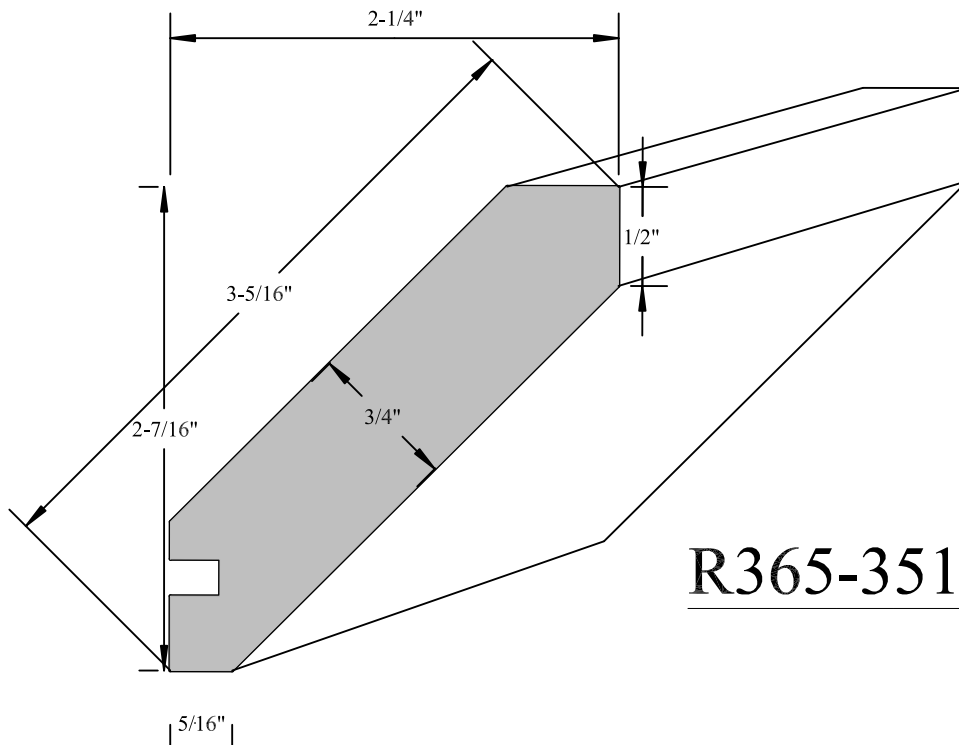


R365-3516



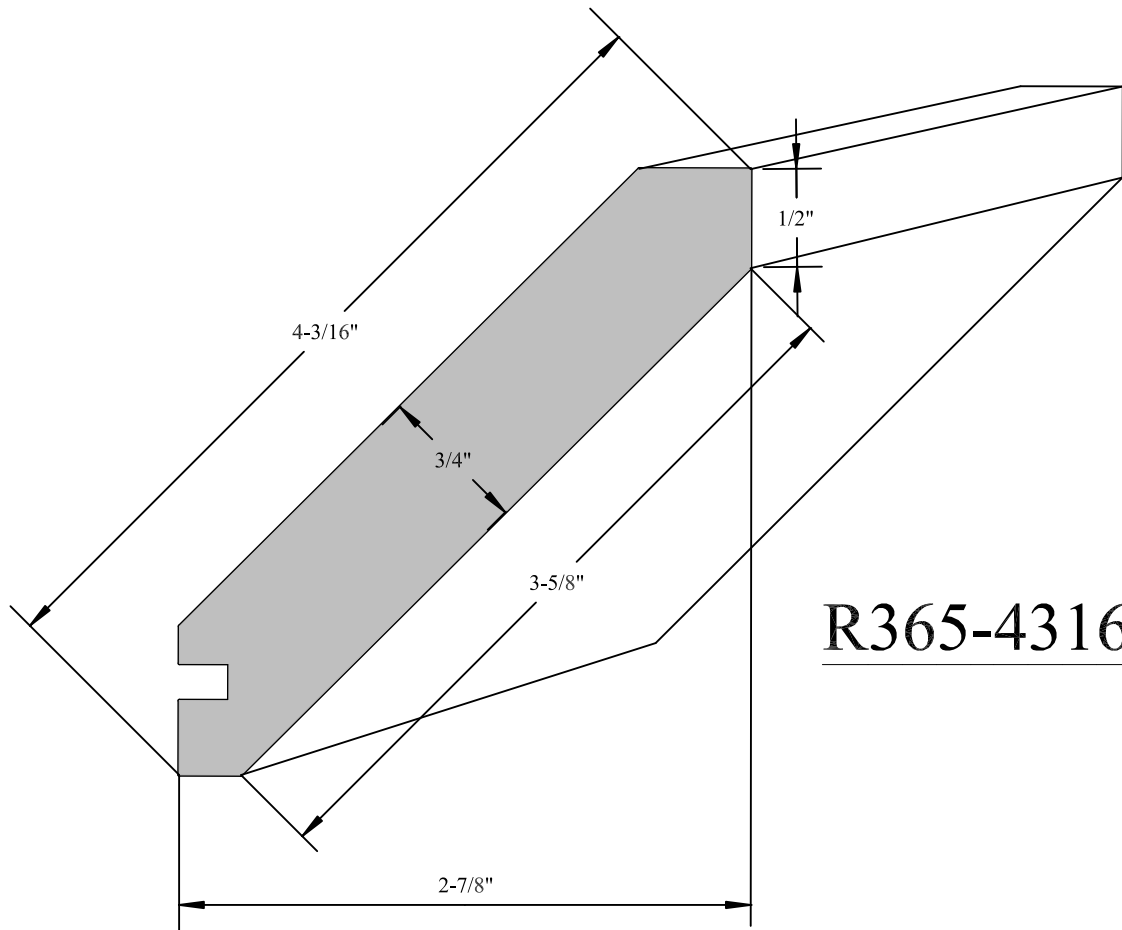


R365-4316

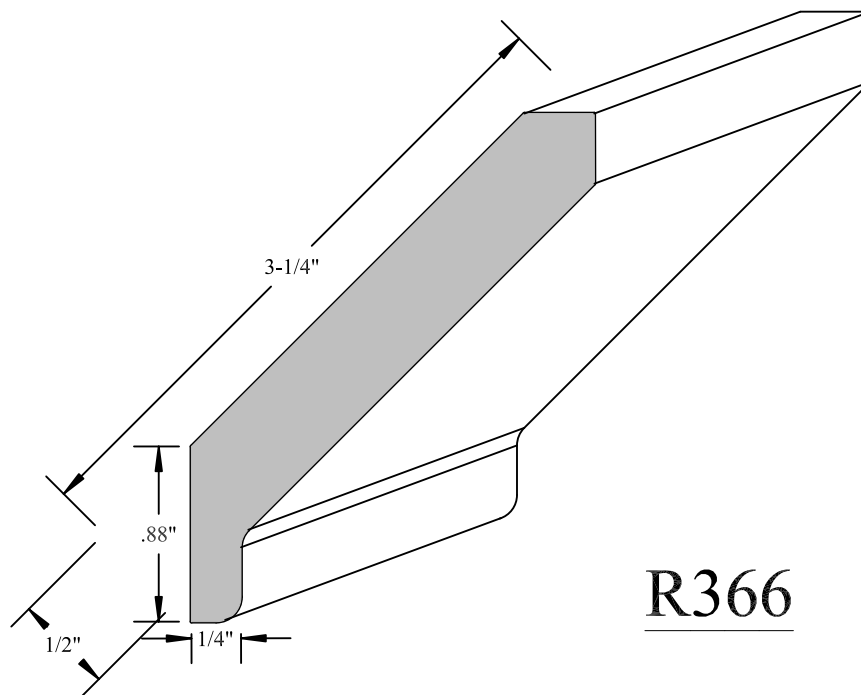


R366




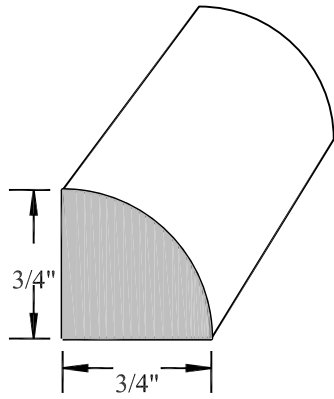


R401

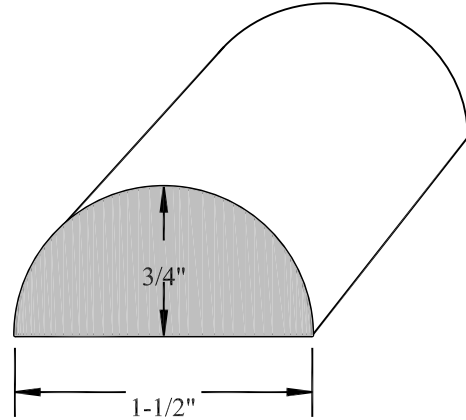

R402

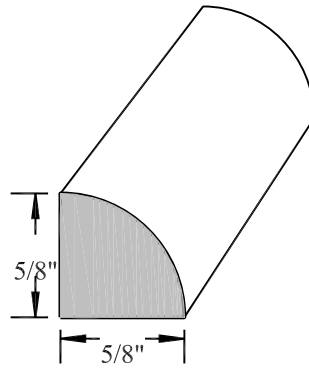


R403

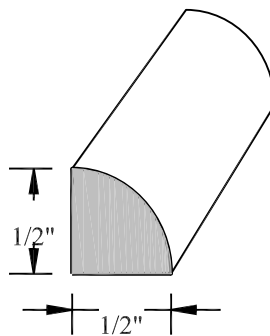


R406




Chair Rails

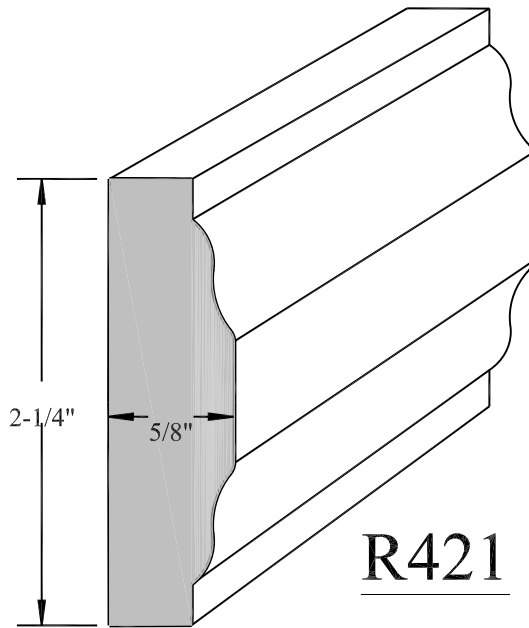


R421

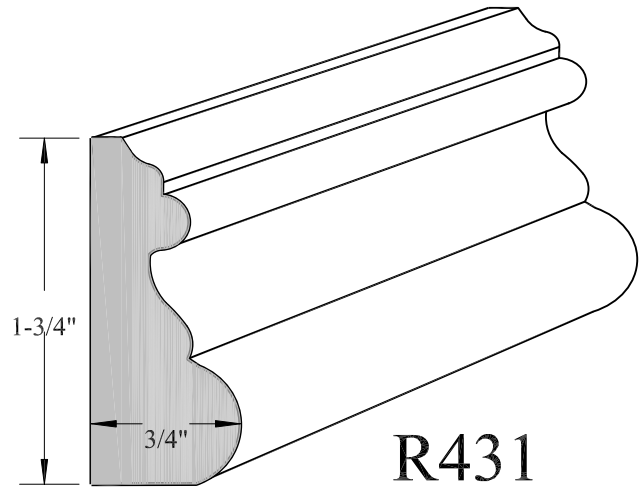

R431

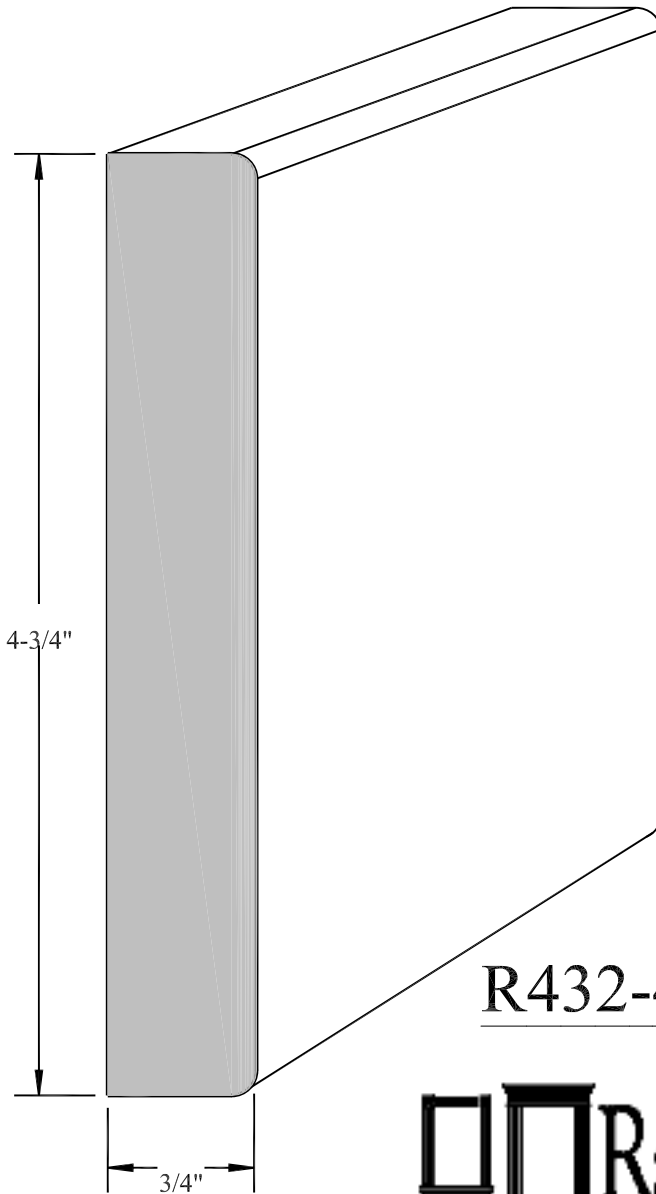






R432-434





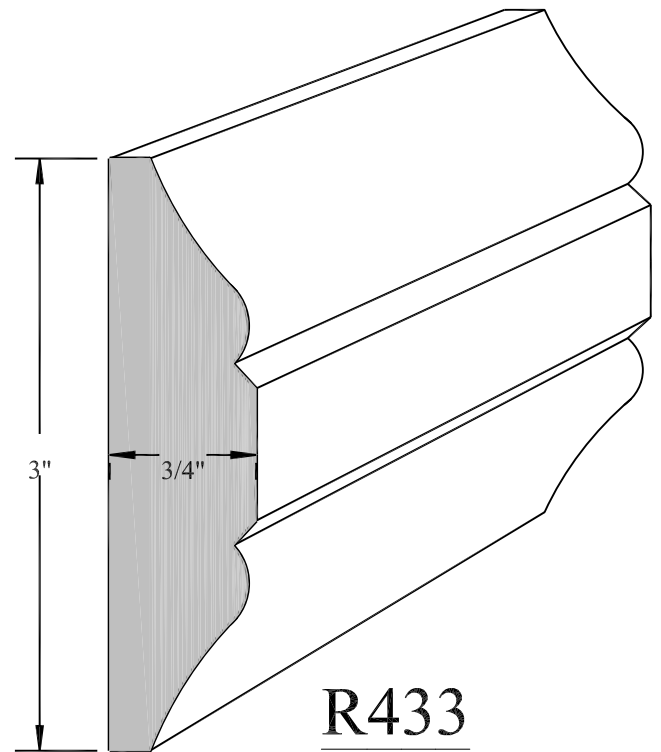


R433








Applied Mouldings


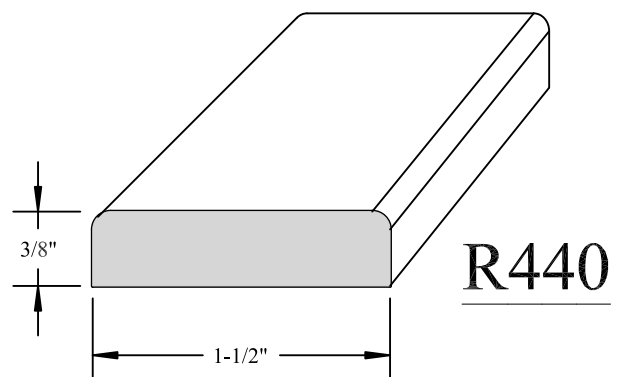
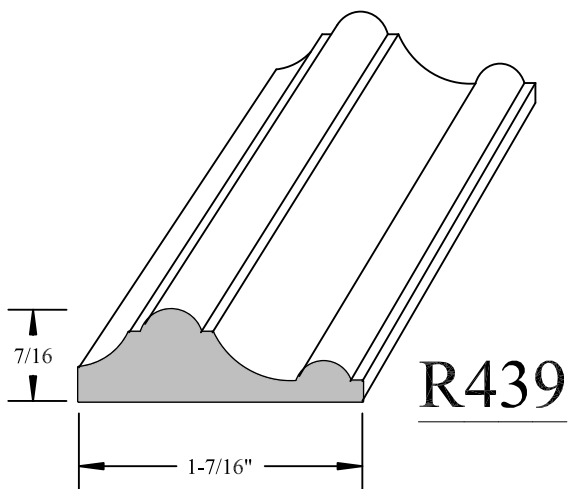
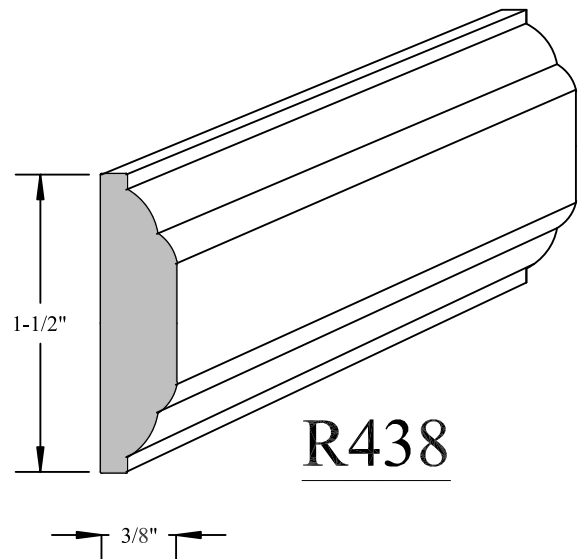
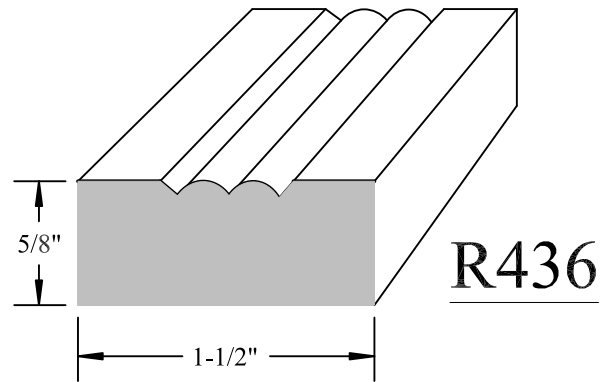
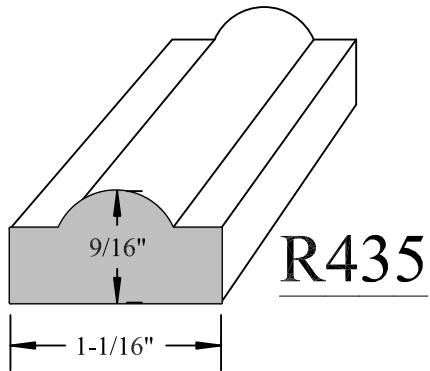


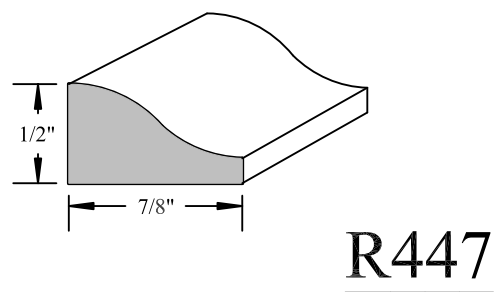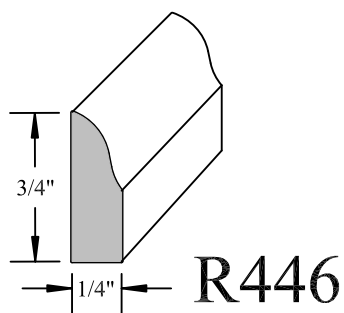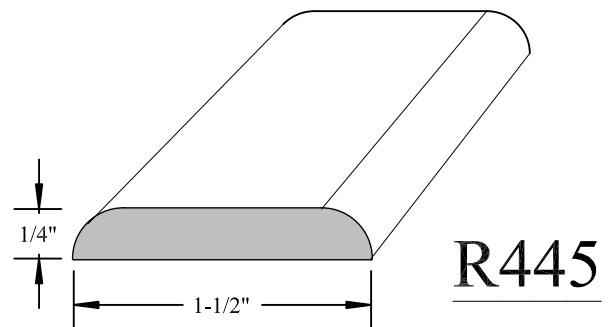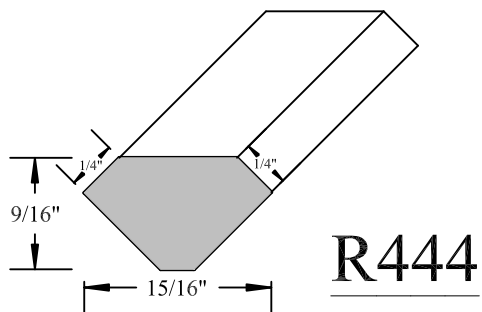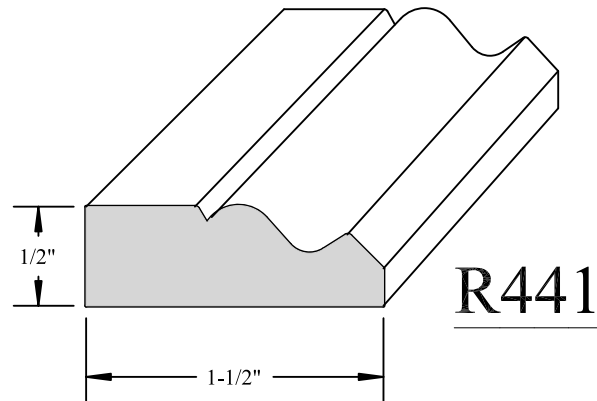









Applied Mouldings

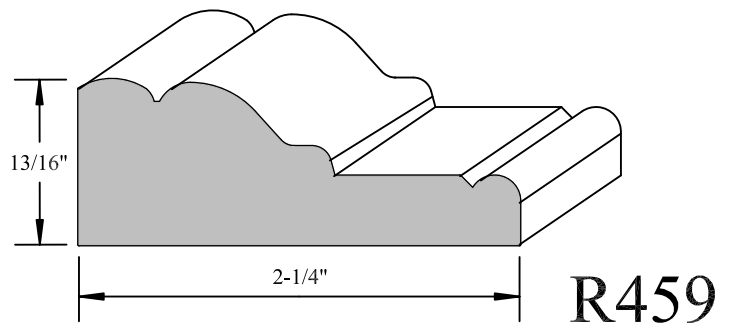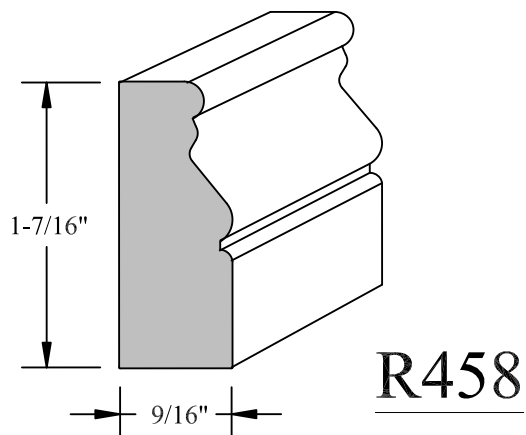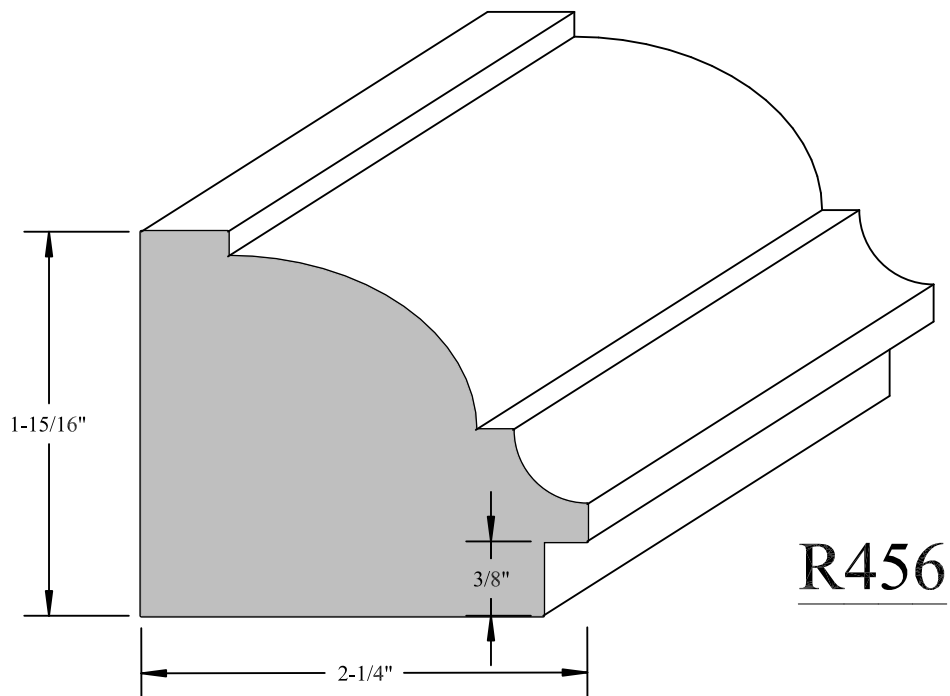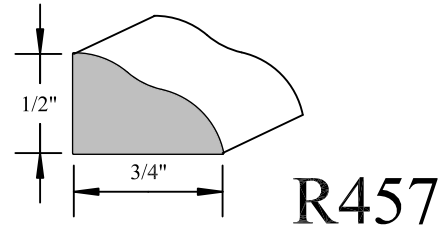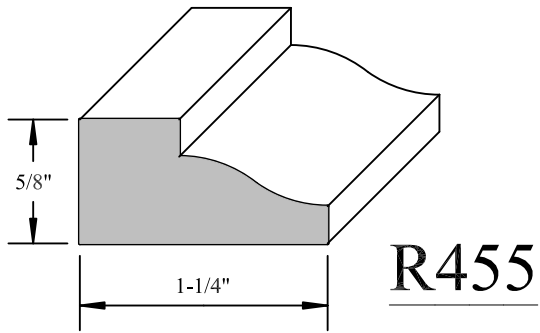


Back Bands

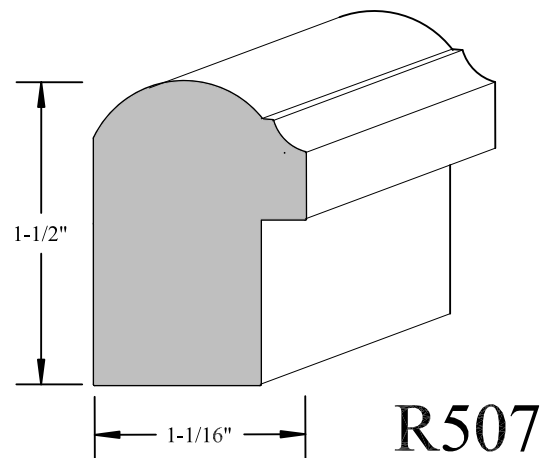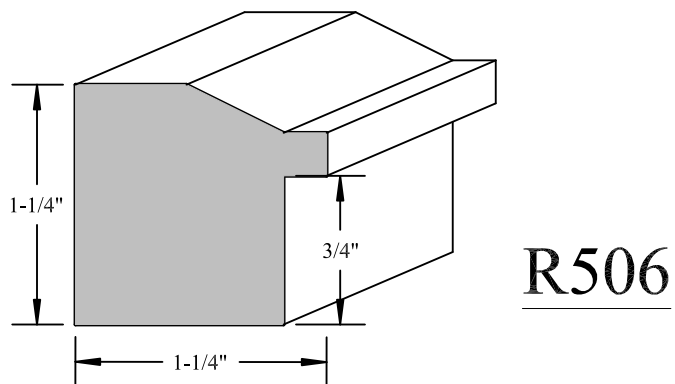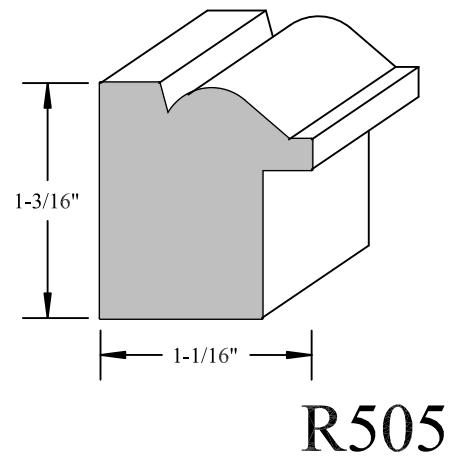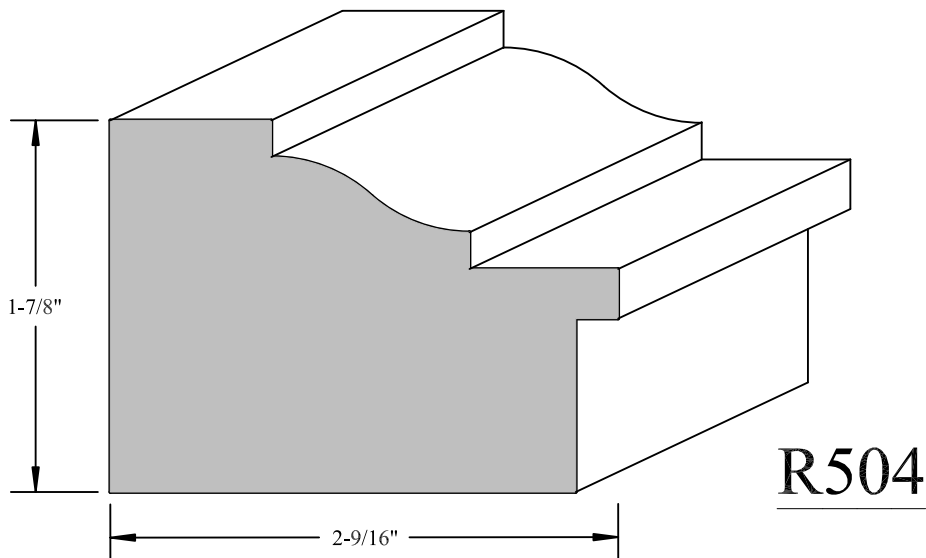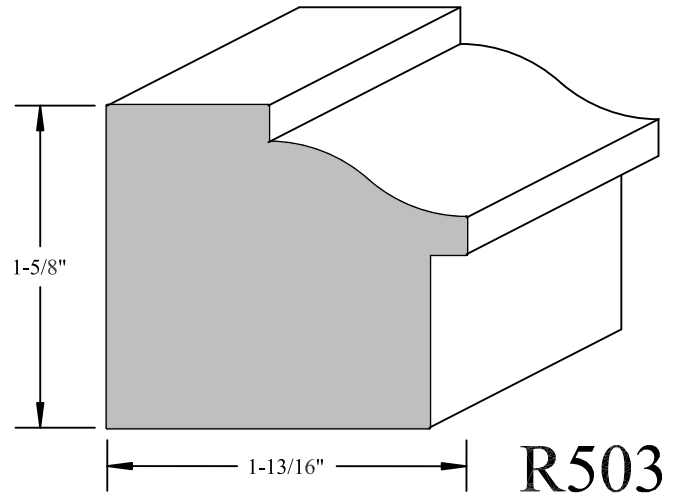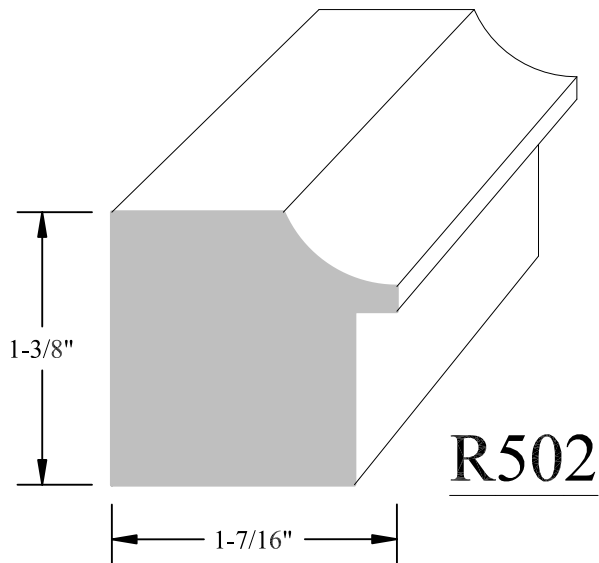


Applied Mouldings

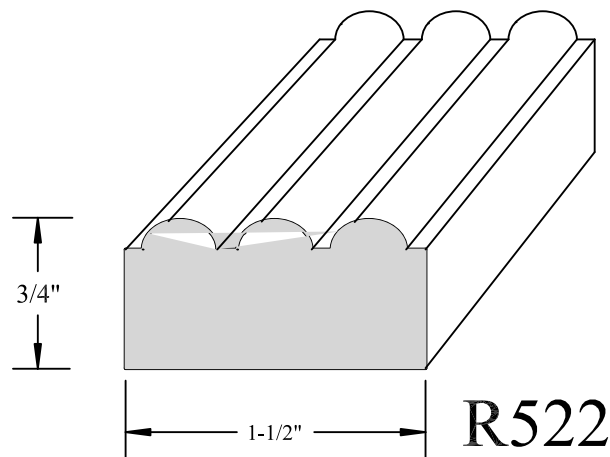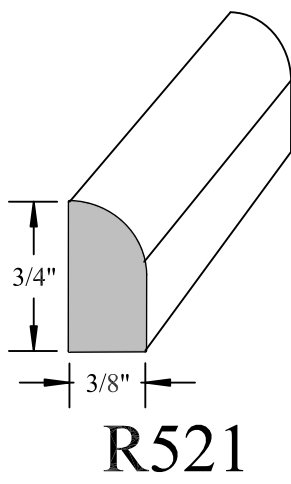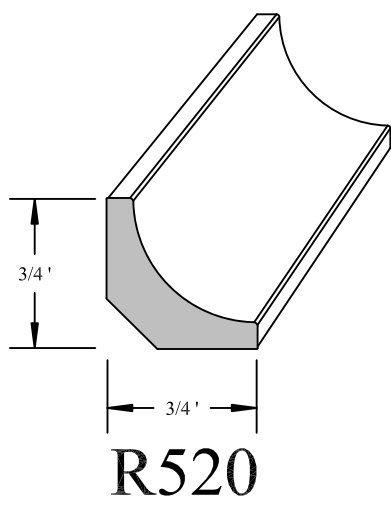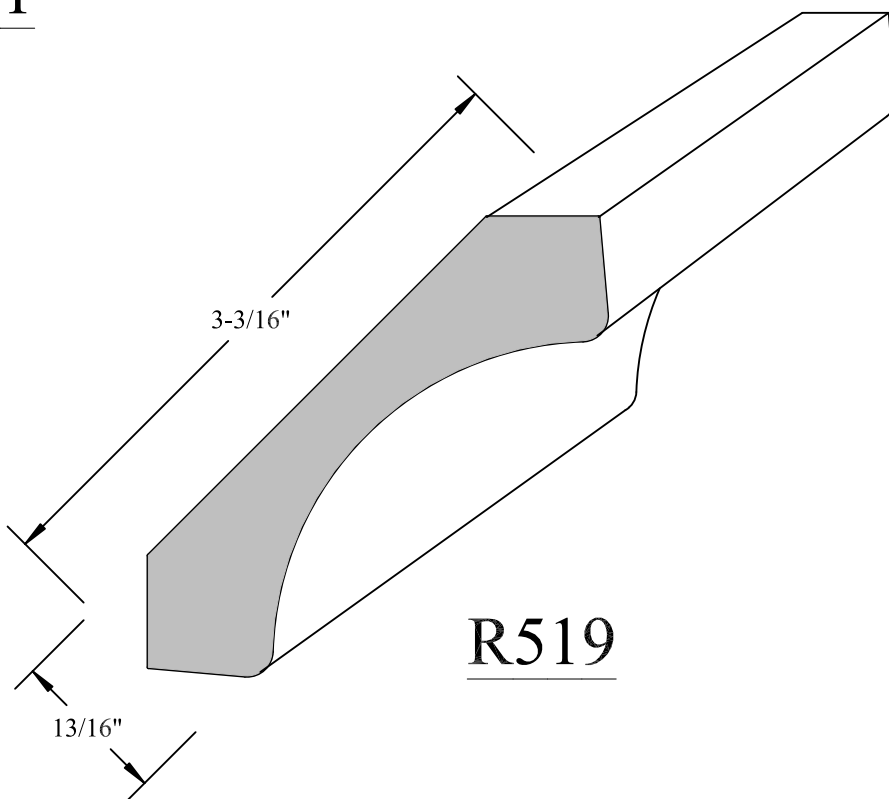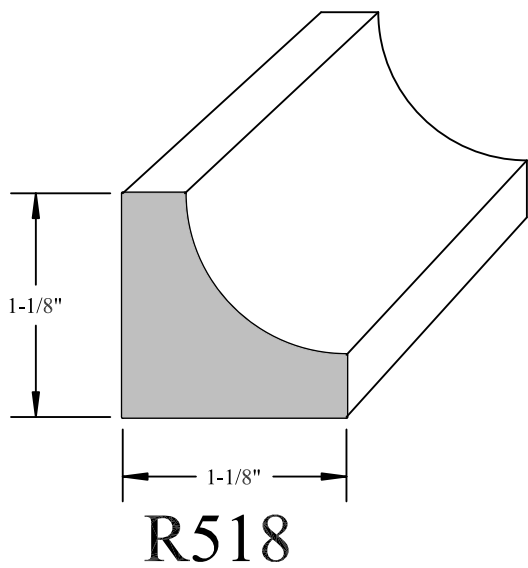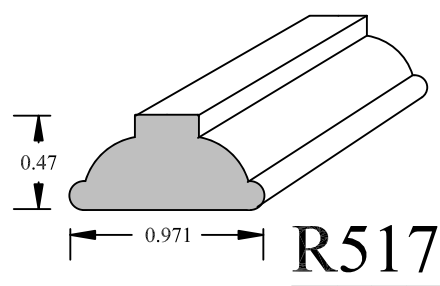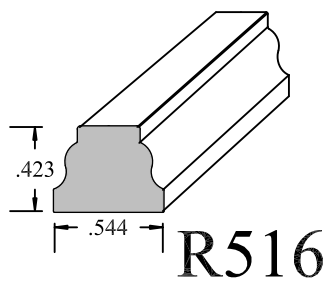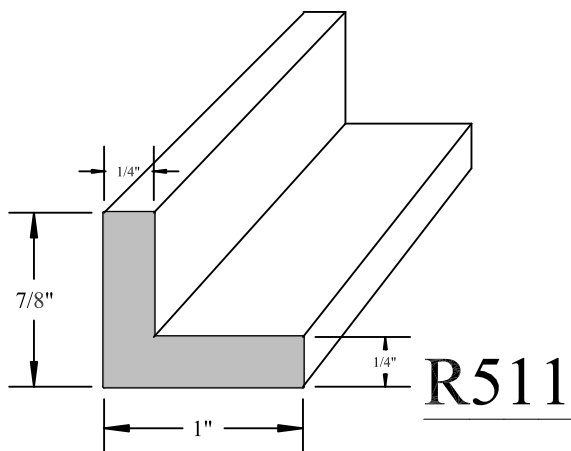


Applied Mouldings

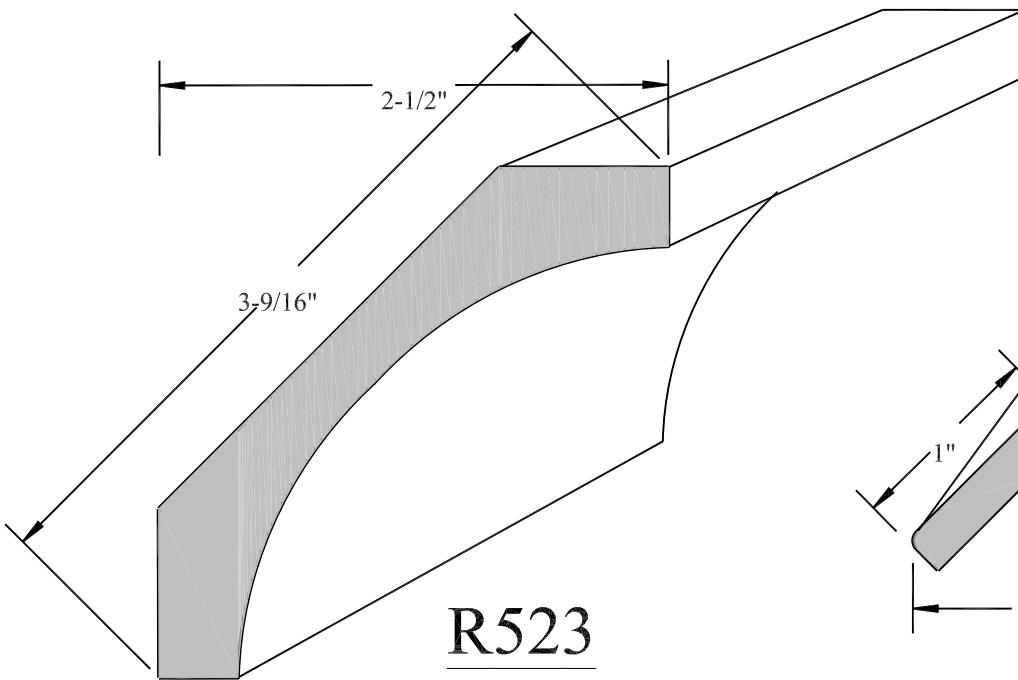


R523

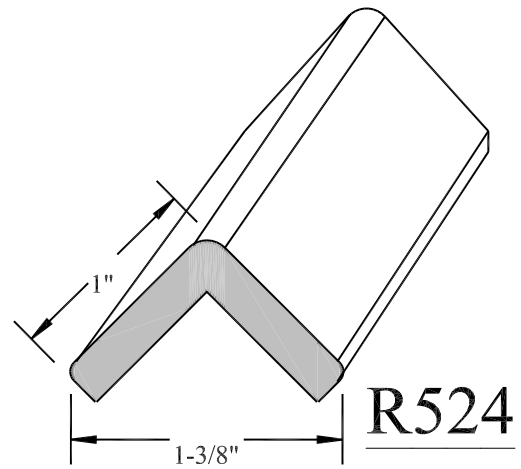


R524

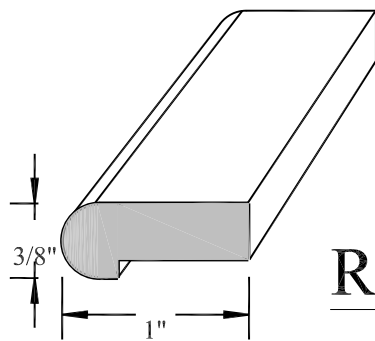


R526

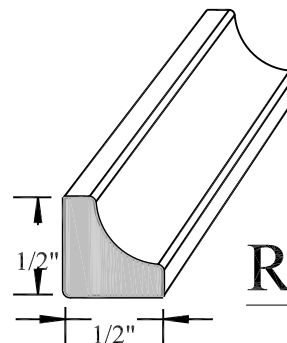

R527

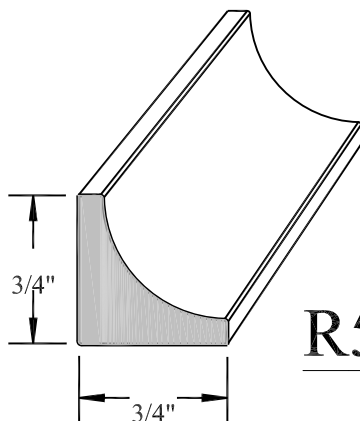


R528

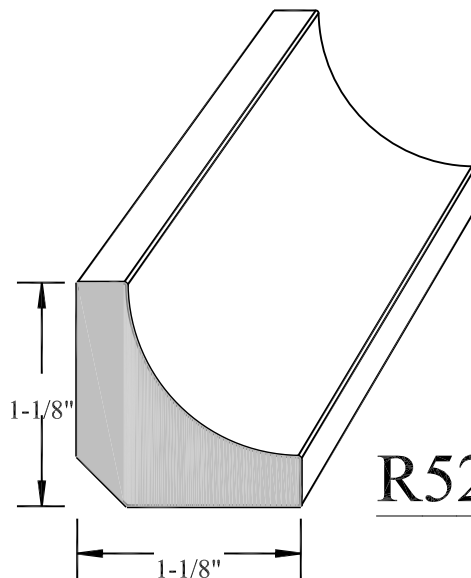


R529




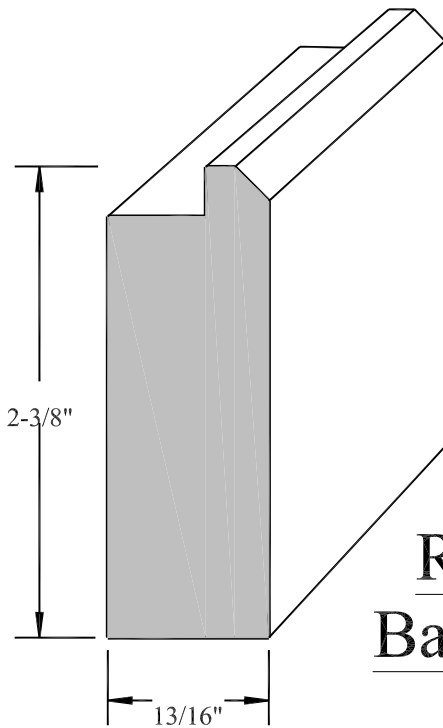


R530-238
Base Bottom

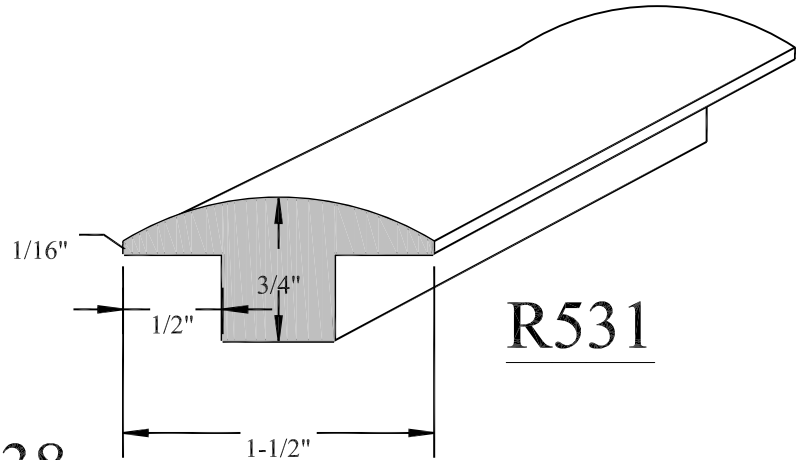


R531

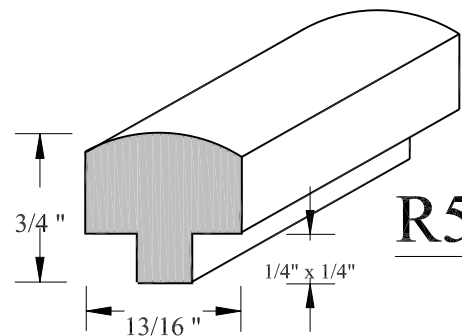

R533

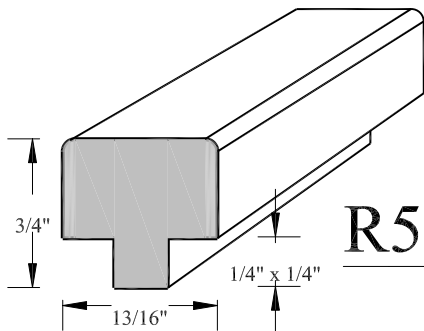


R532

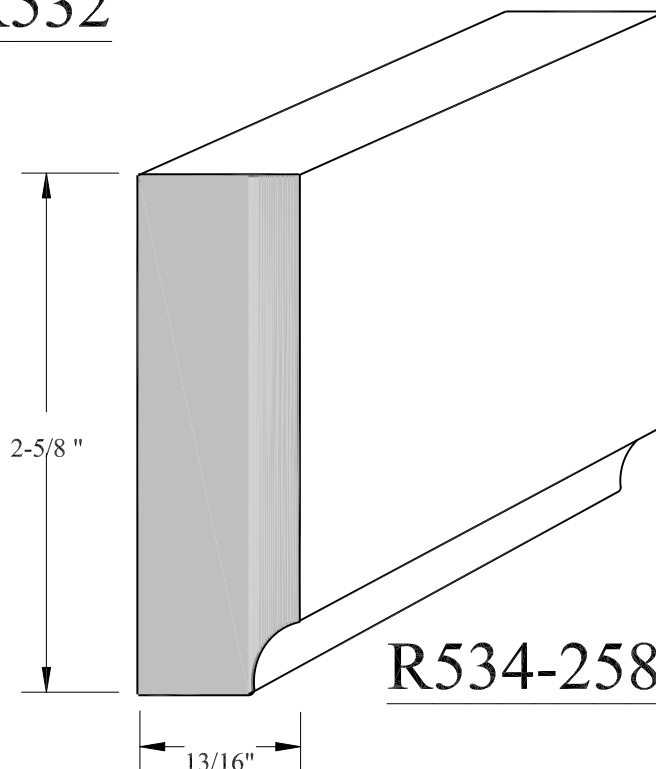


R534-258




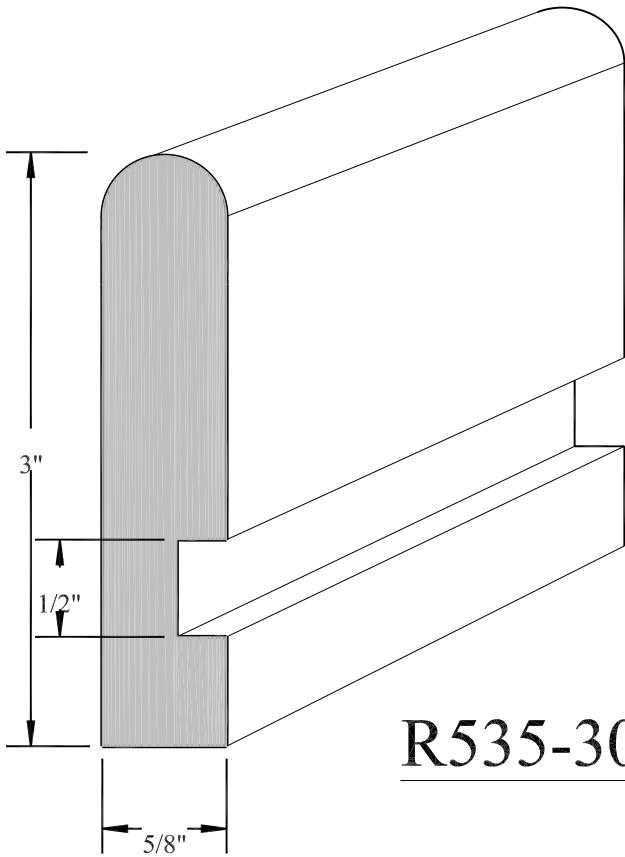


R535-300

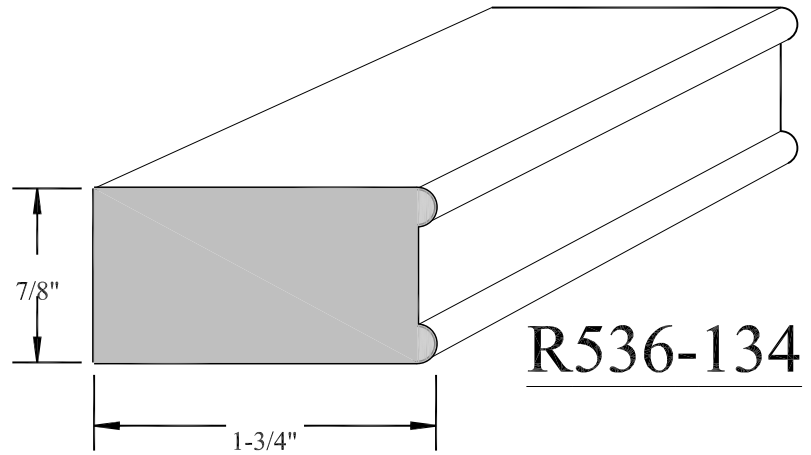


R536-134

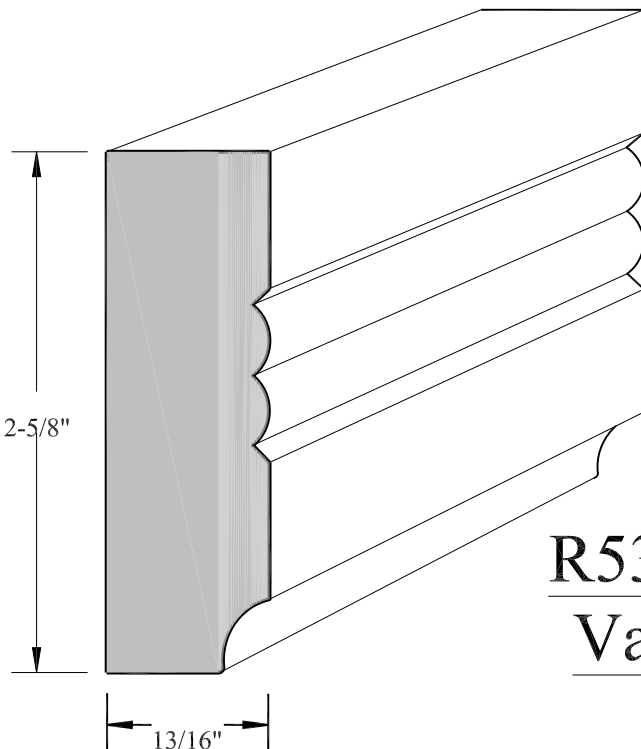


R537-258
Valance

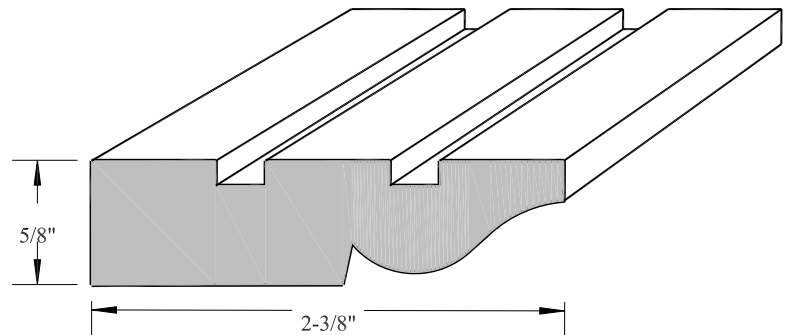


R538
Plate Rail

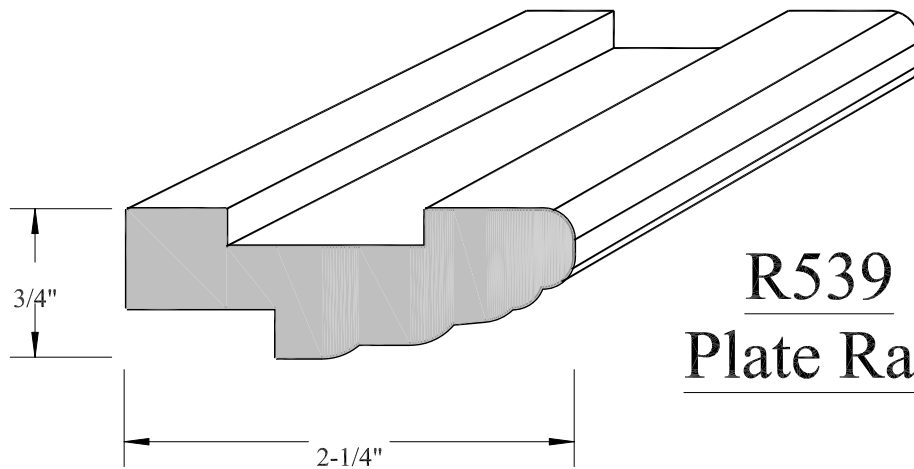

R539
Plate Rail

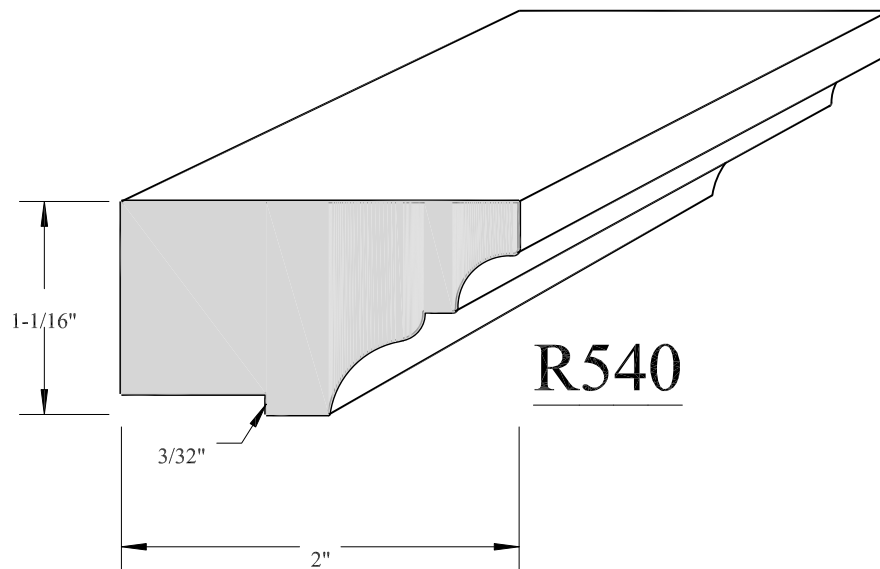

R540

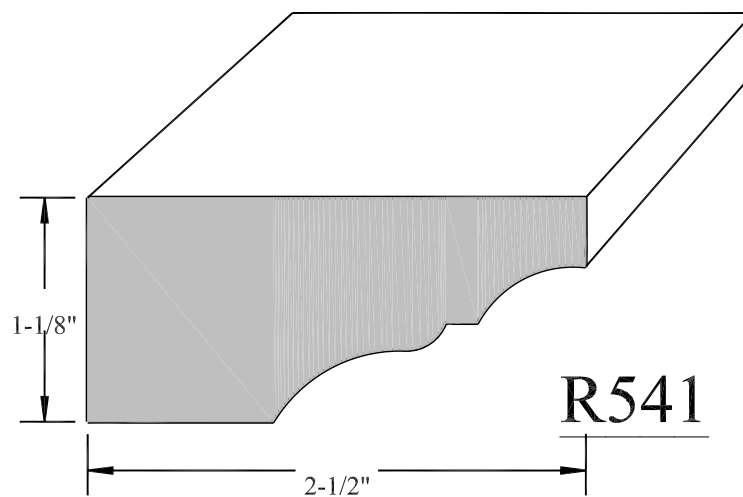




R541

Cap moulding for "Boston Header"




Add Lasting Value To Your Home ♦ Traditional Designs In Solid Wood


Backbands

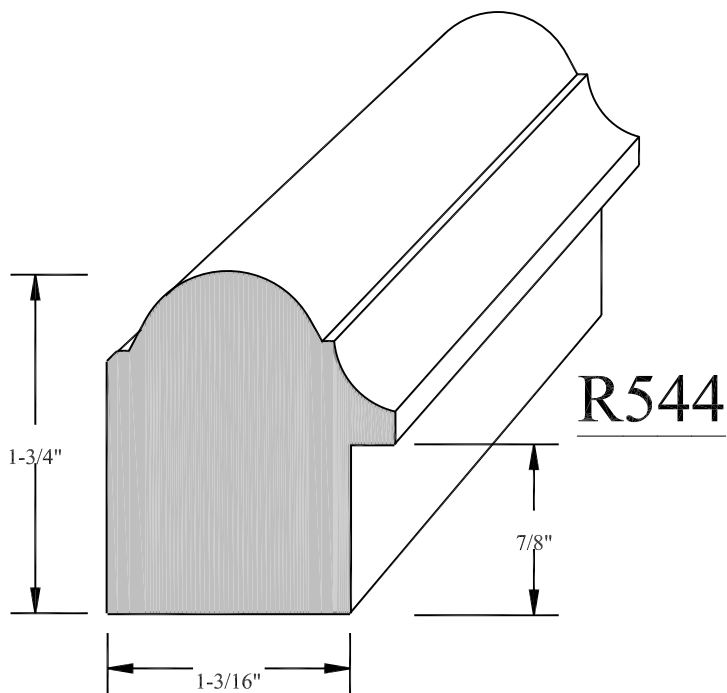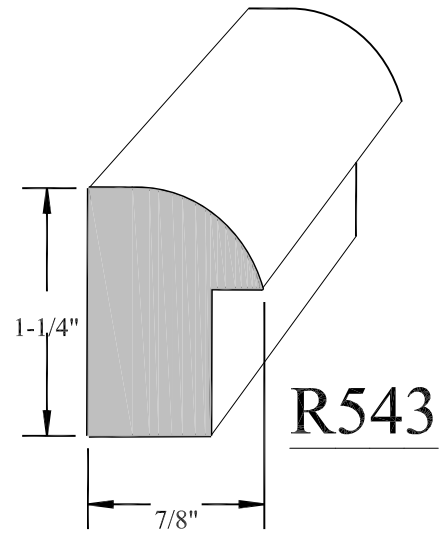
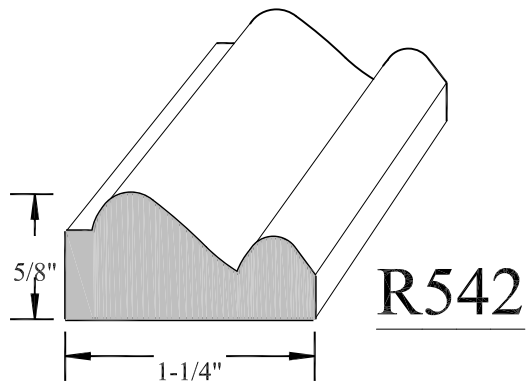


combine with casing R031

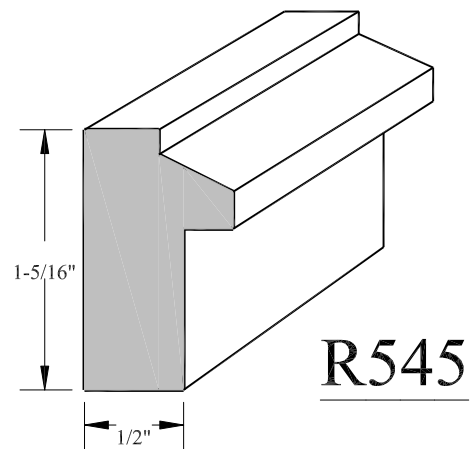


combine with casing R033

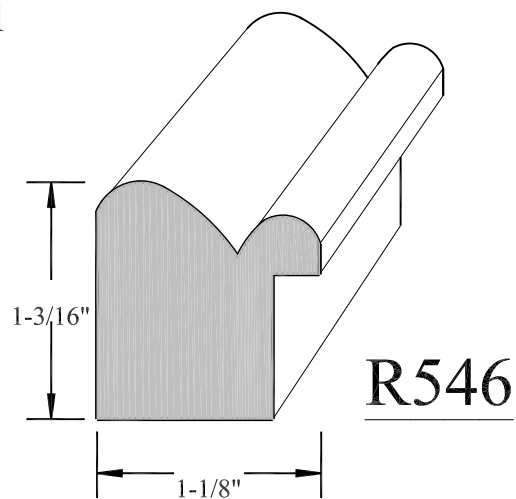


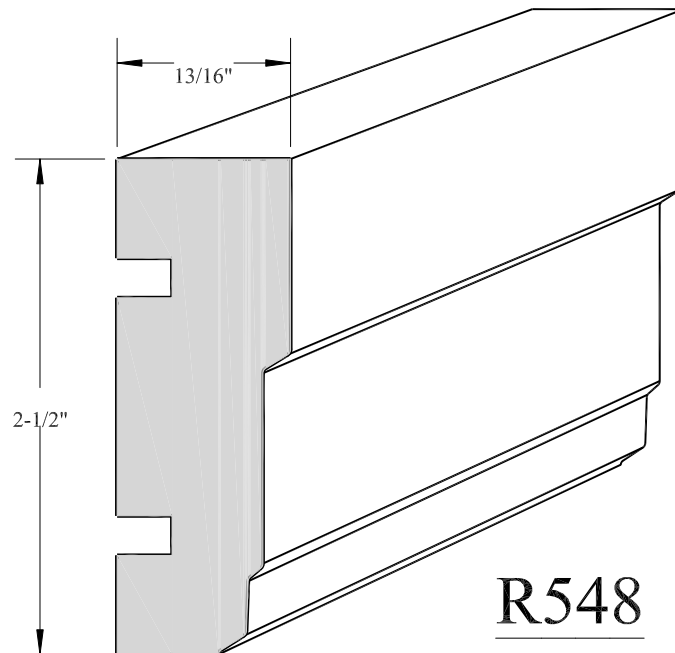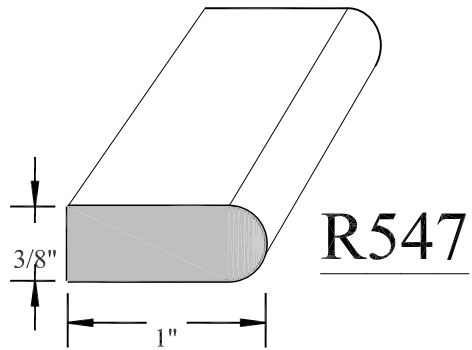

Baseboard Corners

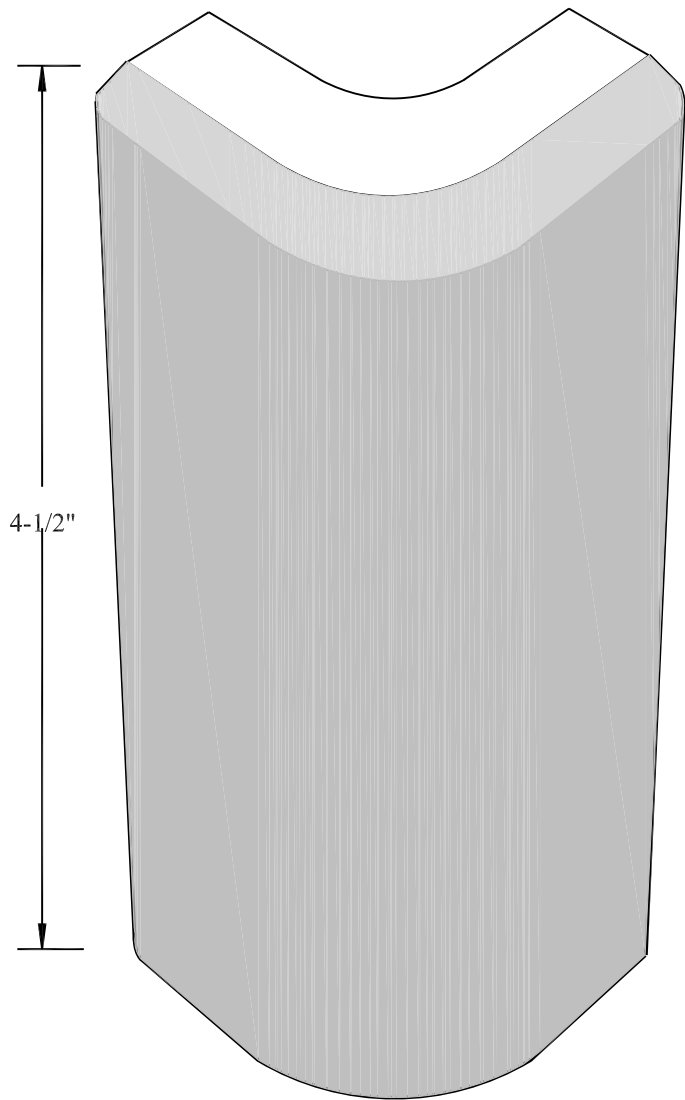




R550-412
Pine Only

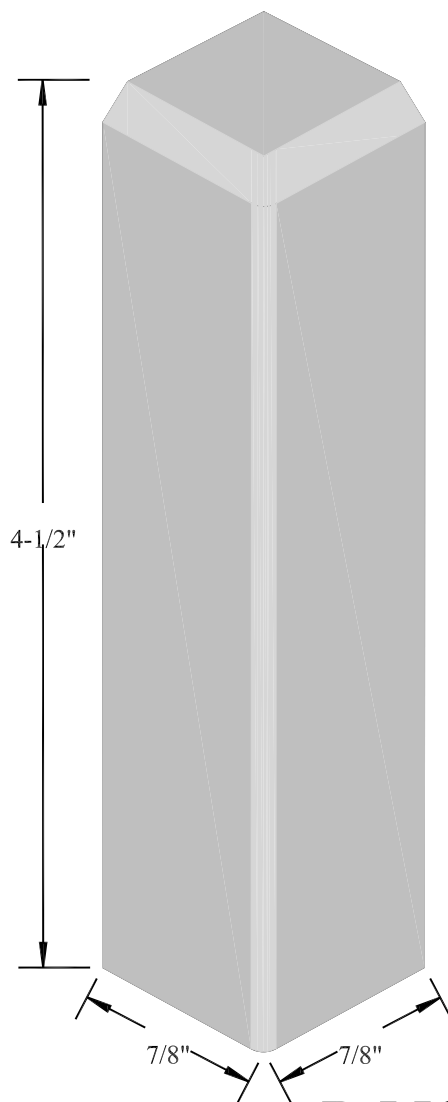





R552-412





Add Lasting Value To Your Home • Traditional Designs In Solid Wood

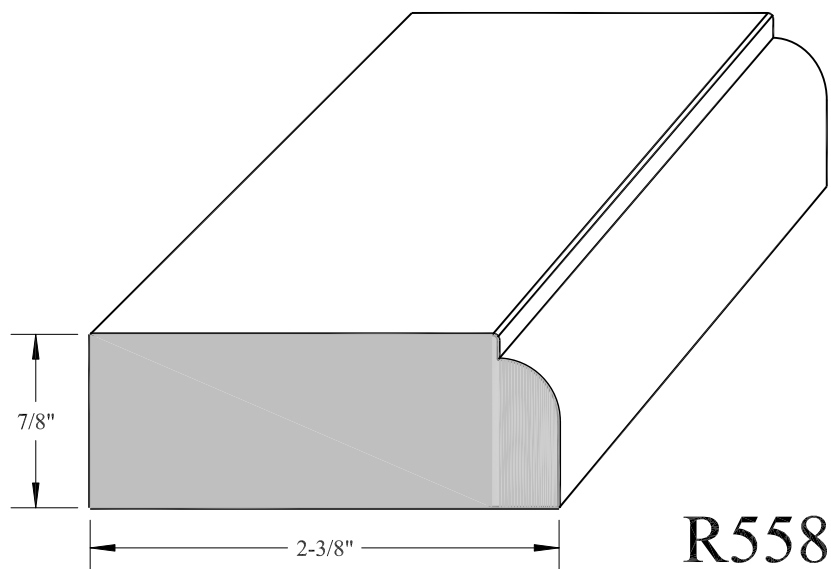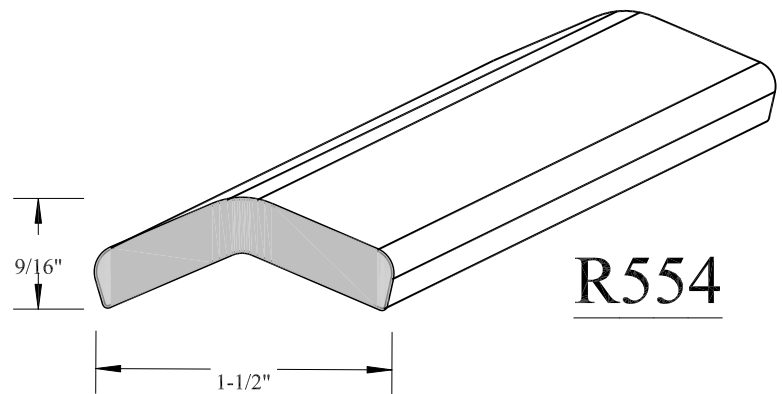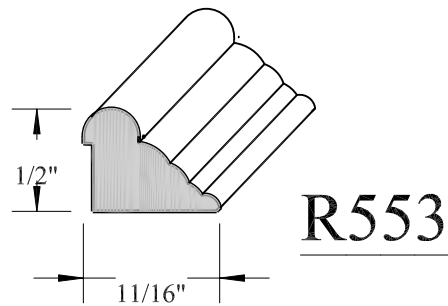

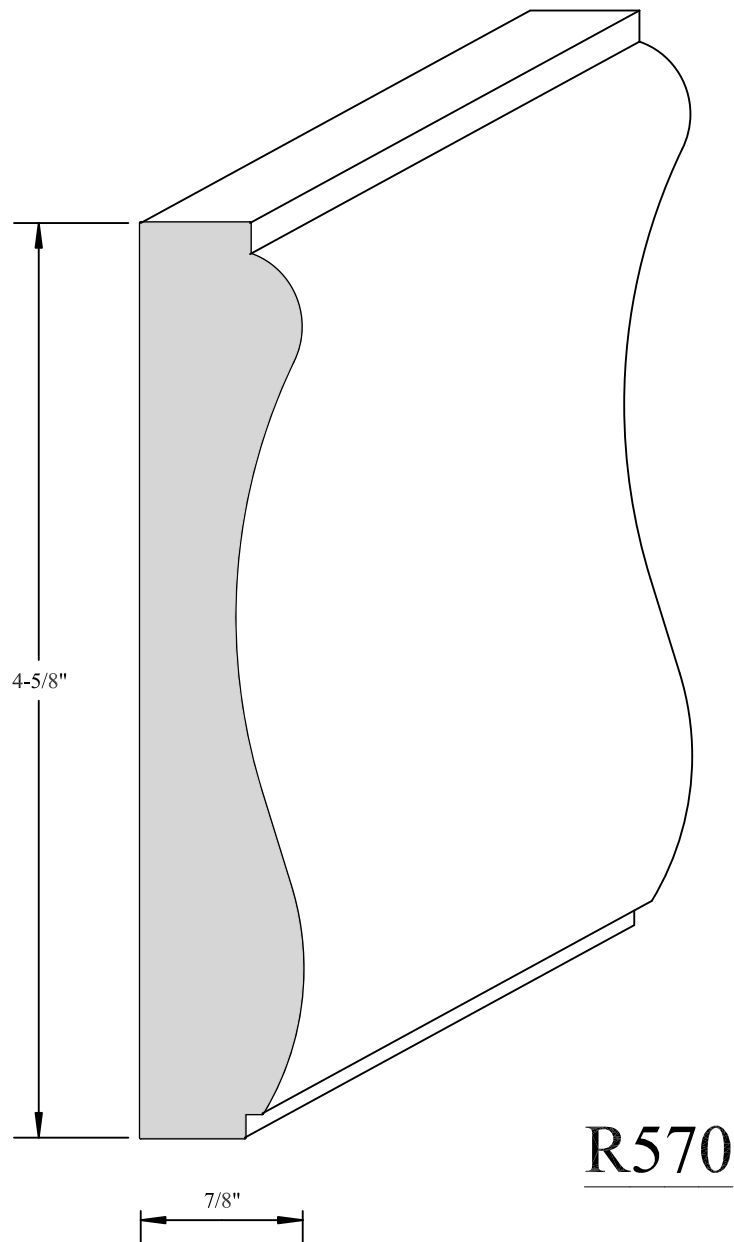

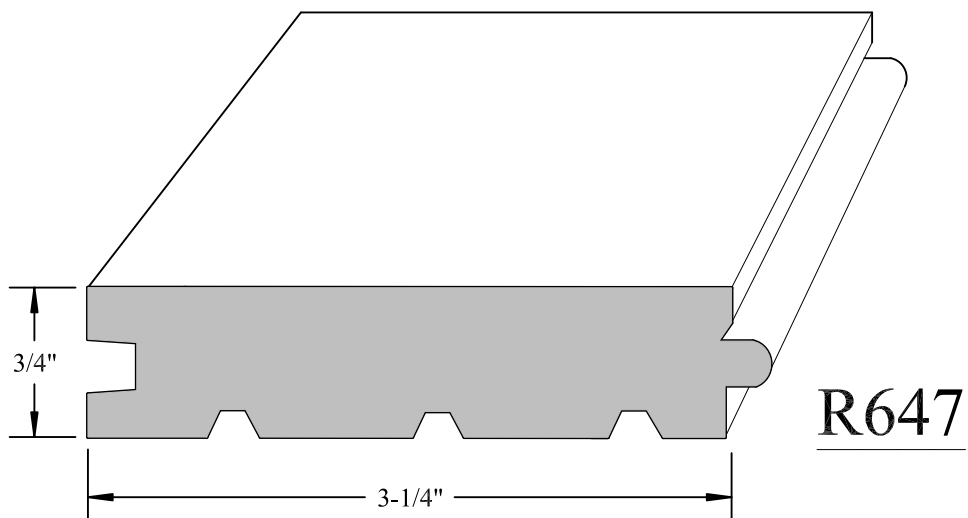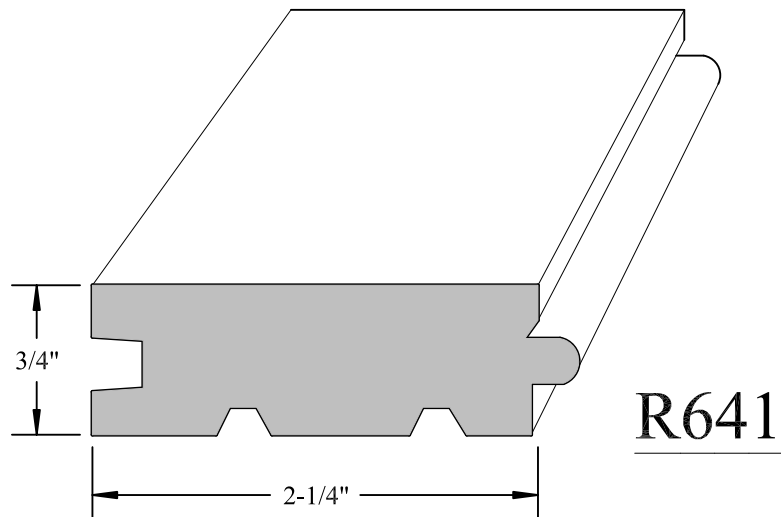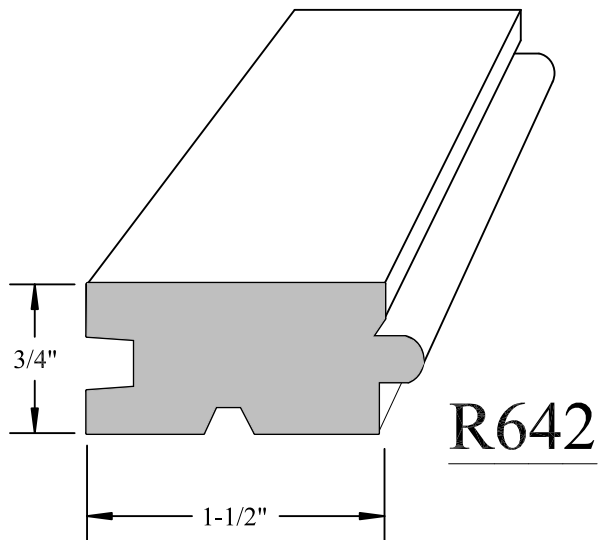

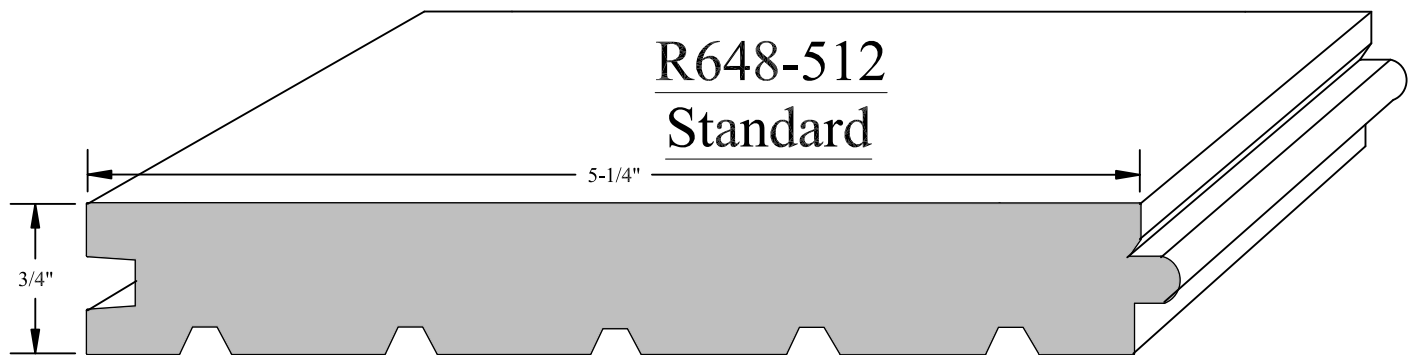


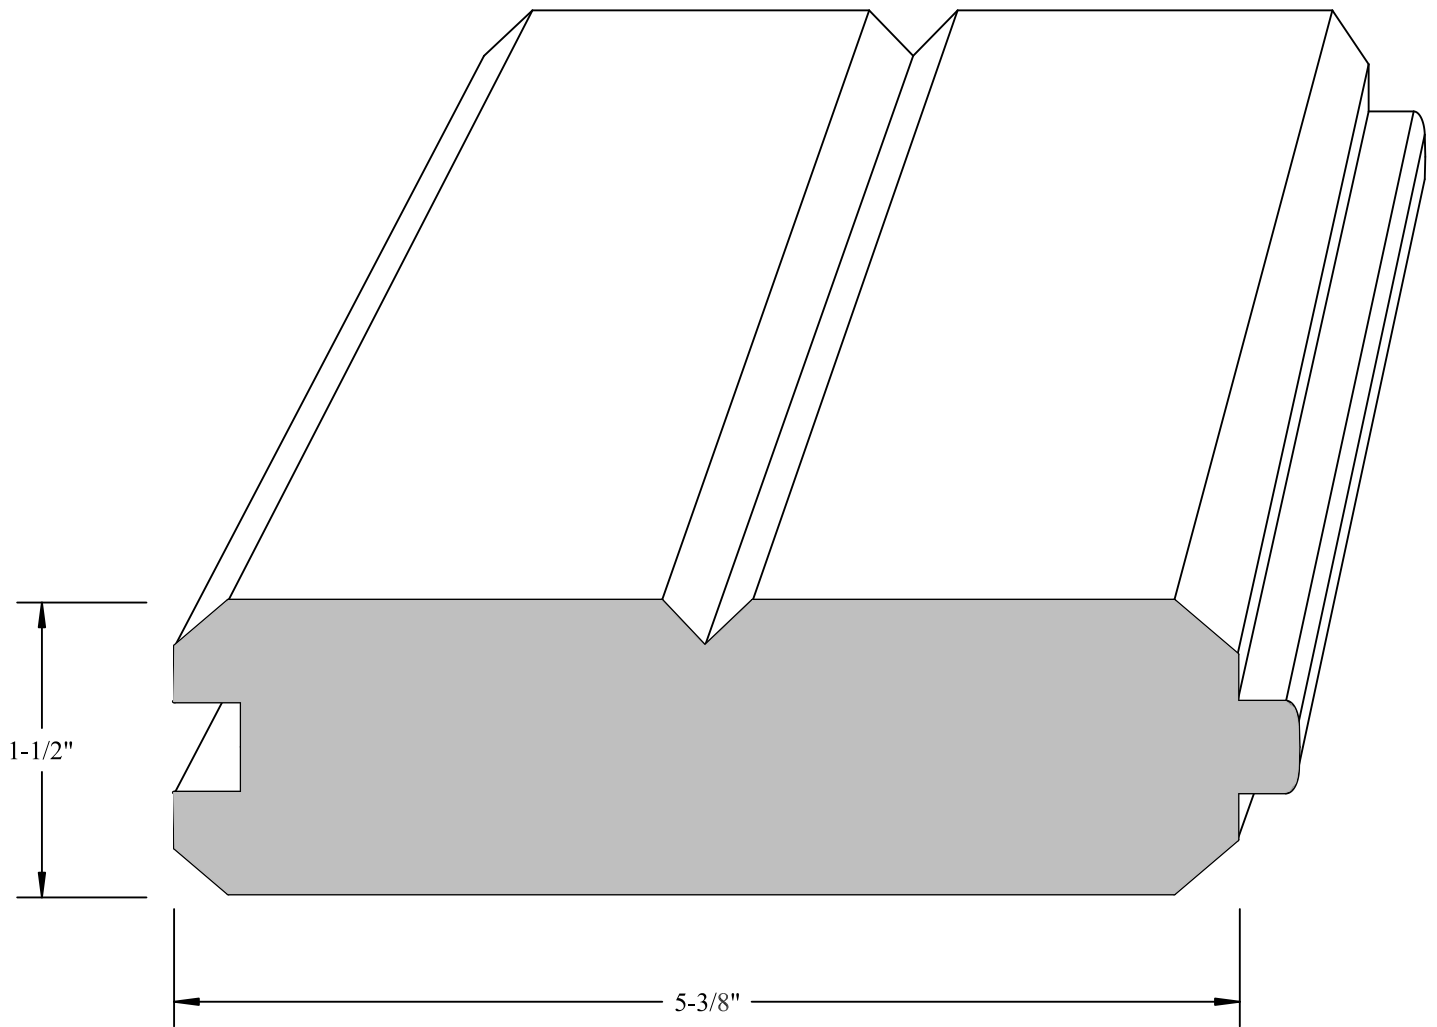


R650-512




R652-512
Micro Groove

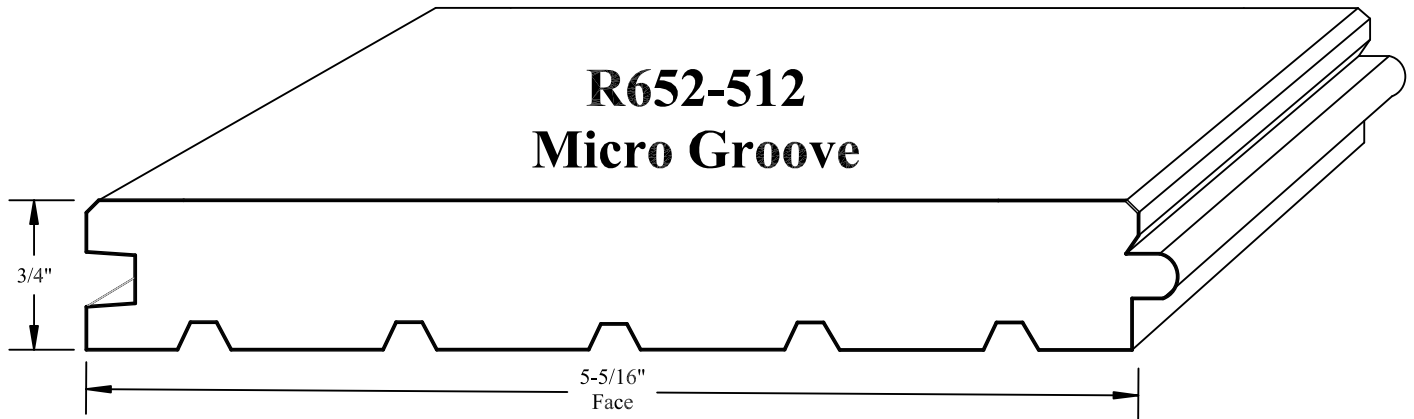


R653-512
Pickwick

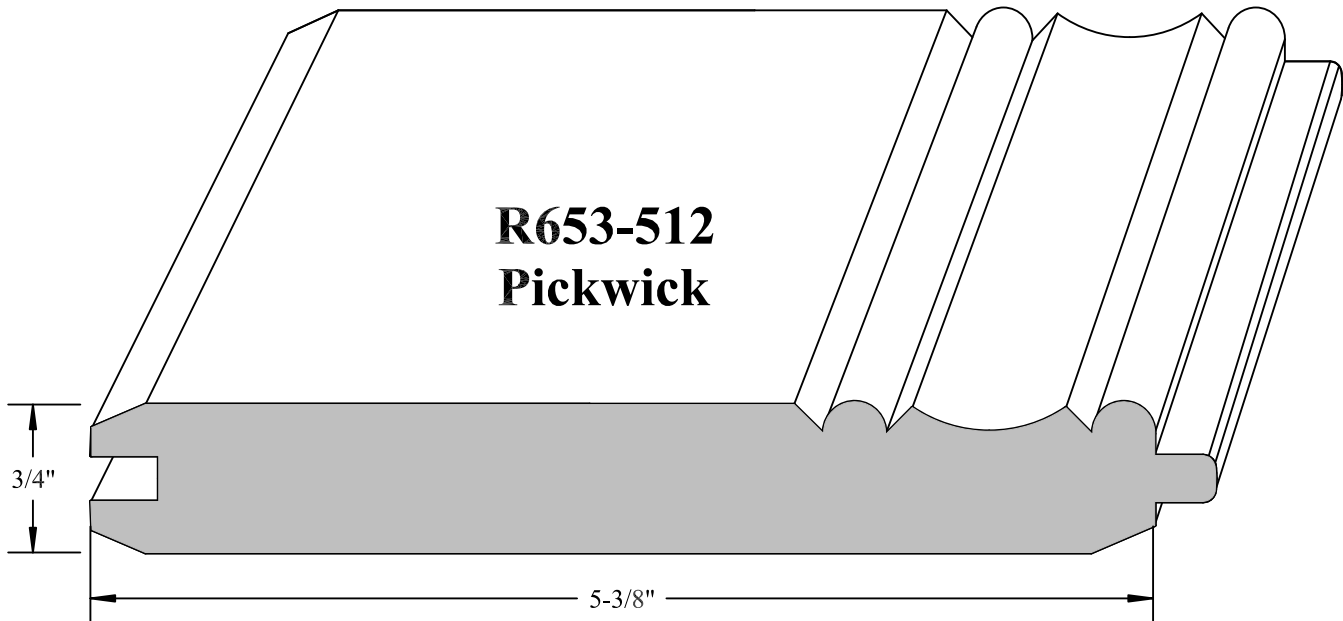


R654-312
Standard

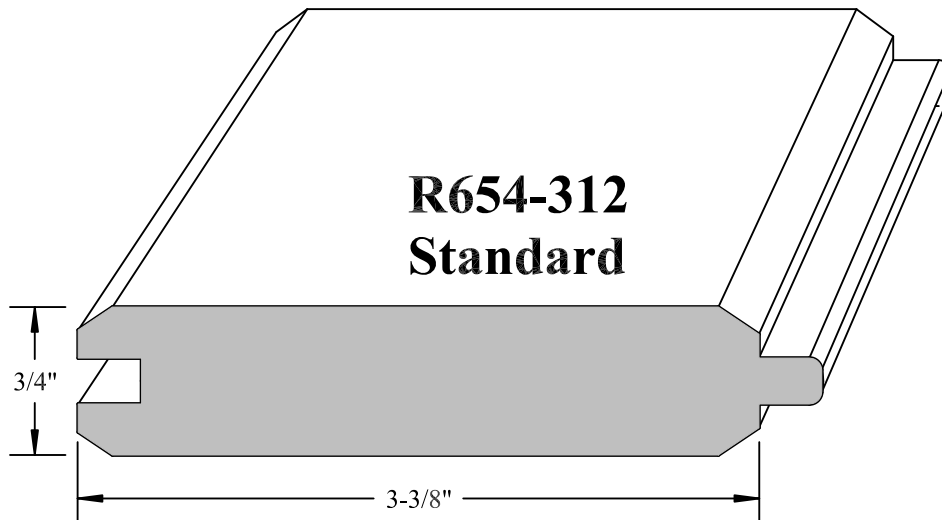









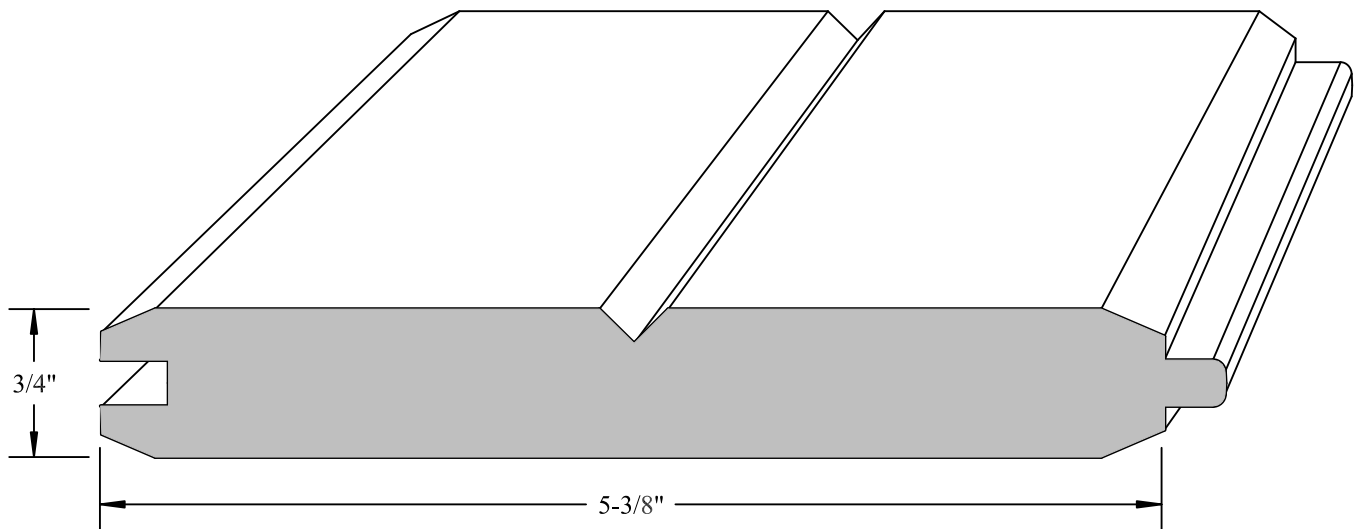


R655-512
Center "V"

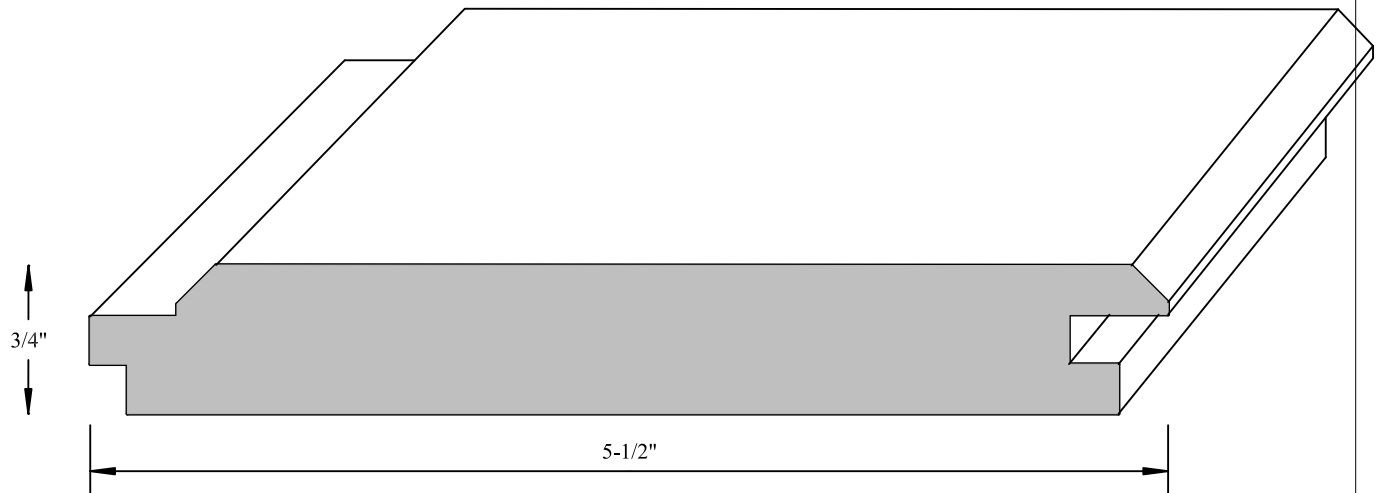


R656-512
Long Tongue


Panel Mouldings

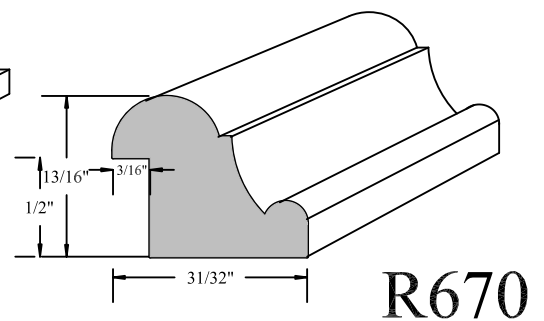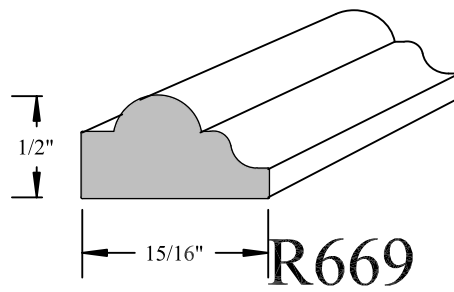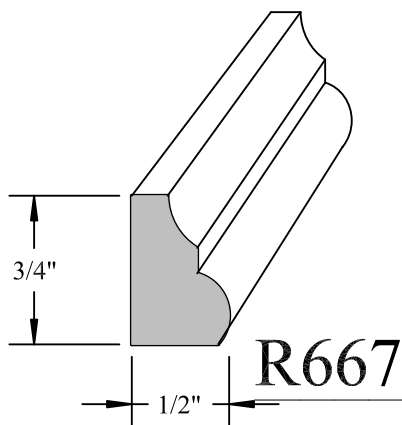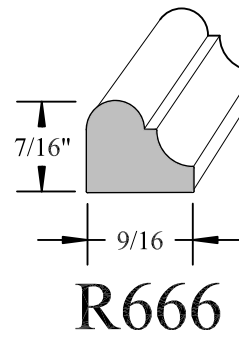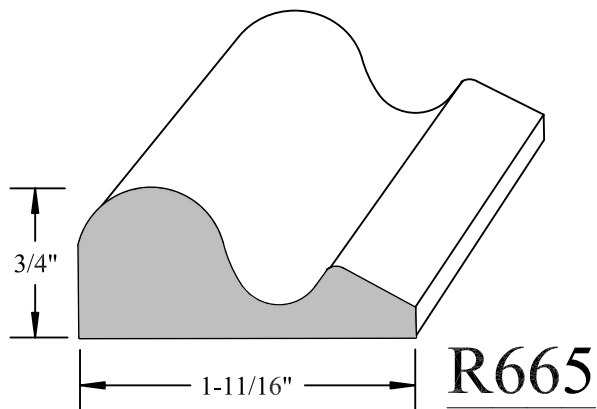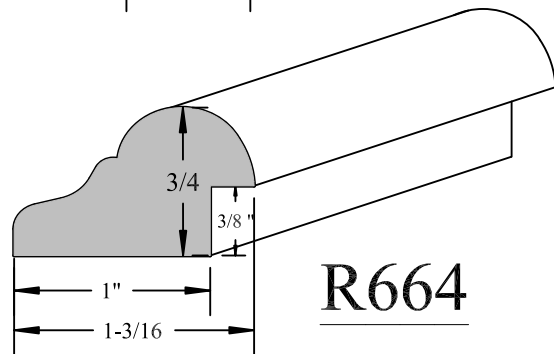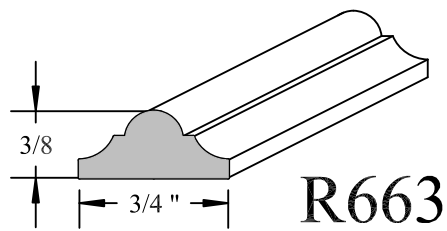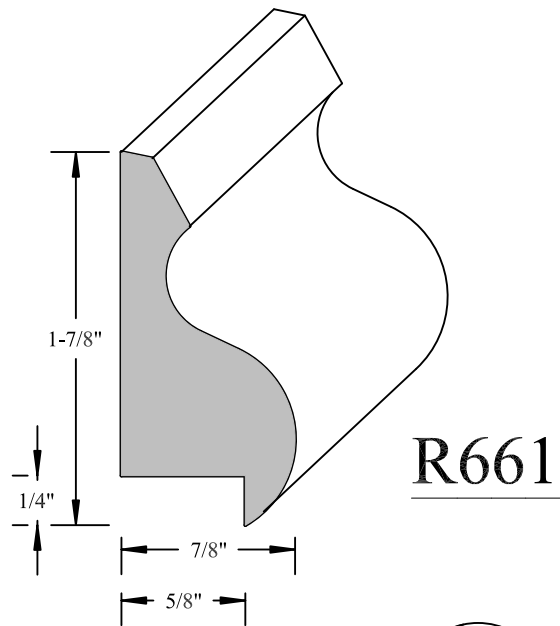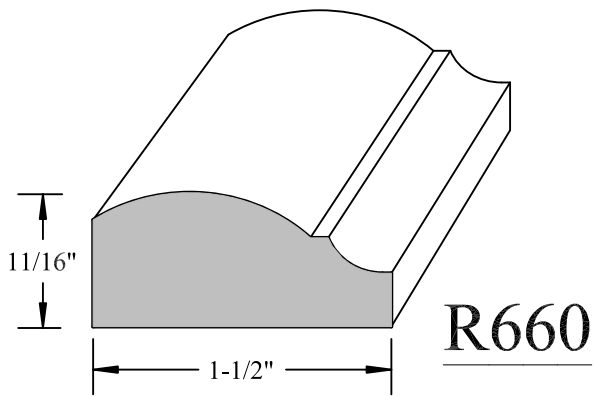

Panel Moulding

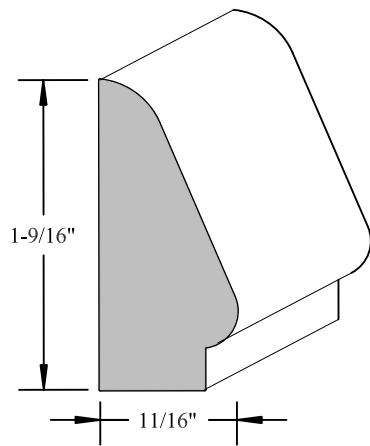


R671

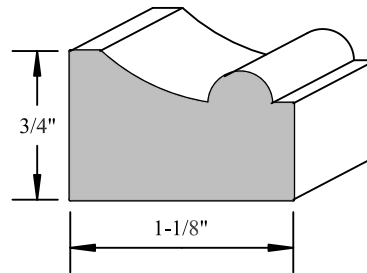

R672




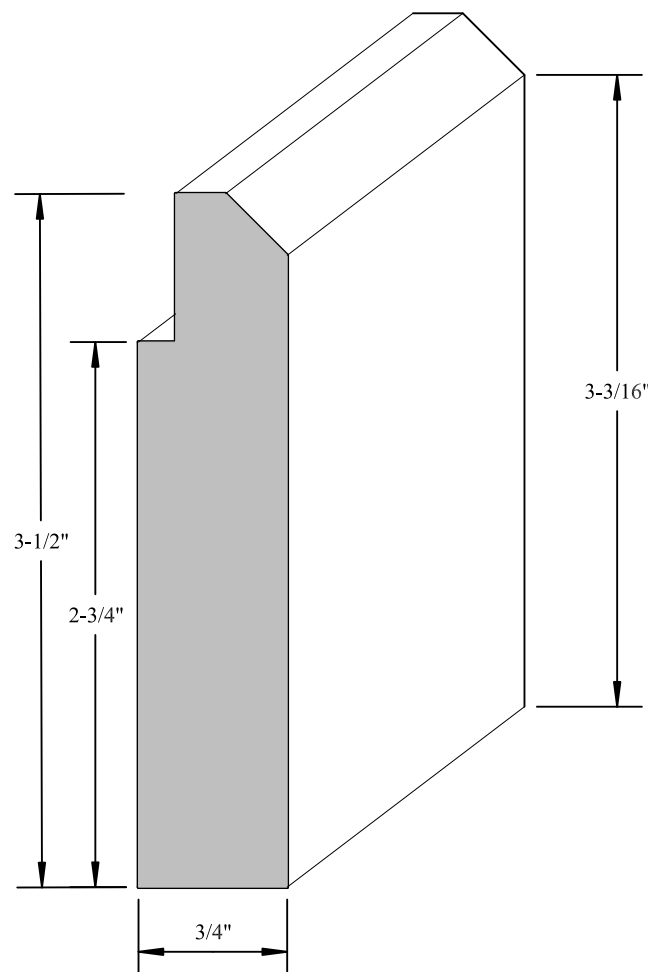


R713




Reducer Strips

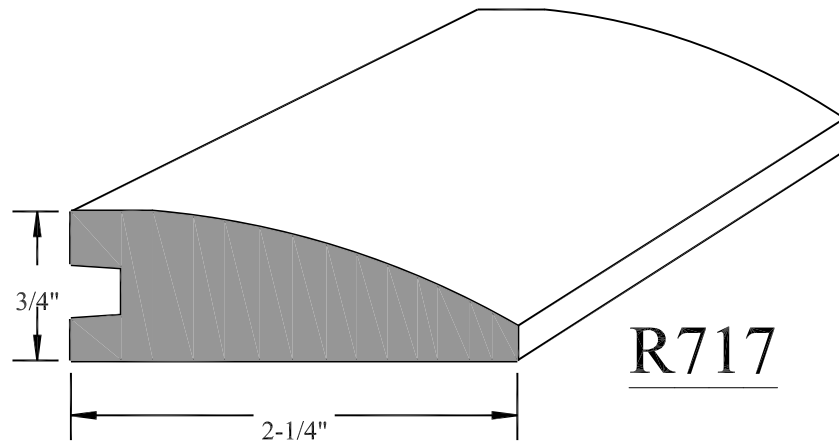


R726-378

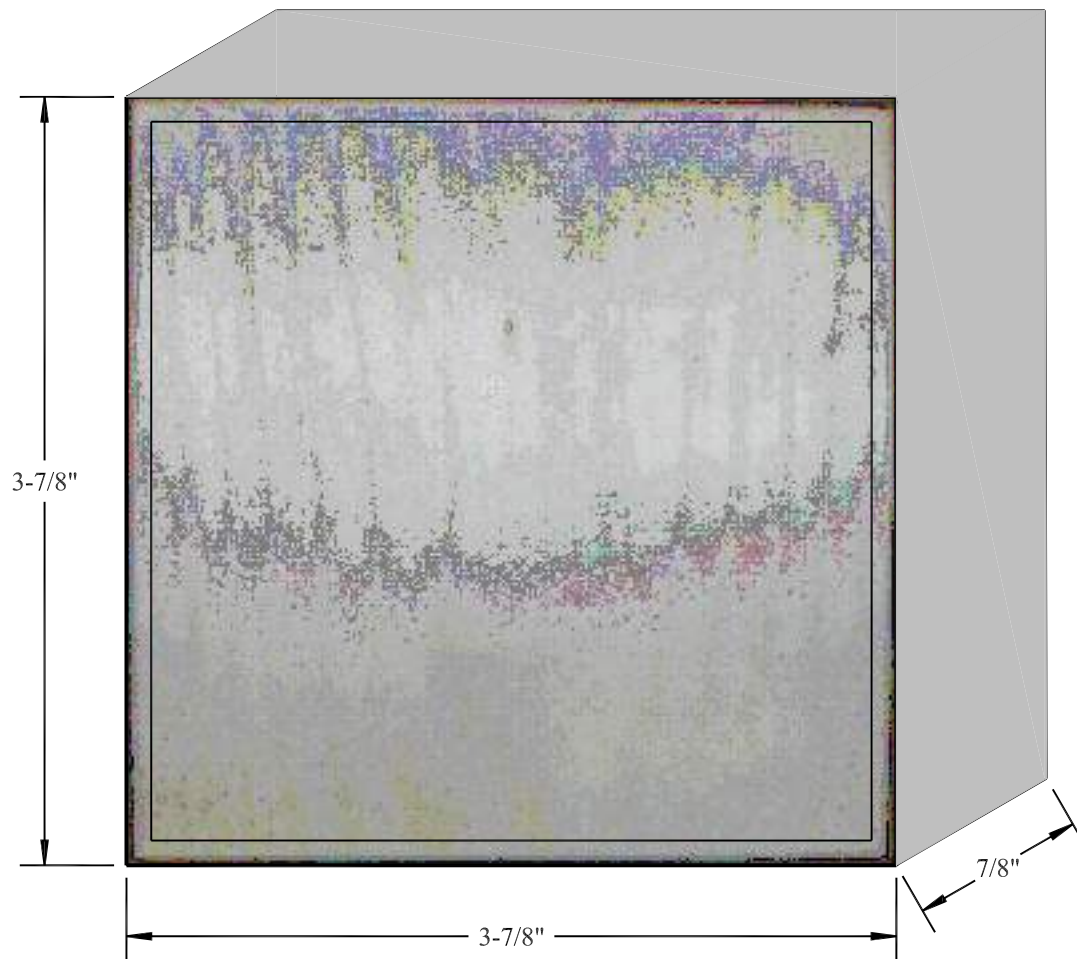


R727-378

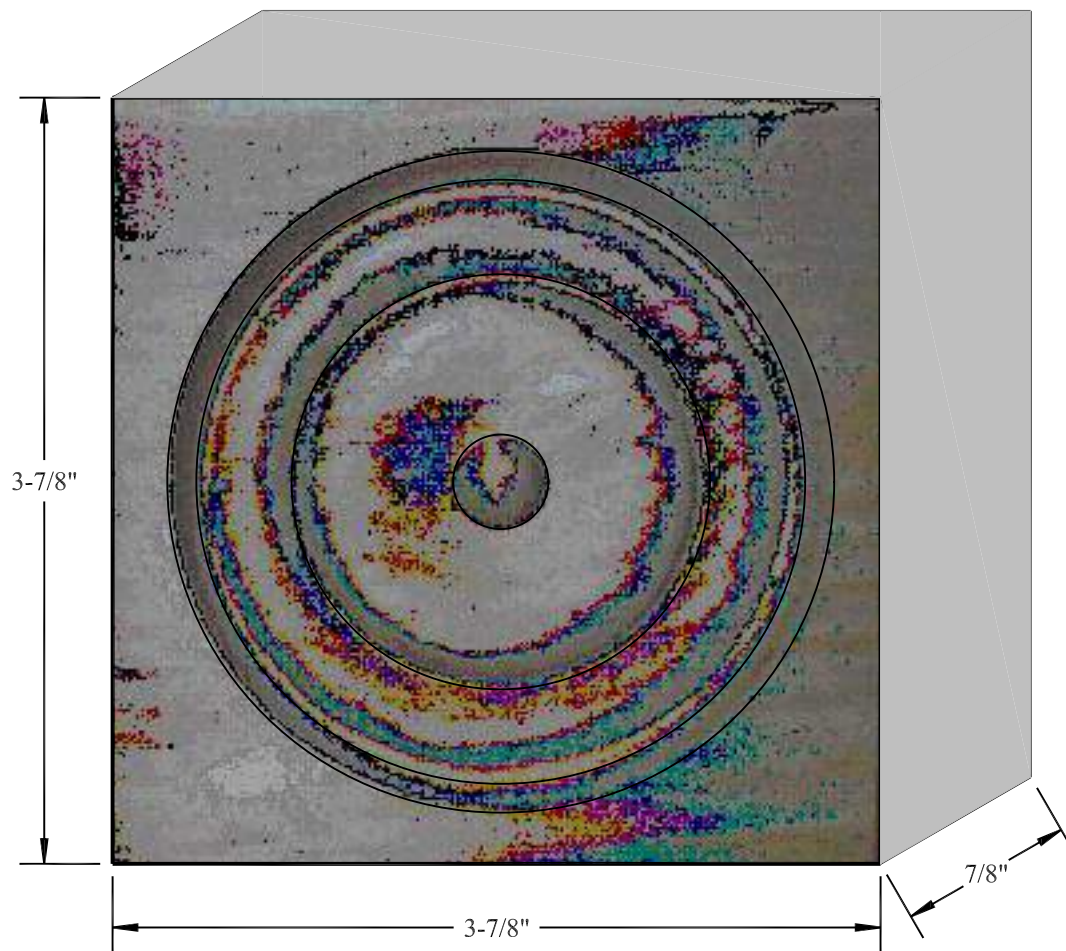


R728-378

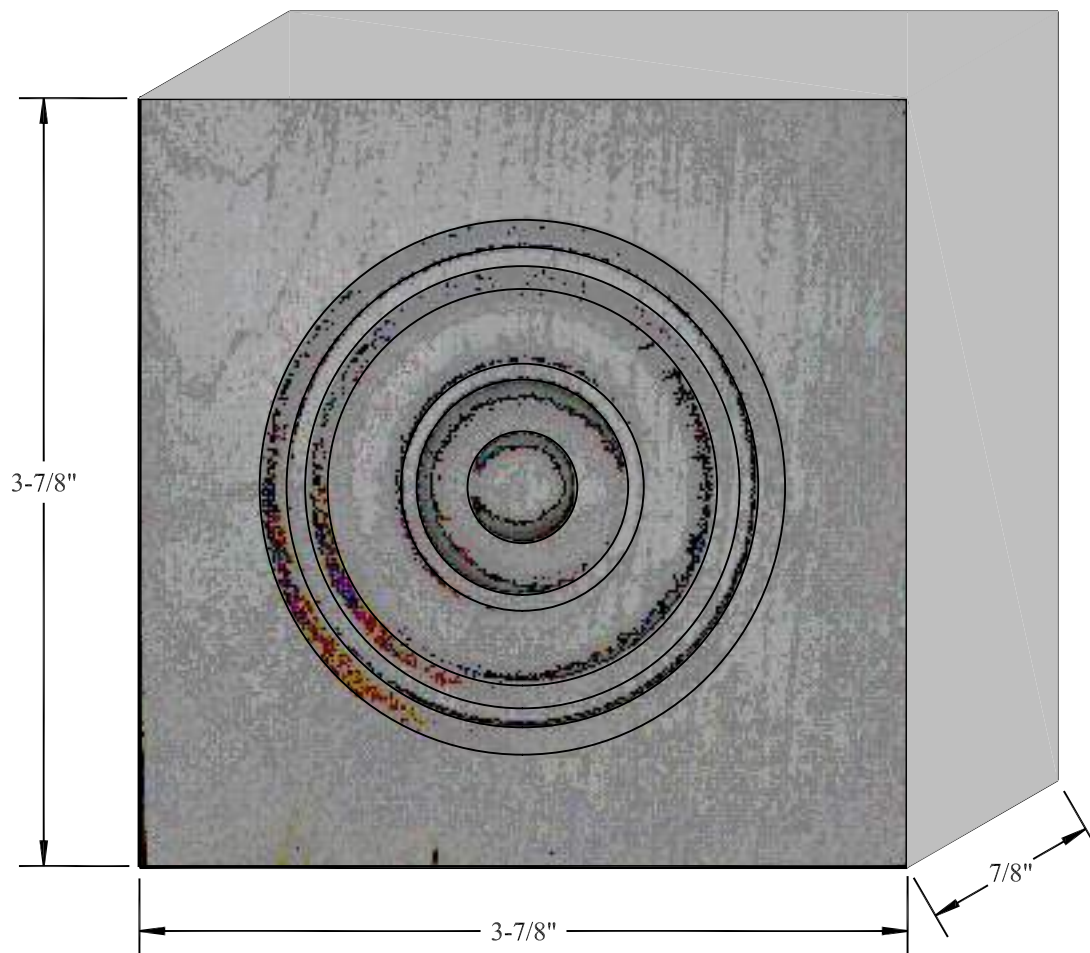


R729-334

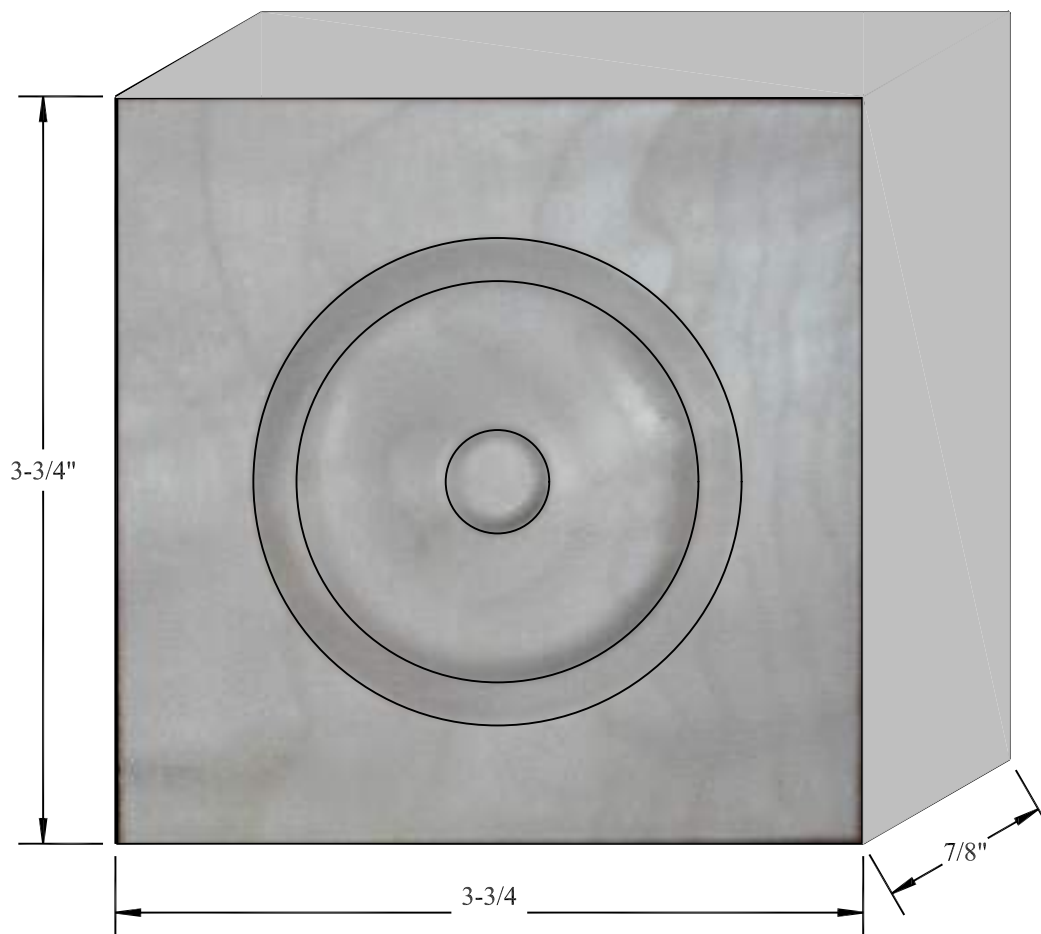


R730-514

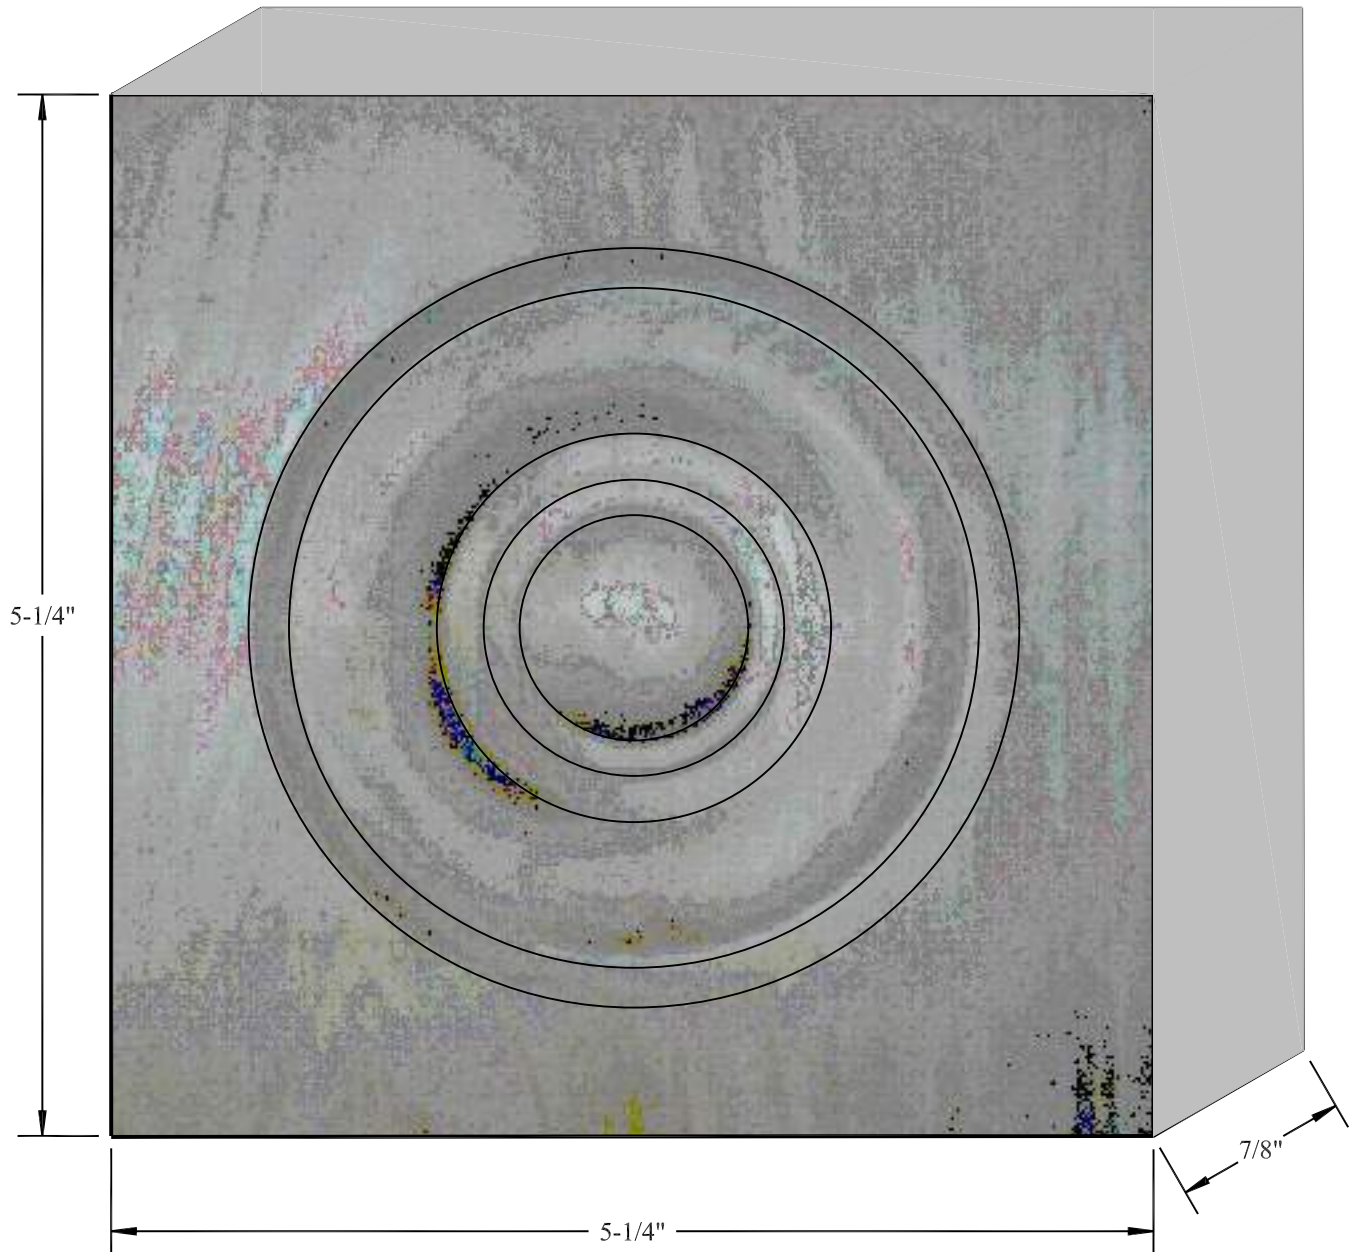

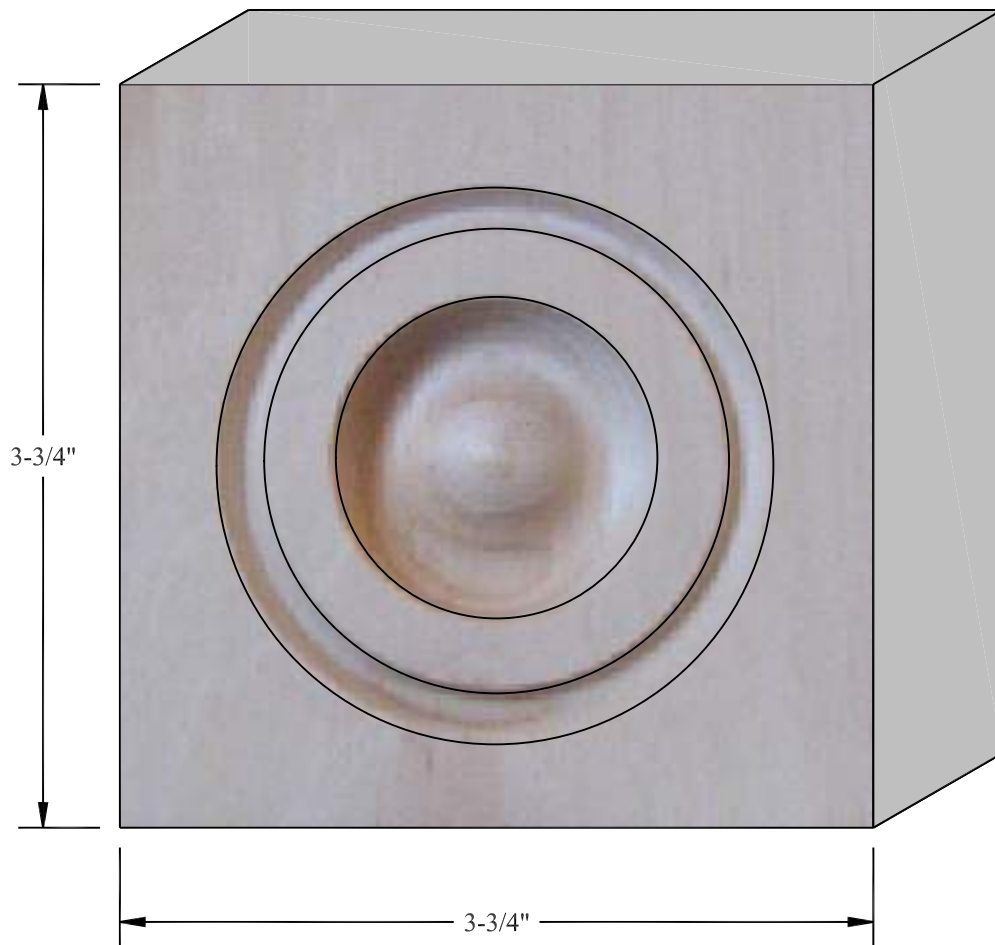

R731-334

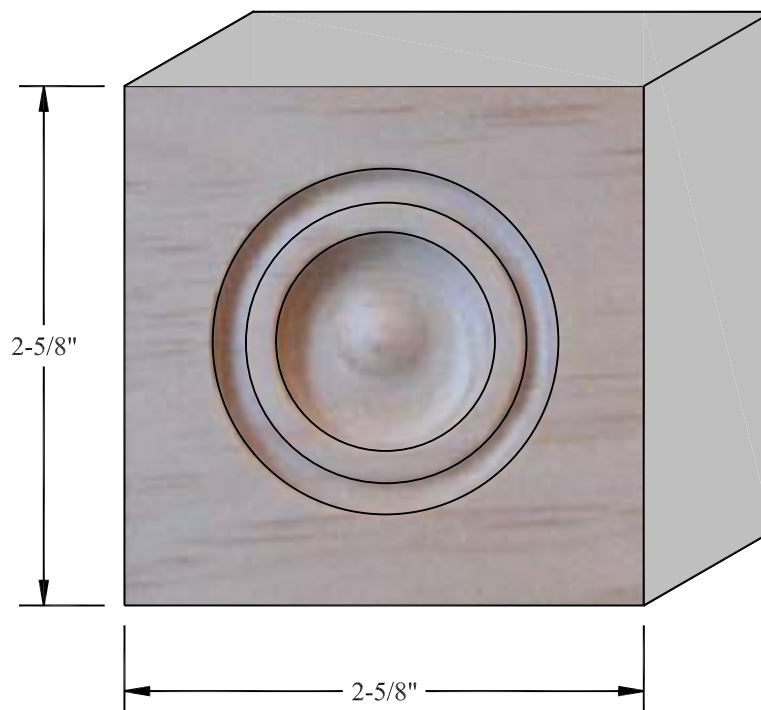


R732-258







Add Lasting Value To Your Home • Traditional Designs In Solid Wood


R750-378x558

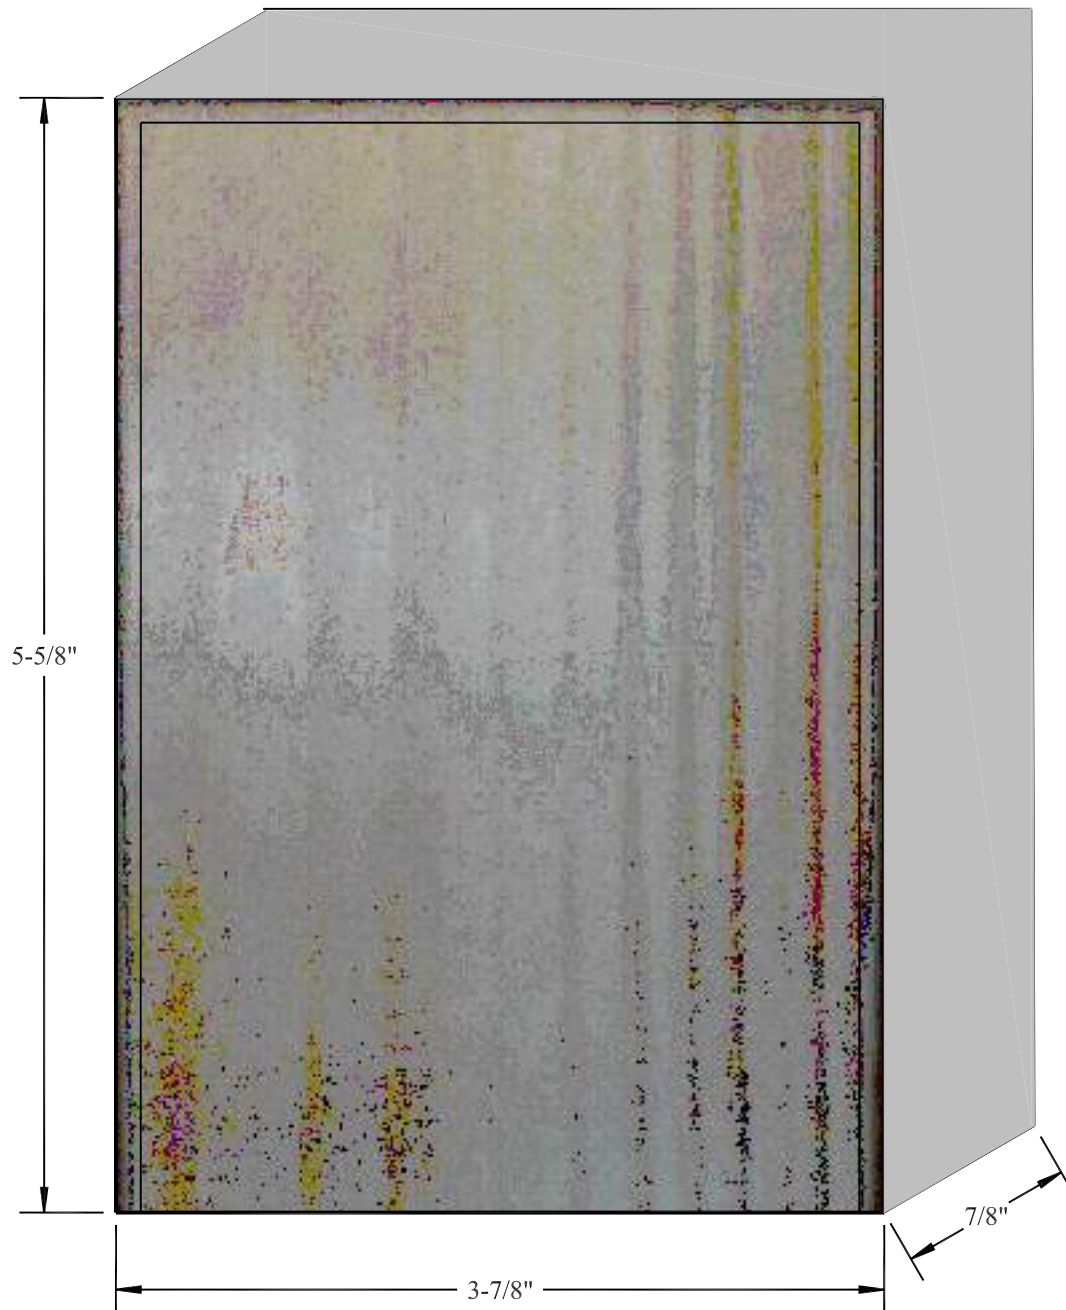

Add Lasting Value To Your Home • Traditional Designs In Solid Wood

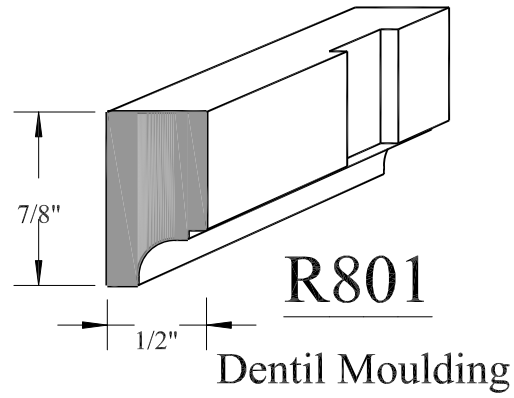

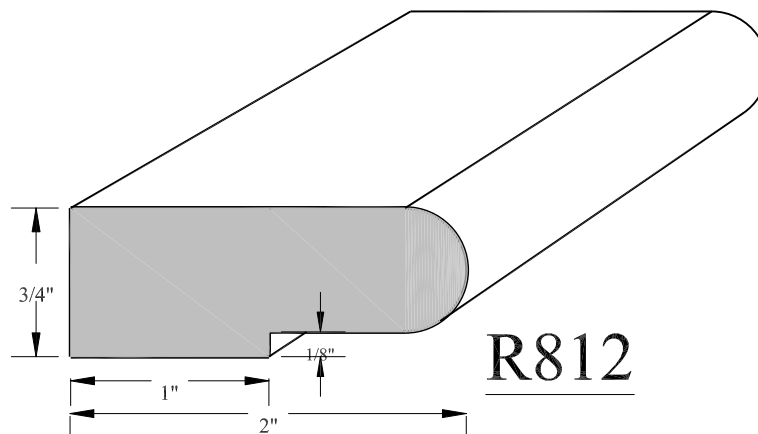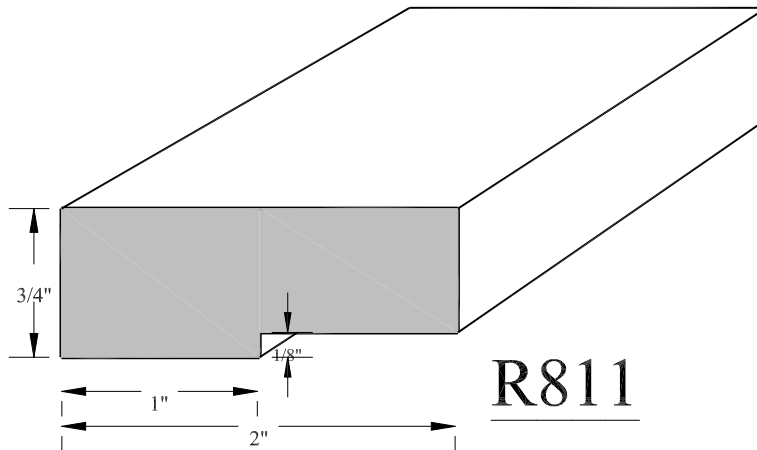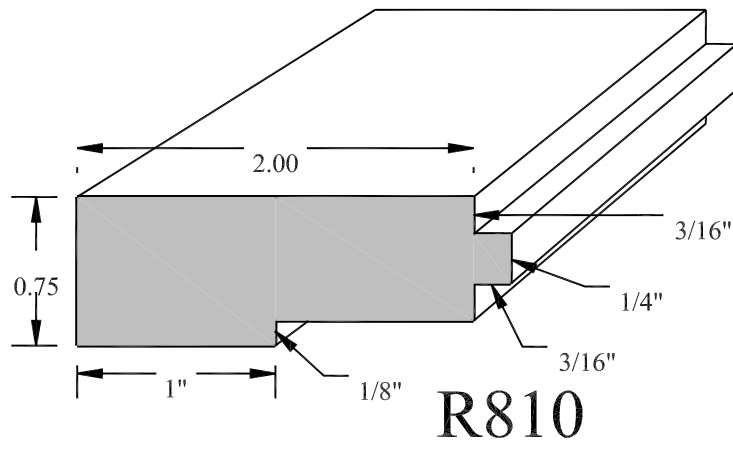

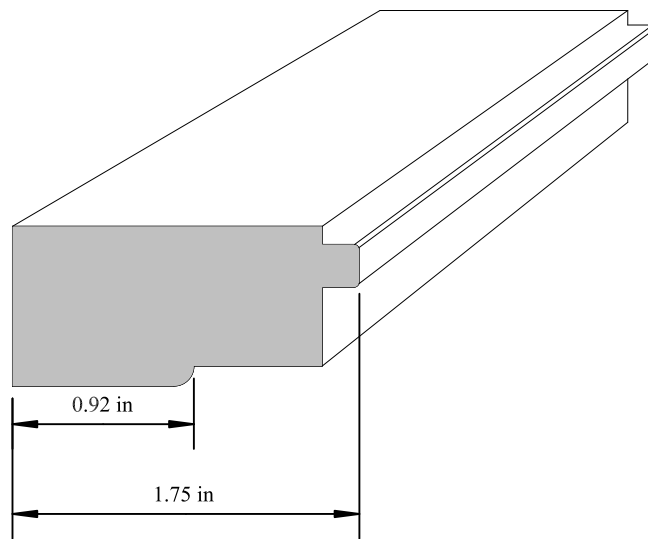


R813




Wainscotings


R817

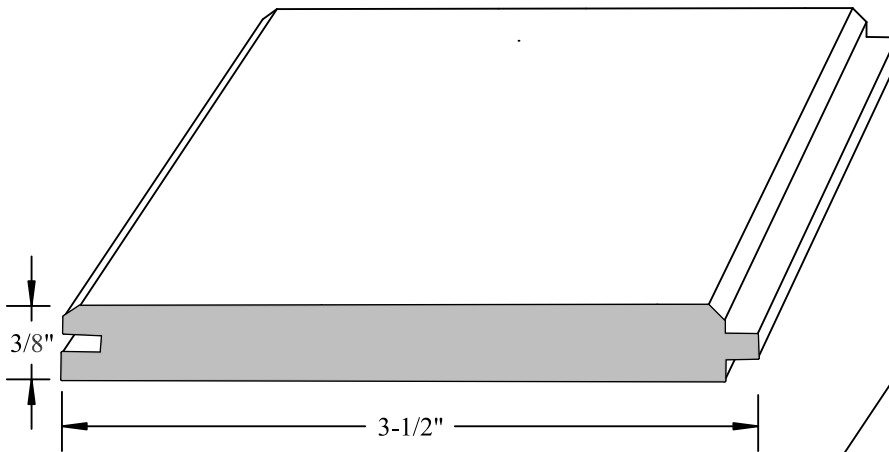


R818

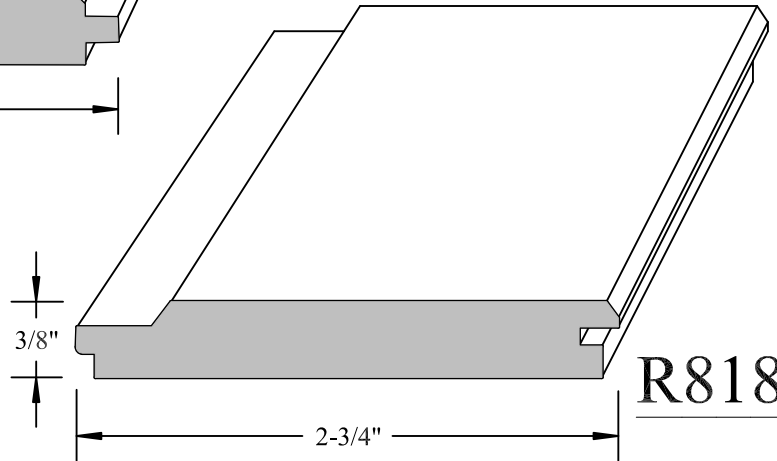


R819

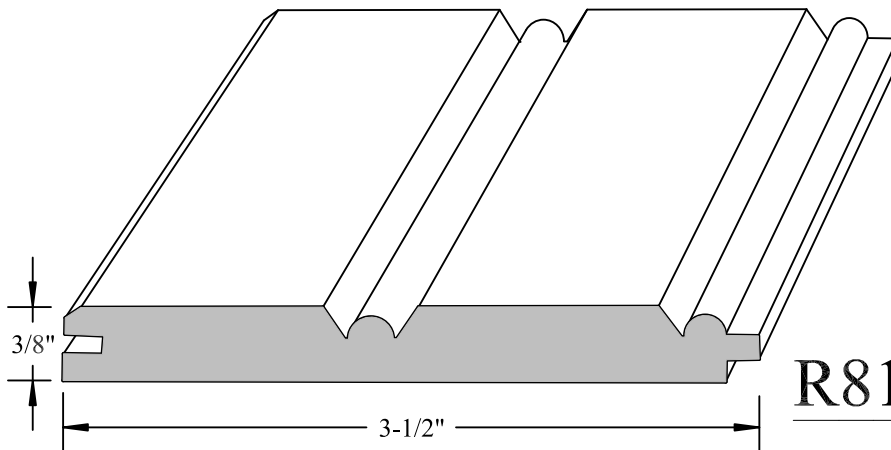


R820

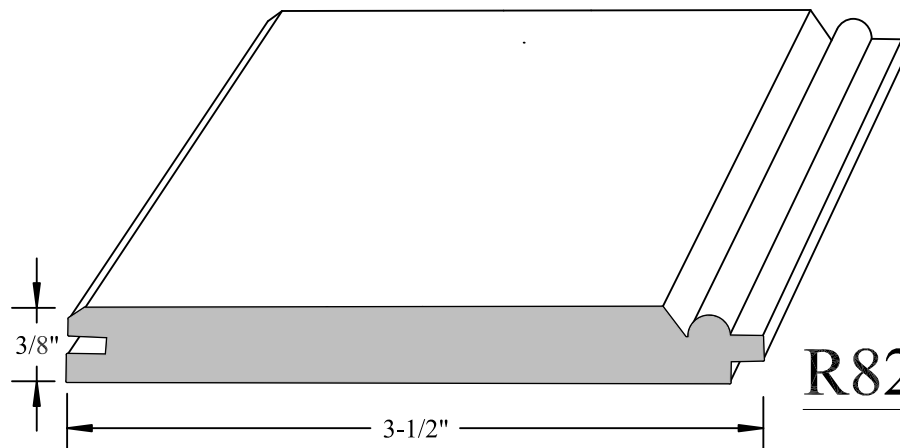


Wainscotings

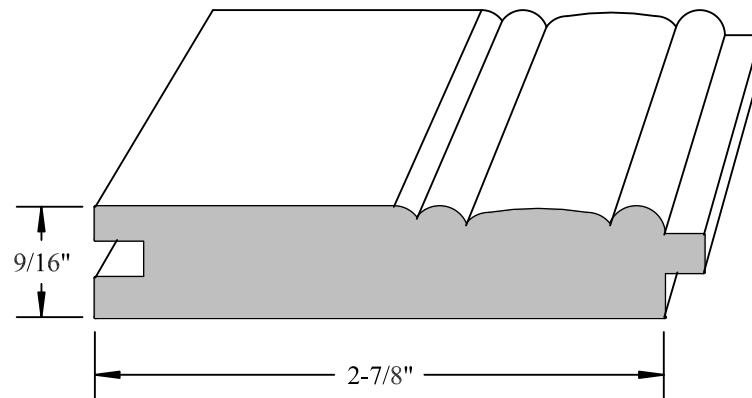

R821

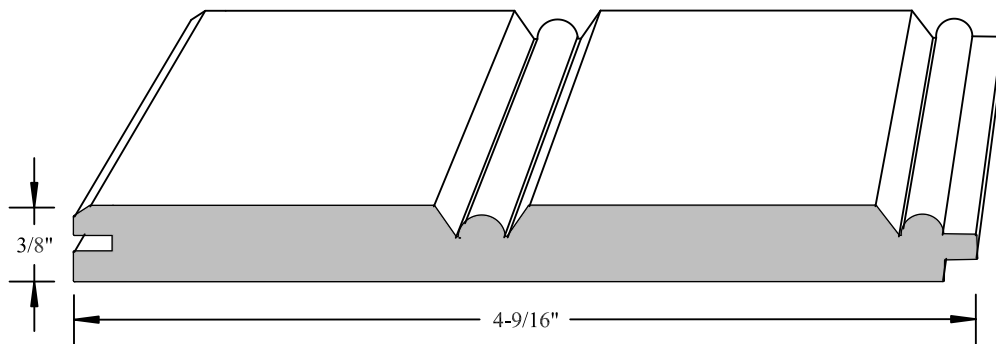



R822

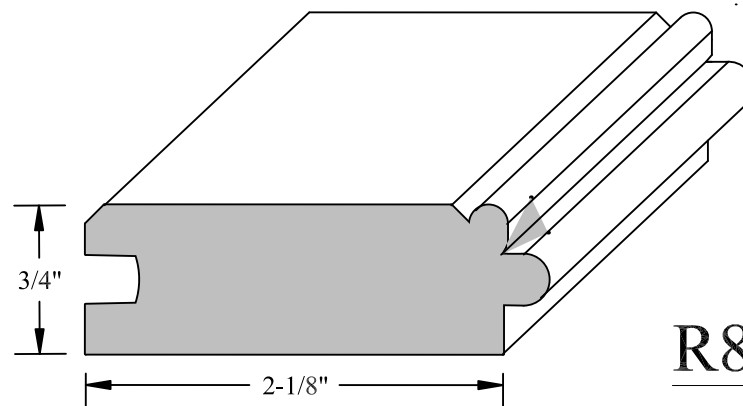


R823




Wainscoting Base

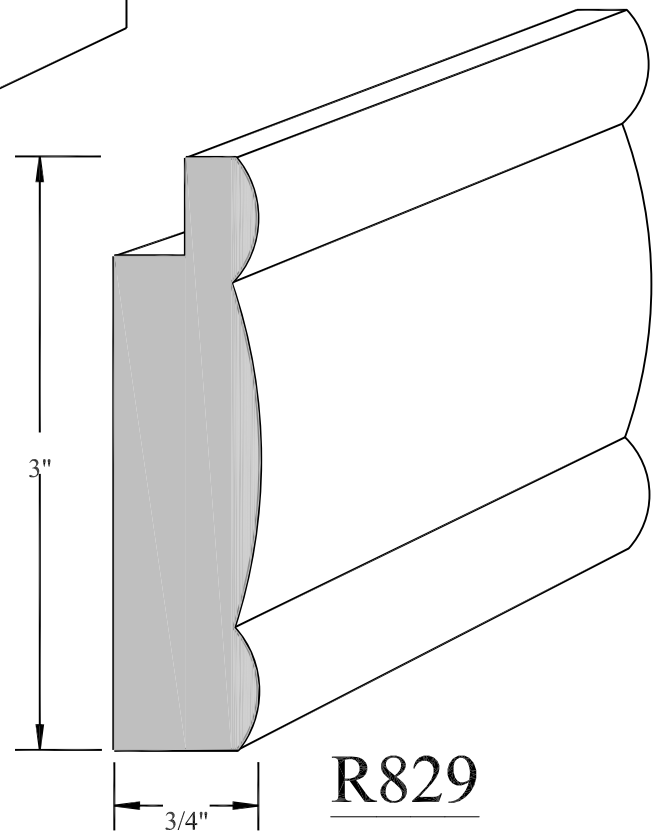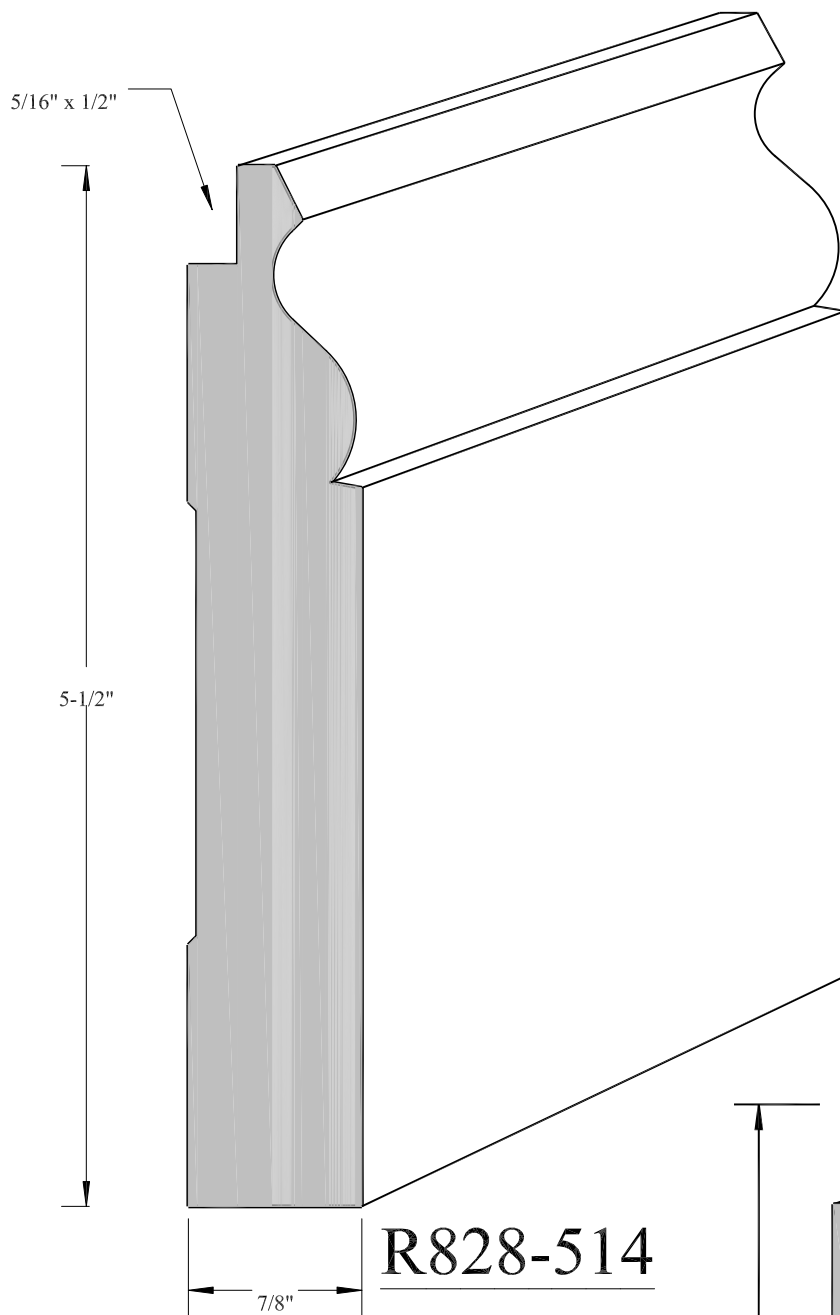


Wainscoting Caps

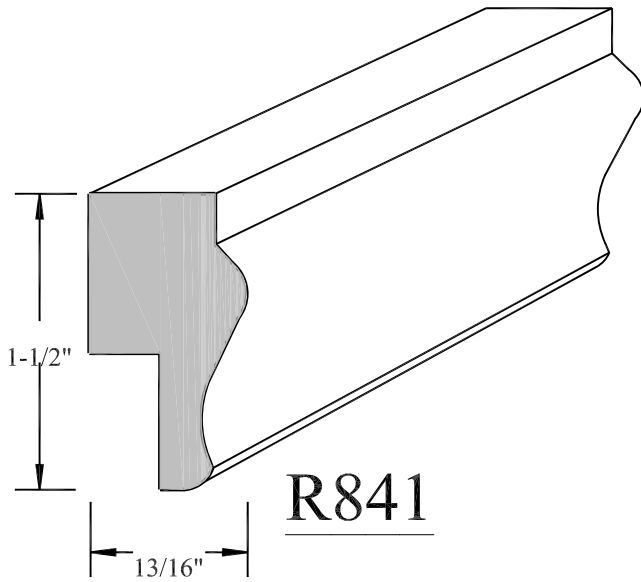


R841

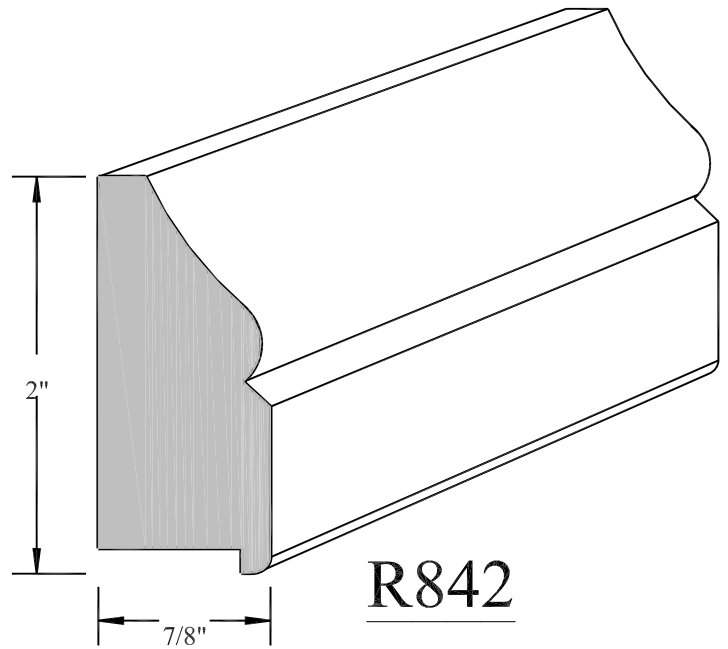

R842

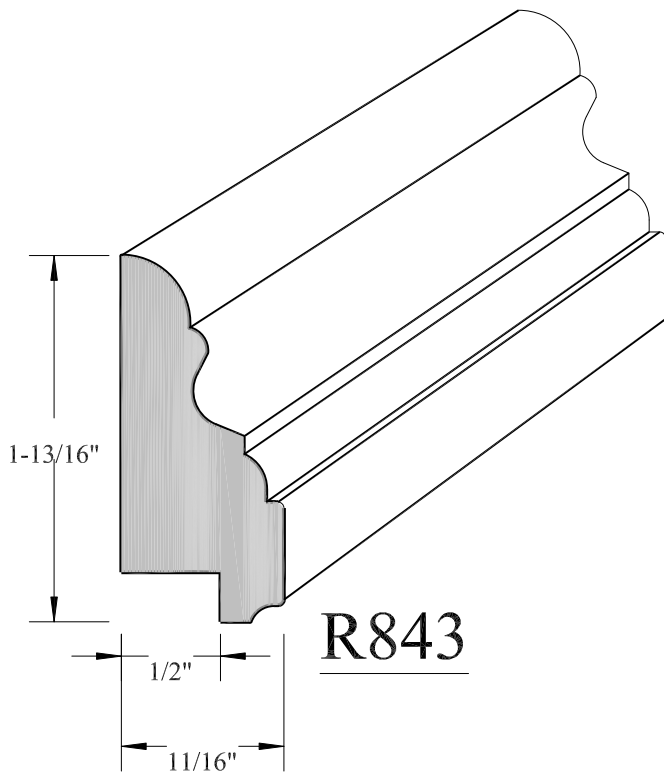


R843

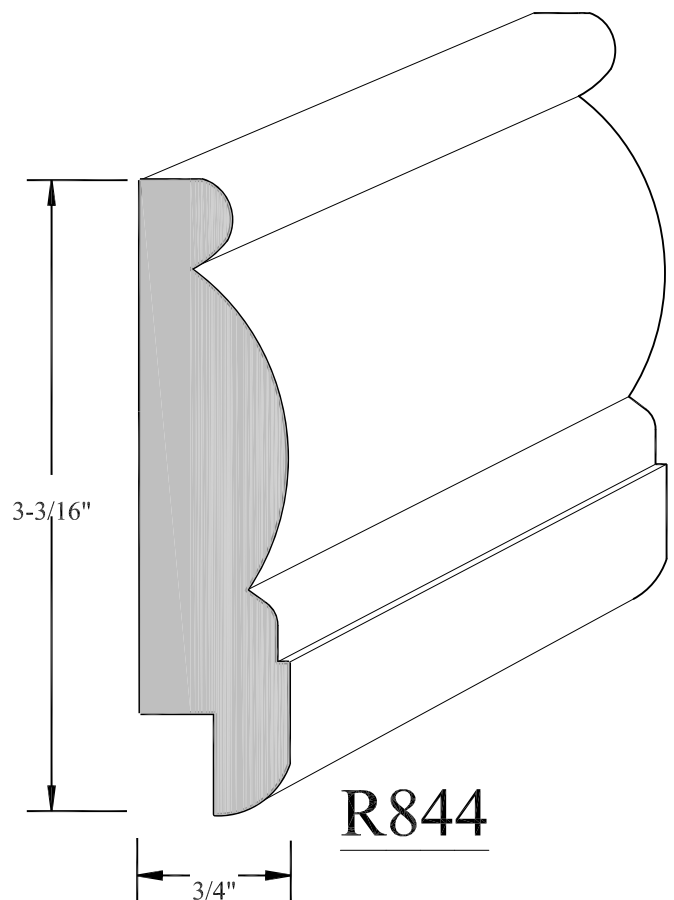




R844







Wainscoting Caps

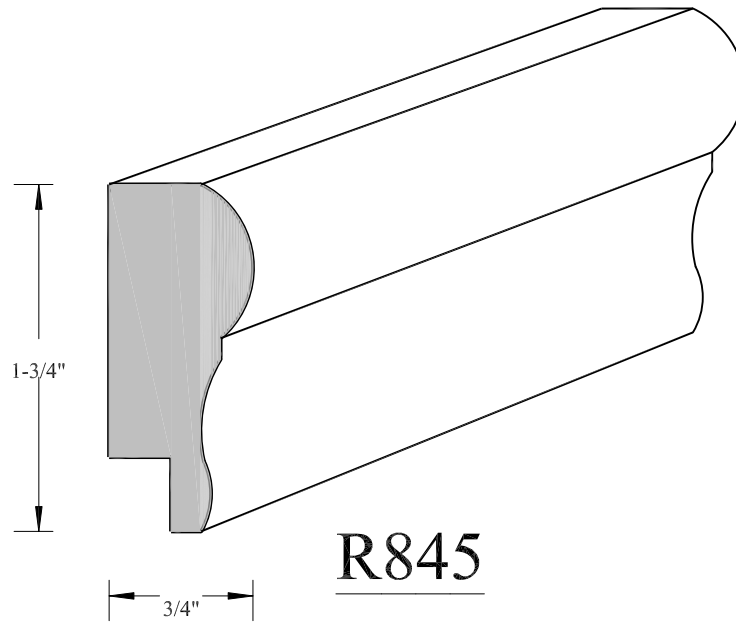


Window Sill Mouldings

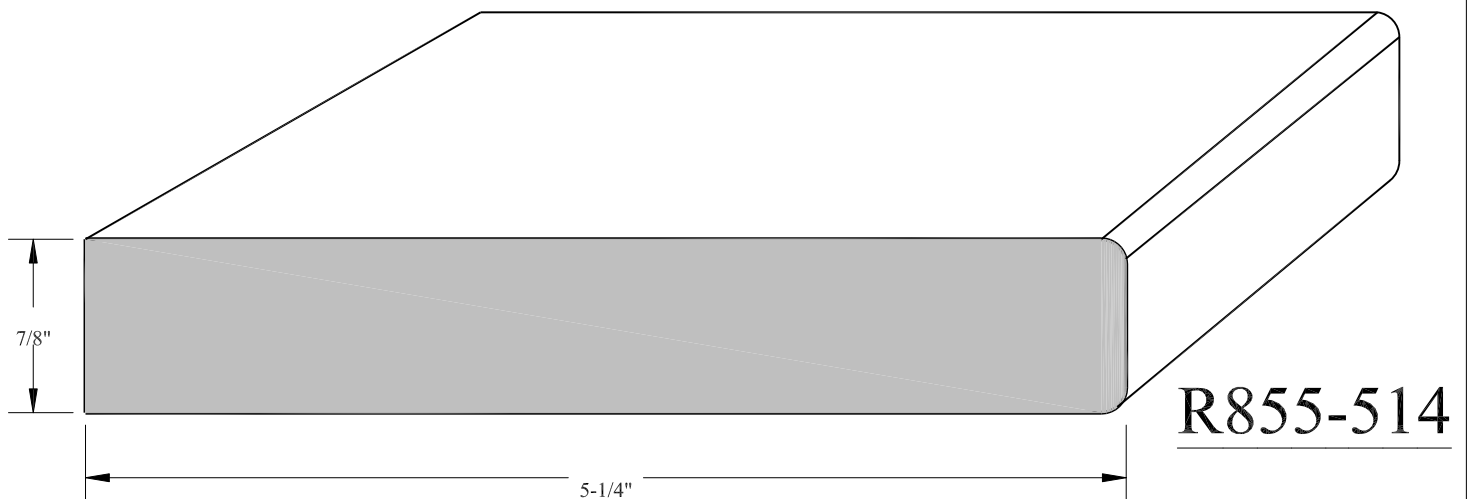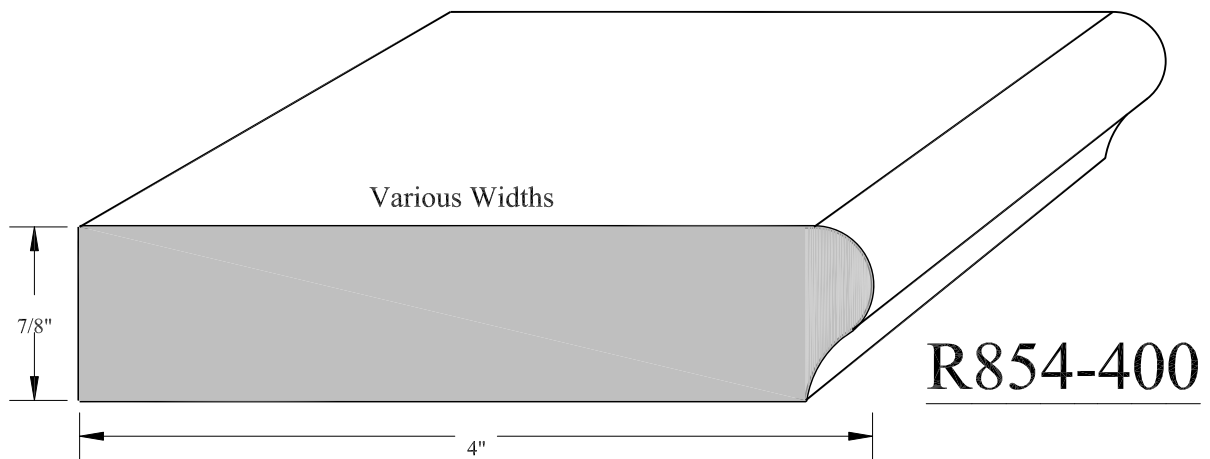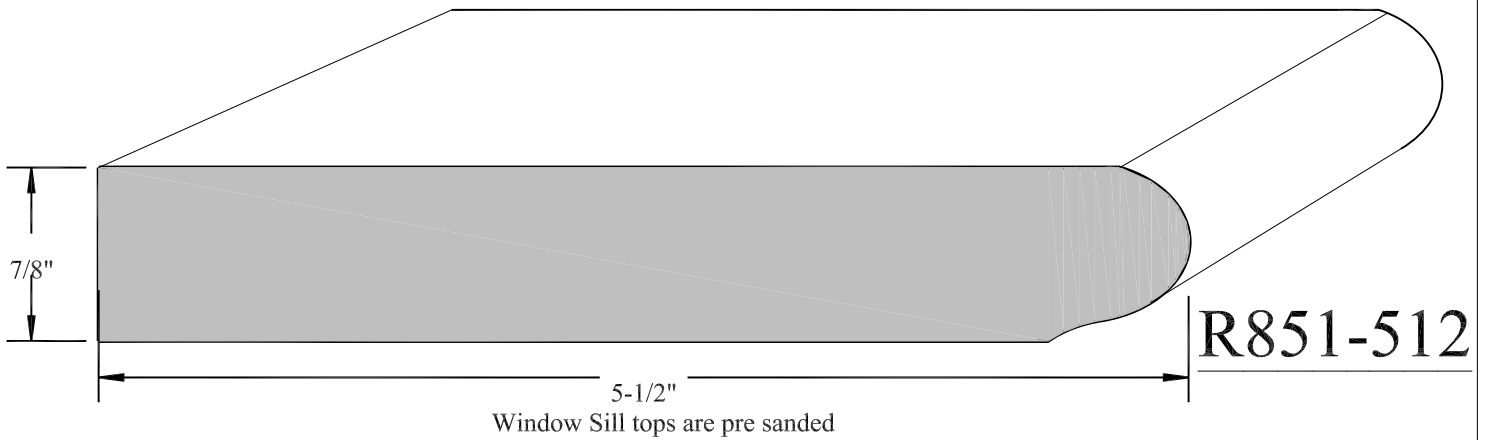

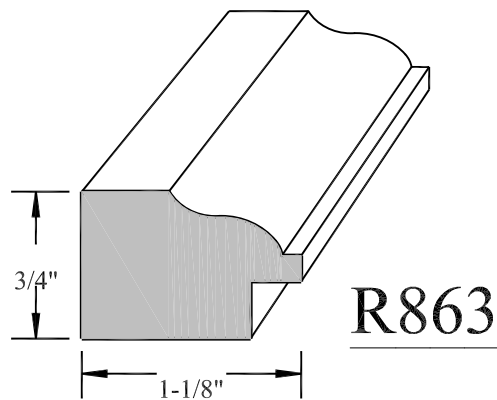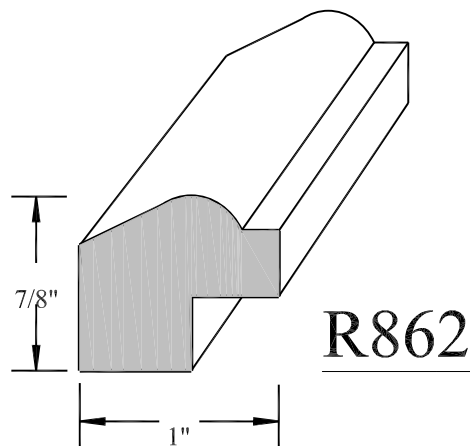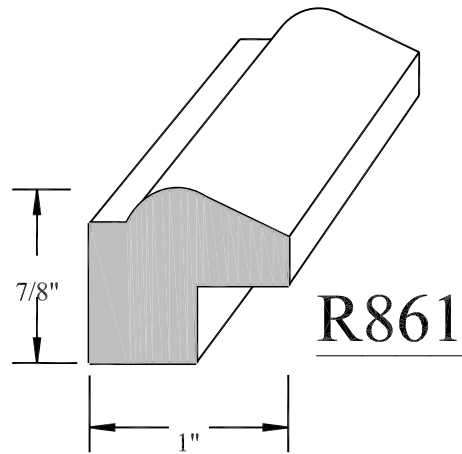


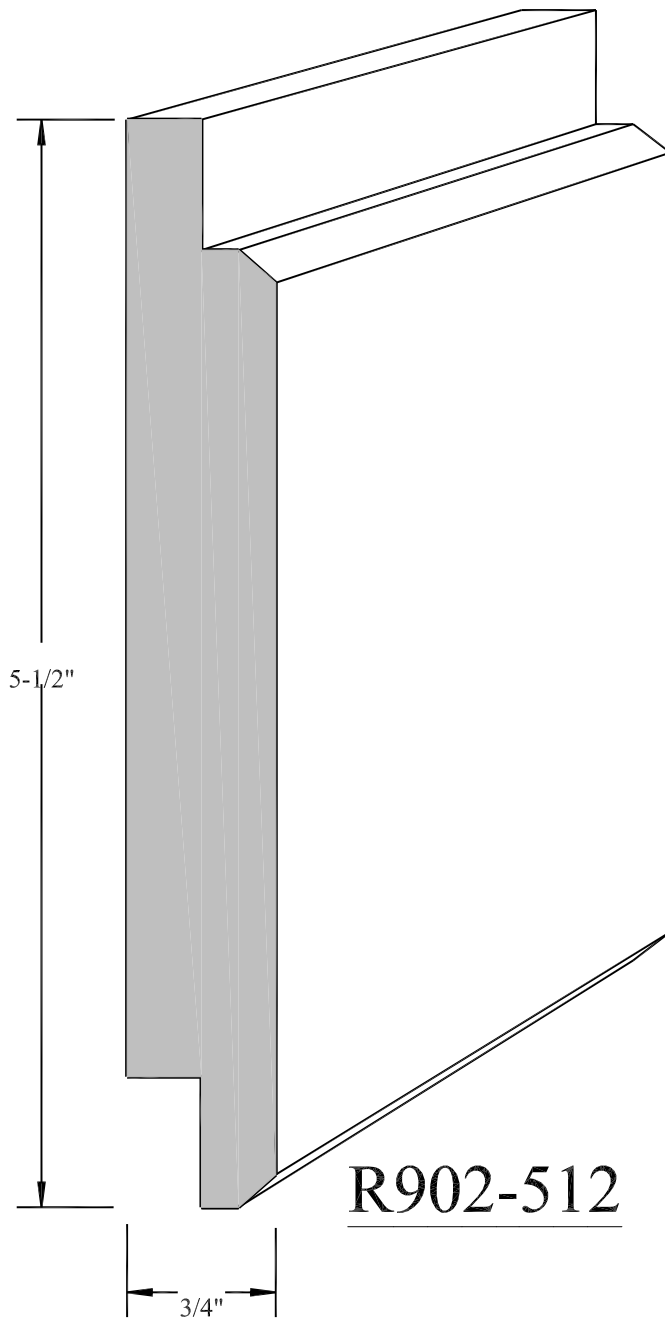



R902-512

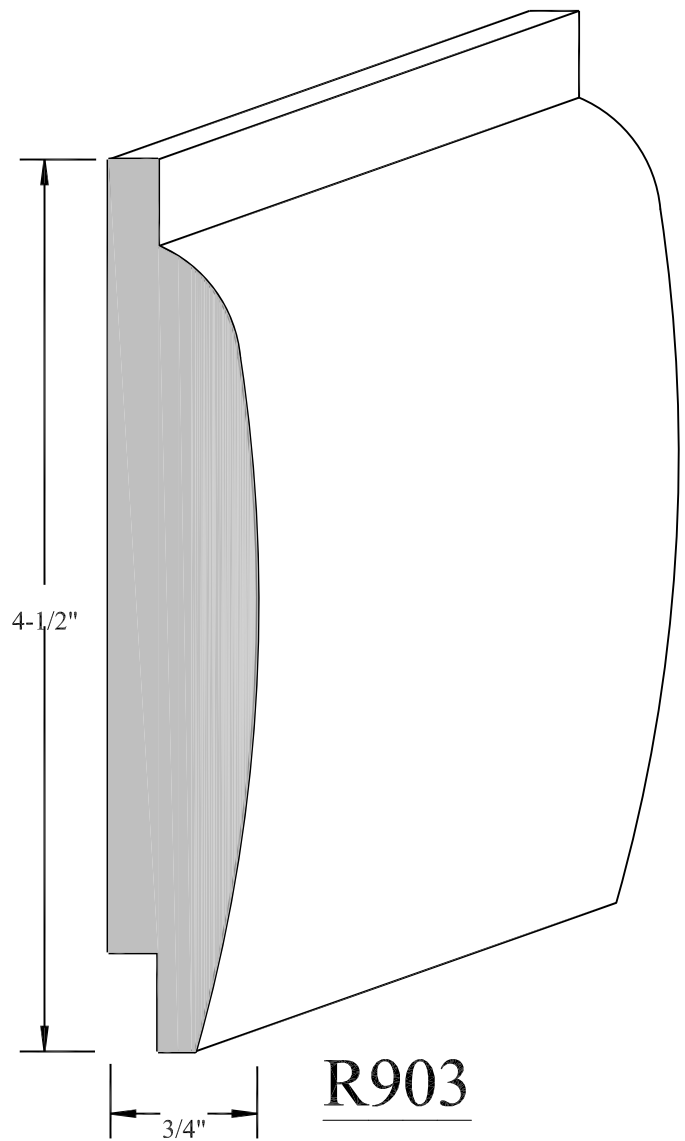

R903



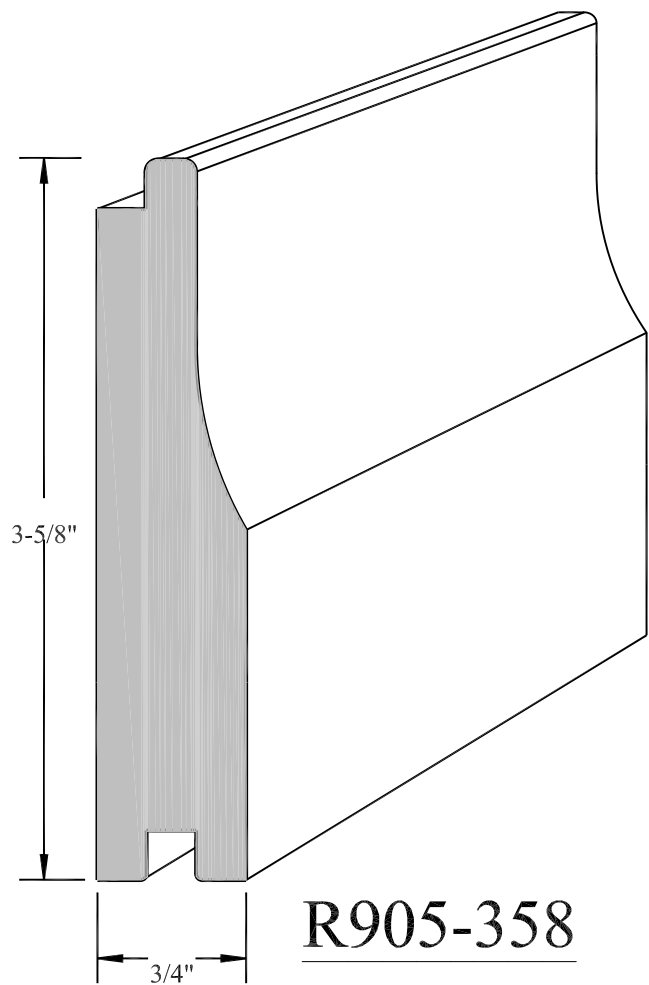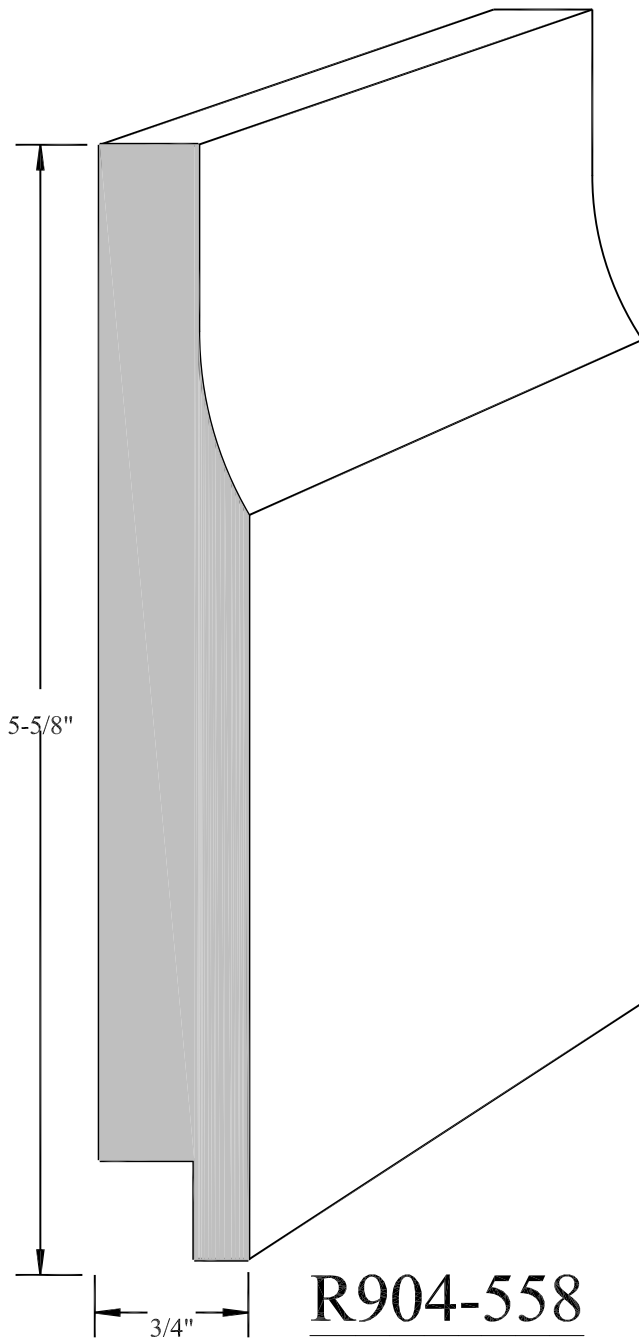

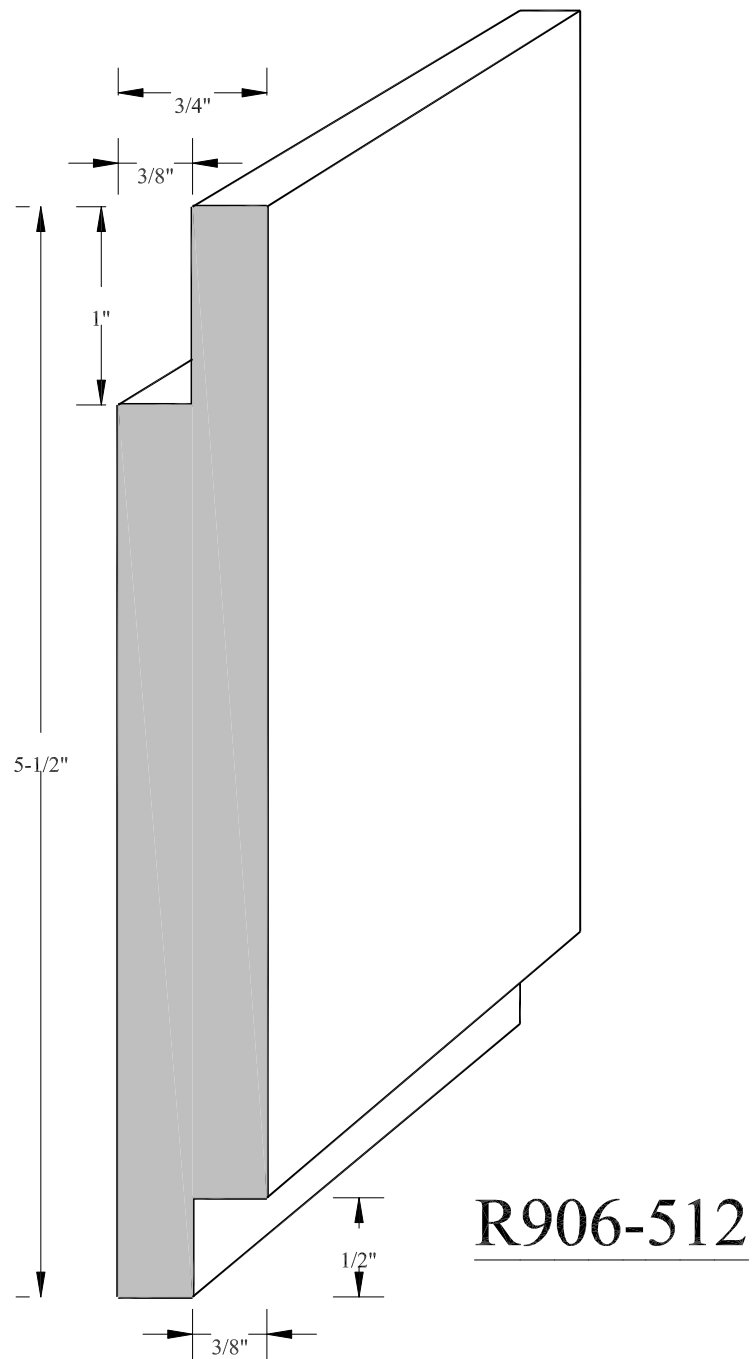

R906-512



